
chanhvinh.com

Vacuum Unit

Ejector System **Vacuum Pump System**

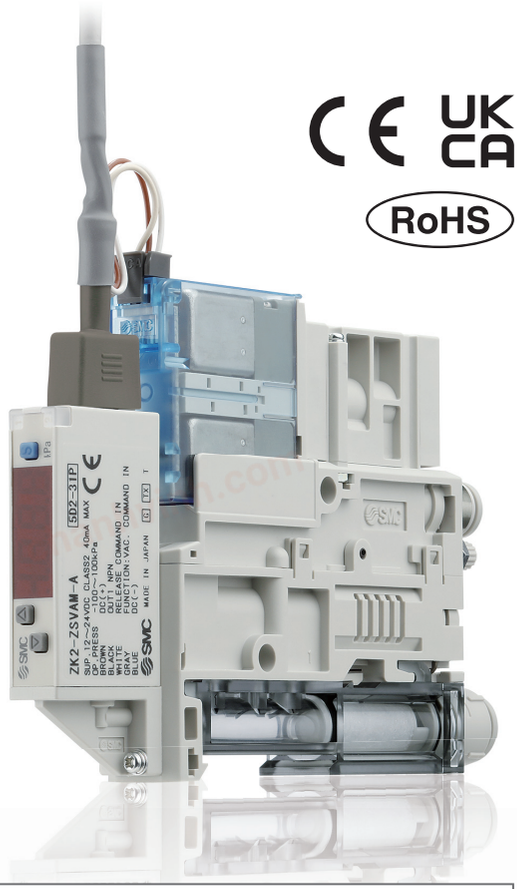

Air supply is cut-off when vacuum is reached.

Energy saving ejector

Air consumption

93 % reduction


Reduced by the pressure switch for vacuum with energy saving function and efficient ejectors

(Under SMC's measurement conditions)


More efficient ejector


Suction flow (Compared to other SMC 1-stage ejectors)


50 % increase

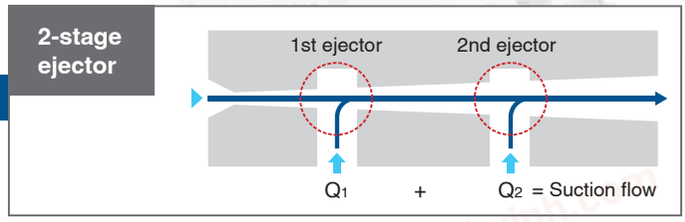


Wiring variations

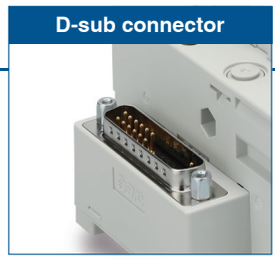


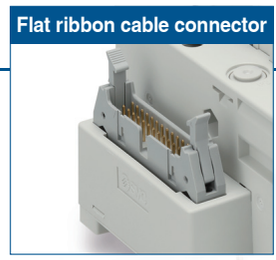

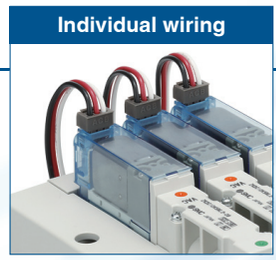

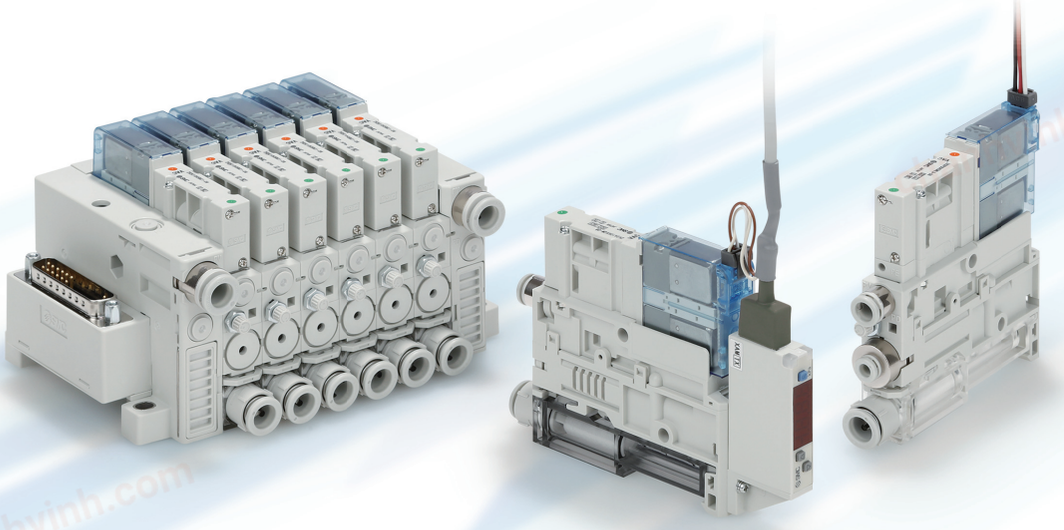

New An air-operated specification has been added.

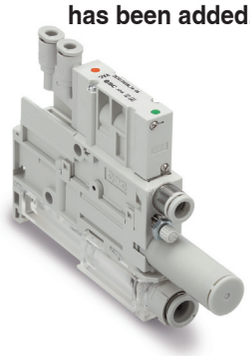


ZK2□A Series

SMC

CAT.EUS100-129B-UK

chanhvinh.com

Energy Saving Ejector

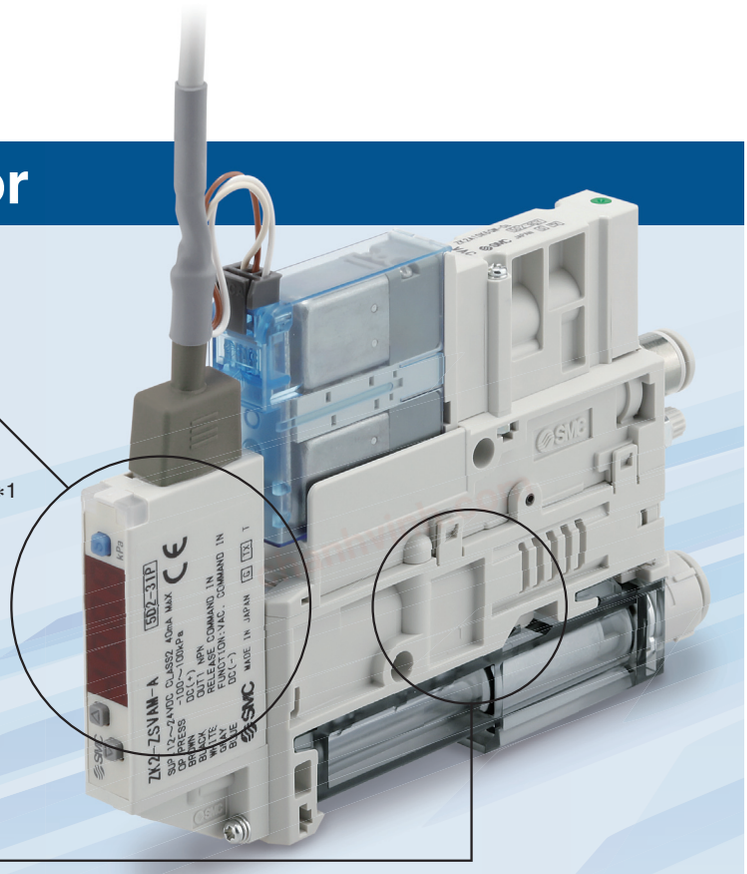

Digital pressure switch with energy saving function

reduces air consumption by 90 %.*1


*1 Under SMC's measurement conditions

While the suction signal is ON, the ON/OFF operation of the supply valve is also performed automatically within the set value.


More efficient ejector

Air consumption 30 % reduction

(Compared to other SMC 1-stage ejectors)

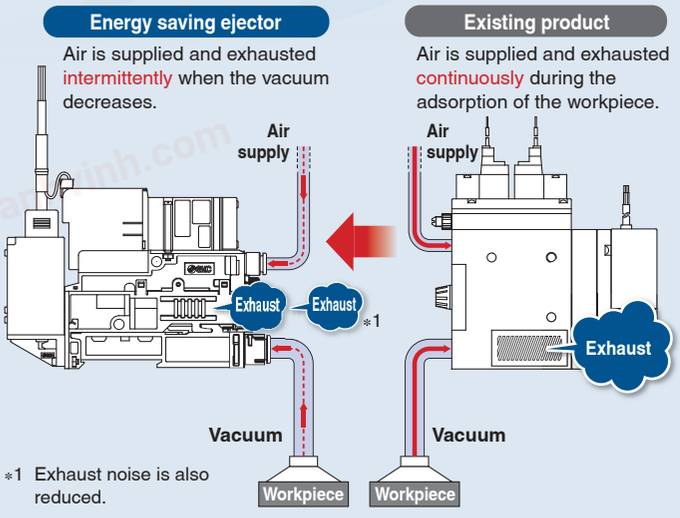

*1 Exhaust noise is also reduced.

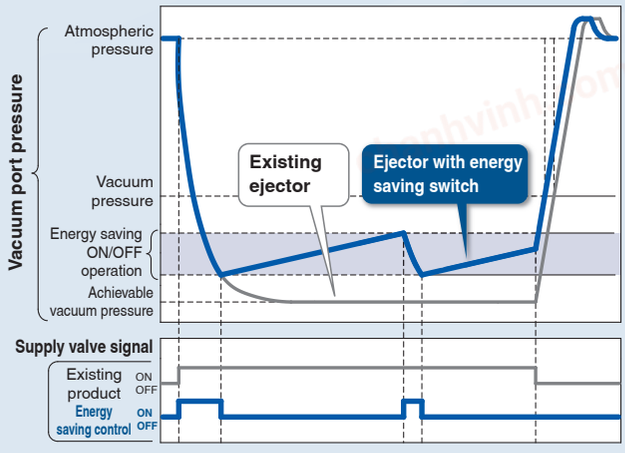

Energy saving efficiency: 93 % reduction

Power consumption cost per year reduced by 109 €/year*1


The energy saving function shortens the exhaust time, which reduces the annual power consumption cost.

	Power consumption cost per year	Annual air consumption	Exhaust time	Air consumption
			With energy saving function	More efficient ejector
ZK2/With energy saving function	**8 €/year**	**638 m³/year**	**0.6 s**	**58 l/min (ANR)**
Existing product	117 €/year	9,350 m³/year	6 s	**85 l/min (ANR)**

*1 **Cost conditions** · Air unit 0.012 €/m³ (ANR), Annual operating cycles: 1100000
(Operating hours: 10 hours/day, Operating days: 250 days/year, 450 cycles/h, when 1 unit is used)

chanhvinh.com

High-noise Reduction Silencer

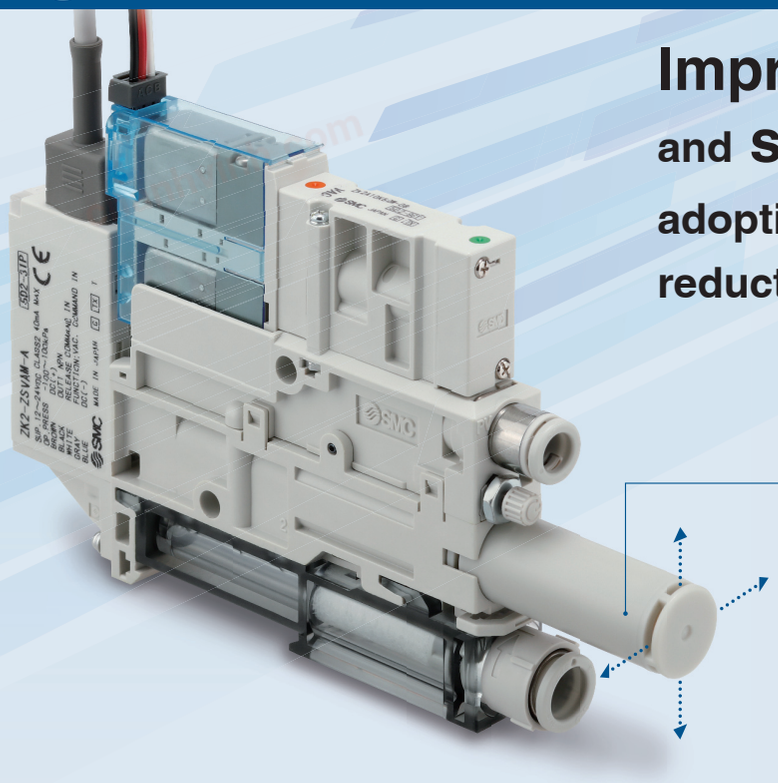

Improved low noise and suction flow by adoption of a high-noise reduction silencer


High-noise reduction silencer

Unpleasant frequencies are removed while maximising vacuum performance by using a dedicated silencer with better silencing effect.

Low noise

46 dB (A)[*1]

*1 Nozzle size: Ø 0.7 (Under SMC's measurement conditions)

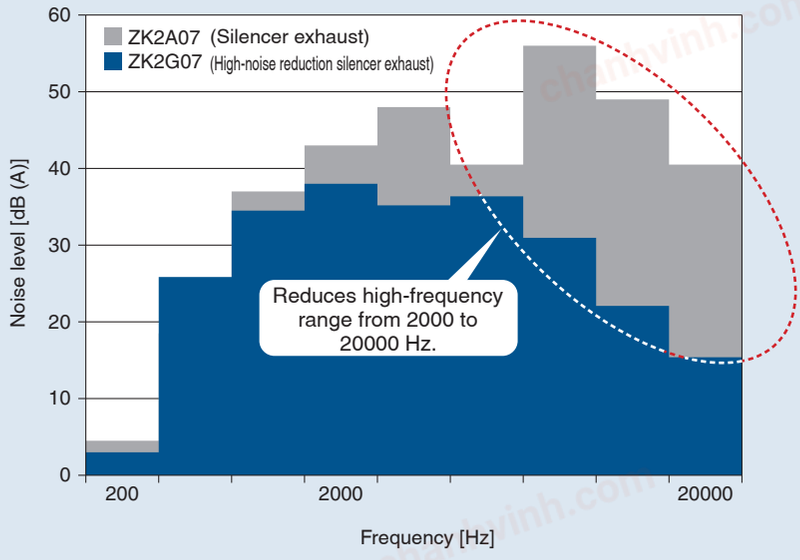

Suction flow

Improved by up to approx. 20 %

Nozzle size	Exhaust type	Max. suction flow [l/min (ANR)]
Ø 1.5	High-noise reduction silencer exhaust	83
	Silencer exhaust	67

chanhvinh.com

All-in-one Piping Wiring Installation time reduced!!

Dual 2-port valve (Supply valve/Release valve)

■ Supply valve: Self-holding*1

Even if there is a power cut, the vacuum is maintained as long as there is supply air.

❶ The vacuum is maintained during power failure as long as air is supplied.
This can prevent the workpiece from being dropped.

❷ The unit turns on by instantaneous energising (minimum 20 ms.). Continuous energising is not necessary.
This can reduce the power consumption.


■ Linked supply and release valves operation*1

The self-holding type supply valve will be turned off by turning on the release valve.
It is not necessary to send a signal to stop the vacuum, which simplifies the wiring and programming.
(Existing double solenoid and latching type require a signal to stop the vacuum.)

■ Power saving pilot valve


Supply and release valve are low-power consumption model. (**0.4 W**)

*1 When the self-holding and release valve linked (valve type R) is selected

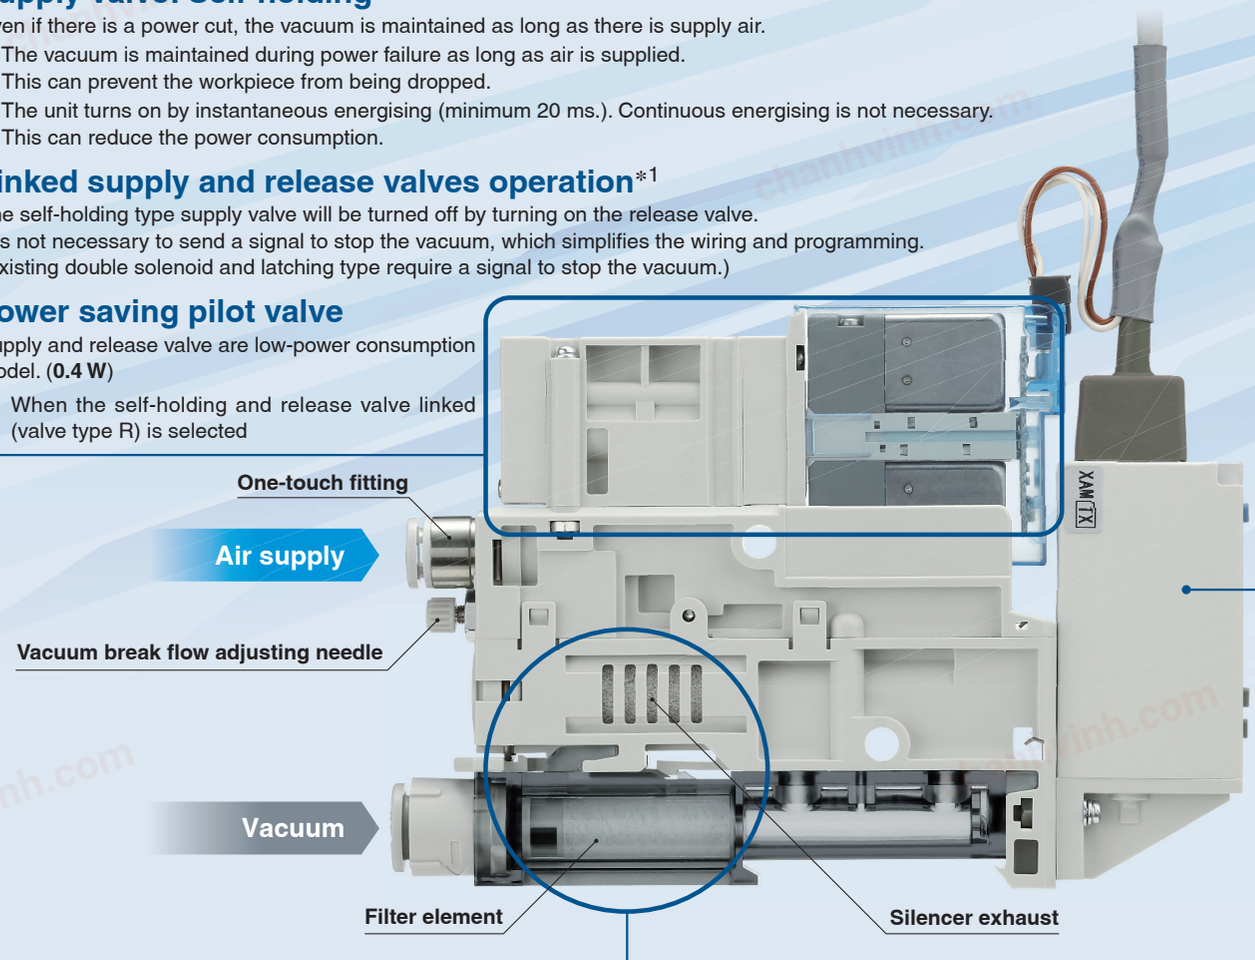


Easier maintenance No tools are required for replacement.

■ Replacement of filter element

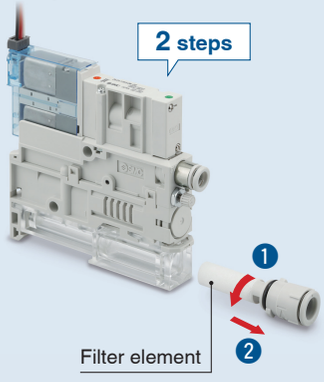


■ Replacement of filter case

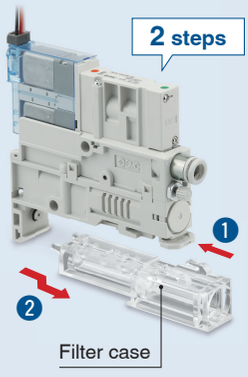

Transparent filter case allows visual check of the contamination.
If there is dirt inside the case, it is possible to remove the case and clean it.


■ Replacement of sound absorbing material

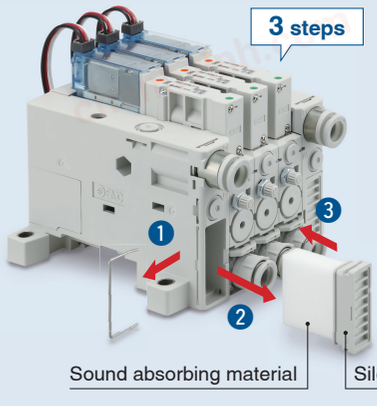


The sound absorbing material can be installed/removed without using screws.

chanhvinh.com


Pressure Sensor/Switch Variations

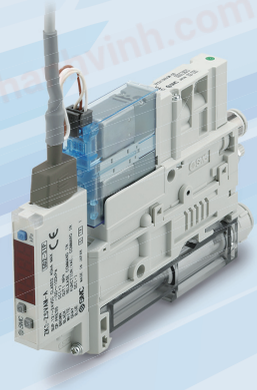

■ Pressure switch for vacuum with energy saving function

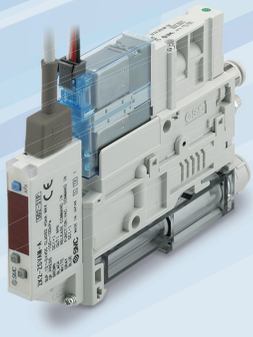

■ Pressure switch for vacuum

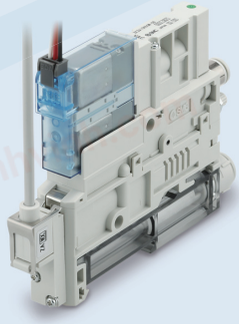

■ Pressure sensor

Pressure switch for vacuum Set value copy function*1


Reduction in setting work/Prevention of mistakes in setting




*1 Copy function is not available for switches with the pressure switch for vacuum with energy saving function.

Mounting (Options)


■ Single unit bracket mounting

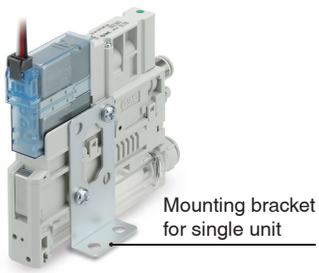

■ Single unit DIN rail mounting

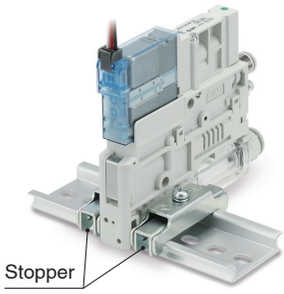

■ Manifold DIN rail mounting

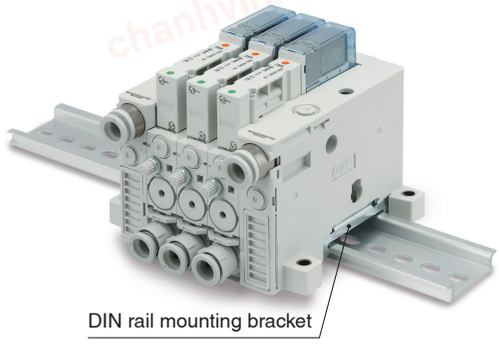


chanhvinh.com

Vacuum Unit Variations

Single Unit Variations

Ejector System

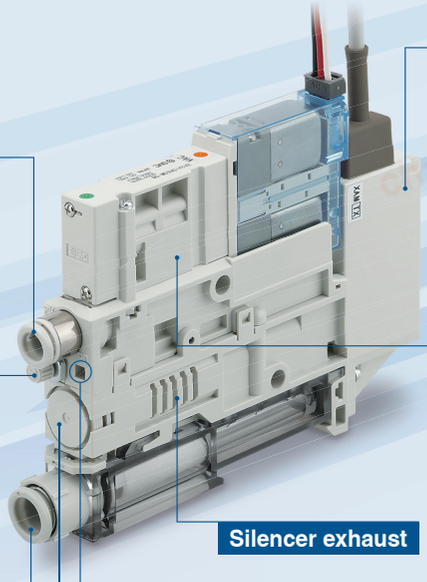


Nozzle size

Ø 0.7, Ø 1.0, Ø 1.2, Ø 1.5

Air pressure supply (PV) port


Ø 6, Ø 1/4" One-touch fittings

Vacuum break flow adjusting needle

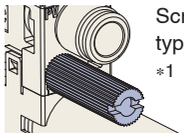

Screwdriver operation type long lock nut*1


*1 Option

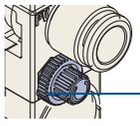

Round lock nut*2

*2 Option

Lock nut

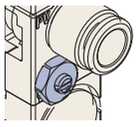

Screwdriver operation type*3

*3 Option

Vacuum (V) port

Ø 6, Ø 8 One-touch fittings

Ø 1/4", Ø 5/16" One-touch fittings

Supply valve/Release valve: Rated voltage

12, 24 VDC

Vacuum switch

- Pressure sensor
- Pressure switch for vacuum
- Pressure switch for vacuum with energy saving function

Without vacuum switch




Combination of supply valve and release valve

Supply valve	Release valve
N.C	N.C
N.C	None
Self-holding release valve linked	N.C
None	None


Silencer exhaust

Exhaust (EXH) port

Port exhaust

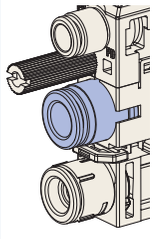


High-noise reduction silencer exhaust

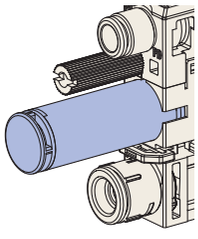


With individual release pressure supply (PD) port*1

*1 Option

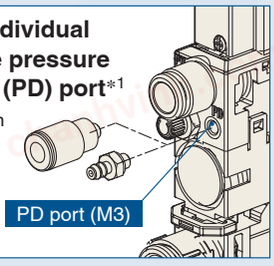

PD port (M3)

Vacuum Pump System

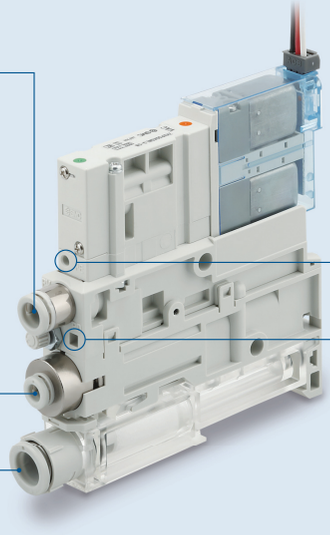

Vacuum pressure supply (PV) port

Ø 6, Ø 1/4" One-touch fittings

Pilot pressure supply (PS) port

Ø 4, Ø 5/16" One-touch fittings

Vacuum (V) port


Ø 6, Ø 8 One-touch fittings

Ø 1/4", Ø 5/16" One-touch fittings

Pilot pressure exhaust female thread specification (PE) port *1

*1 Option

PE port (M3)

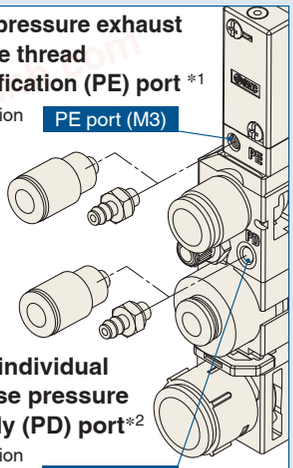

With individual release pressure supply (PD) port*2


*2 Option


PD port (M3)

chanhvinh.com

Manifold Variations

Ejector System

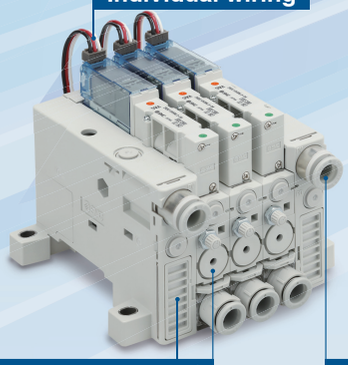


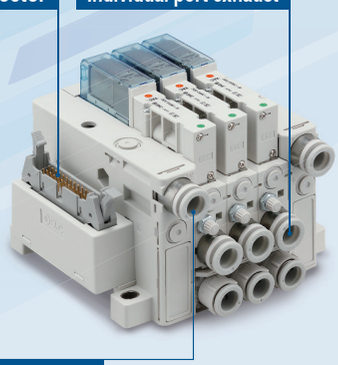


*1 The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.



*2 Option

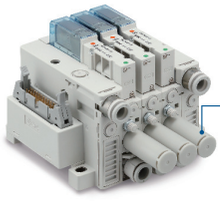

Vacuum Pump System

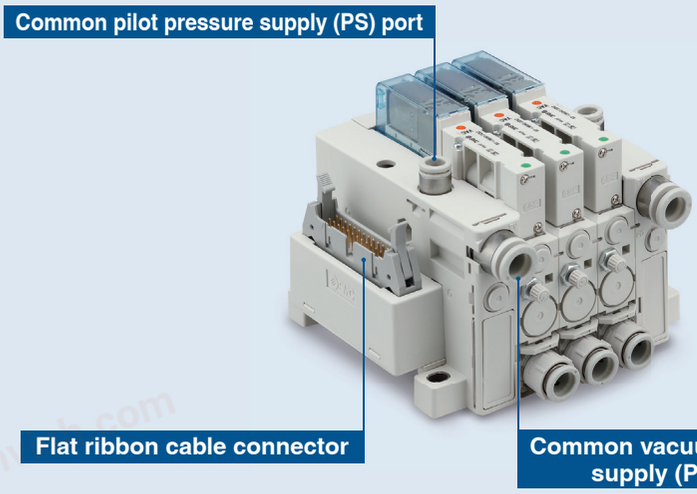

Manifold stations

1 to 10 stations

Wiring type

- D-sub connector
- Flat ribbon cable connector
- Individual wiring

Exhaust type*3

- Complex exhaust*1
- Port exhaust
- High-noise reduction silencer exhaust

*3 When the ejector system is selected

Air pressure supply (PV) port Ø 8, Ø 5/16"

- Common supply
- Individual supply*4

*4 Option

Vacuum pressure (PV) port Ø 8, Ø 5/16"

- Common supply

chanhvinh.com







Model Selection Guide for the Vacuum Unit ZK2□A Series

			Valve			Switch and Sensor		How to order
			Supply valve	Release valve	Without	Without energy saving function Pressure sensor/Pressure switch for vacuum	With energy saving function Pressure switch for vacuum	
Ejector System	Single Unit	With valve Pressure switch for vacuum	●	●	—	●	—	p. 9
			●	—	—	●	—	
			●	●	—	—	—	
			●	—	—	—	—	
		With valve Pressure switch for vacuum with energy saving function	●	●	—	—	●	p. 10
		Without valve	—	—	●	●	—	p. 13
			—	—	●	—	—	
	For Manifold	With valve Pressure switch for vacuum	●	●	—	●	—	p. 11
			●	—	—	●	—	
			●	●	—	—	—	
			●	—	—	—	—	
		With valve Pressure switch for vacuum with energy saving function	●	●	—	—	●	p. 12
		Without valve Pressure switch for vacuum	—	—	●	●	—	p. 13
			—	—	●	—	—	
	Manifold	Manifold	—	—	—	—	—	p. 14
Vacuum Pump System	Single Unit	With valve Pressure sensor	●	●	—	●	—	p. 15
			●	—	—	●	—	
			●	●	—	—	—	
			●	—	—	—	—	
	For Manifold	With valve Pressure sensor	●	●	—	●	—	p. 16
			●	—	—	●	—	
			●	●	—	—	—	
			●	—	—	—	—	
	Manifold	Manifold	—	—	—	—	—	p. 17

chanhvinh.com

Vacuum Unit Model Selection Guide for the Vacuum Unit *ZK2□A Series*

Air Operated Specification

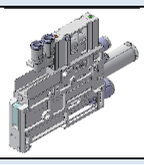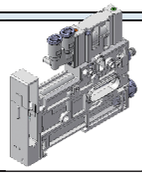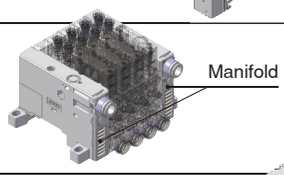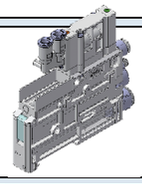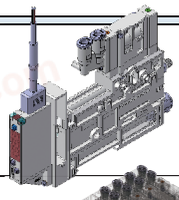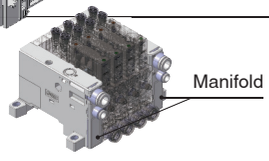
			Supply valve	Release valve	Switch and Sensor (Without energy saving function)	How to order
Ejector System	Single Unit		●	●	●	p. 43-1
			●	●	—	
	For Manifold		●	●	●	p. 43-2
			●	●	—	
	Manifold		—	—	—	
Vacuum Pump System	Single Unit		●	●	●	p. 43-3
			●	●	—	
	For Manifold		●	●	●	p. 43-4
			●	●	—	
	Manifold		—	—	—	

chanhvinh.com
chanhvinh.com
chanhvinh.com
chanhvinh.com
chanhvinh.com
chanhvinh.com

chanhvinh.com

CONTENTS

Vacuum Unit *ZK2□A Series*

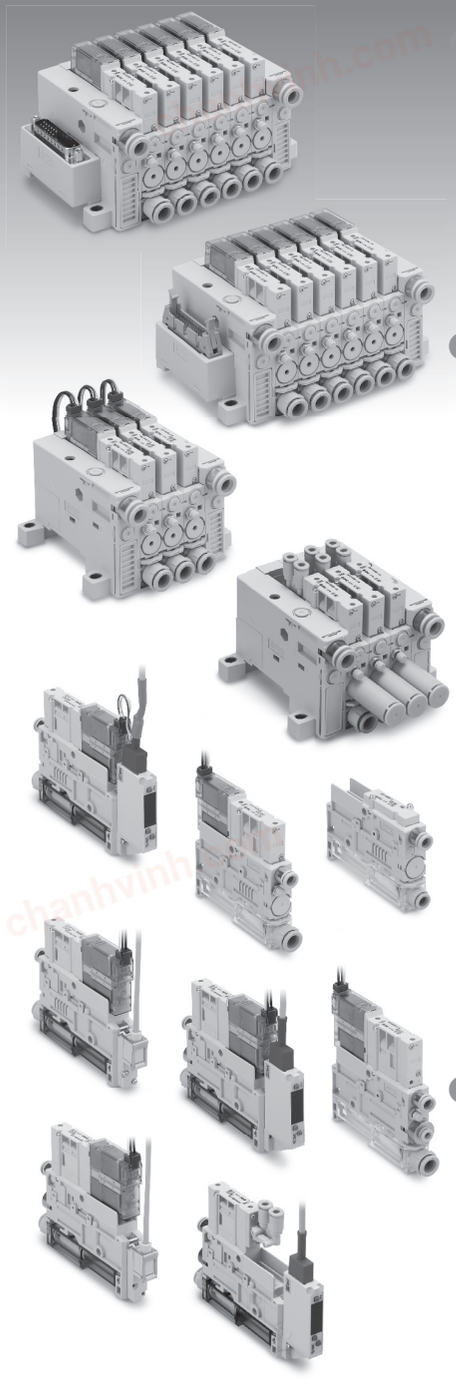

Ejector System

Single Unit Ejector + With Valve + Without Energy Saving Function ····· p. 9
Single Unit Ejector + With Valve + With Energy Saving Function ····· p. 10
For Manifold Ejector + With Valve + Without Energy Saving Function ····· p. 11
For Manifold Ejector + With Valve + With Energy Saving Function ····· p. 12
Single Unit For Manifold Ejector + Without Valve + Without Energy Saving Function ····· p. 13
Manifold ····· p. 14

Vacuum Pump System

Single Unit Vacuum Pump System + With Valve + Without Energy Saving Function ··· p. 15
For Manifold Vacuum Pump System + With Valve + Without Energy Saving Function ··· p. 16
Manifold ····· p. 17

Specifications, Weight ····· p. 18
Ejector Exhaust Characteristics/Flow Rate Characteristics ····· p. 19
Vacuum Pump System Flow Rate Characteristics, Vacuum Release Flow Rate Characteristics, How to Read the Flow Rate Characteristics Graph ··· p. 21
Pressure Sensor/Pressure Switch for Vacuum Specifications, Description (Pressure Switch for Vacuum) ··· p. 22
Pressure Switch for Vacuum with Energy Saving Function Specifications, Internal Circuit and Wiring Example ··· p. 23
Port Layout
- Standard Products ····· p. 24
- Option **-D** ····· p. 26
- Option **-L** ····· p. 29

Construction ····· p. 31
Replacement Parts for Single Unit / How to Order ····· p. 32
Exploded View of Manifold ····· p. 33
Dimensions ····· p. 35
Electrical Wiring Specifications, Optional Specifications/Functions/Applications ····· p. 42

Air Operated Specification

Single Unit Ejector System ····· p. 43-1
For Manifold Ejector System ····· p. 43-2

Single Unit Vacuum Pump System ····· p. 43-3
For Manifold Vacuum Pump System ····· p. 43-4

Specifications, Weight ····· p. 43-5
Port Layout
- Standard Products ····· p. 43-6
- Option **-D** ····· p. 43-8
- Option **-M** ····· p. 43-10

Construction ····· p. 43-12
Replacement Parts for Single Unit / How to Order ····· p. 43-12
Exploded View of Manifold ····· p. 43-13
Dimensions ····· p. 43-14

Specific Product Precautions ····· p. 44
Quality of Supply Air ····· p. 51

chanhvinh.com

Ejector System **Vacuum Unit**

ZK2□A Series

CE UKCA RoHS

Single Unit Ejector + **With** Valve + **Without** Energy Saving Function

Refer to pages 24, 25, 27, and 28 for the port layouts (including circuit examples) and pages 35 to 37 for the dimensions.


How to Order

ZK2 **A** **10** **K** **5** **D** **L** A – **08** – **□**

❶ ❷ ❸ ❹ ❺ ❻ ❼ ❽

❶ Body/Exhaust type

Symbol	Body	Exhaust type
A	Single unit	Silencer exhaust*1
B		Port exhaust
G		High-noise reduction silencer exhaust

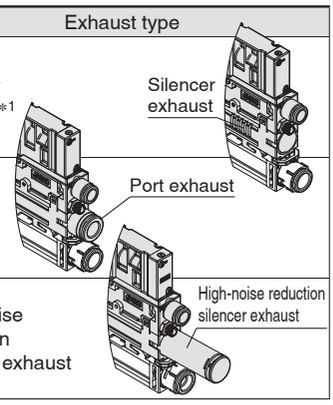

*1 With exhaust port when ❷ is 12 or 15

❷ Nominal nozzle size

Symbol	Nominal nozzle size
07	Ø 0.7
10	Ø 1.0
12	Ø 1.2
15	Ø 1.5

* Refer to page 18 for the standard supply pressure per nozzle diameter.

❸ Combination of supply valve and release valve

Symbol	Supply valve		Release valve
	N.C.	Self-holding	N.C.
K	●	—	●
J	●	—	—
R	—	●*2	●

*2 Supply valve maintains vacuum by energisation (20 ms or more). Stopping the vacuum turns on the release valve.

❹ Rated voltage (Supply valve/Release valve)

Symbol	Voltage
5	24 VDC
6	12 VDC

❺ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications		
			NPN	PNP	With unit selection function*3
			2 outputs		
A	Pressure switch for vacuum	-101 to 0	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	-101 to 0	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				

*3 The unit for the type without the unit selection function is fixed as kPa.

❻ Connector (Supply valve/Release valve/Pressure switch for vacuum)

Symbol	For supply valve/ release valve: 300 mm (Connector assembly)*4	For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
L	●	●		Cannot be selected when ❺ is N
L1	None	●		
L2	●	None		Cannot be selected when ❺ is P or T
L3	None	None		


*4 For the connector length other than 300 mm, order the connector assembly on page 32 separately.

❼ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❽ Option*5 (For details on the Function/Application, refer to page 42.)

Symbol	Type		Note
—	Without option		—
B	Mounting bracket for single unit (nuts and bolts are included)		—
D	With individual release pressure supply (PD) port (M3)*6		Cannot be selected when ❸ is J
E	Vacuum break flow adjusting needle	Screwdriver operation type long lock nut	Cannot be selected when ❸ is J Can be selected only for the combination of J and K
J		Round lock nut	
K		Screwdriver operation type	
W	With exhaust interference prevention valve		When J is selected for ❽, install the release valve or vacuum breaker in the middle of the vacuum piping.

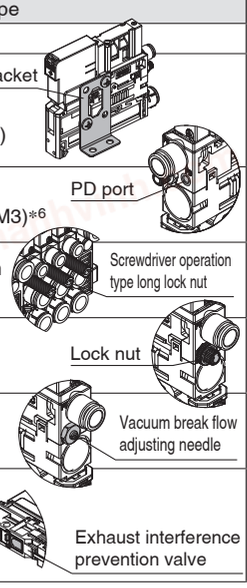

*5 When more than one option is selected, list the option symbols in alphabetical order. (Example -BJ)

*6 Use a One-touch fitting or barb fitting (M-3AU-4) for piping. (O.D.: Within Ø 6.2)

chanhvinh.com

Ejector System **Vacuum Unit**

ZK2□A Series

CE UK CA RoHS

Single Unit Ejector + With Valve + With Energy Saving Function

Refer to page 25 for the port layout (including a circuit example) and page 38 for the dimensions.


How to Order

ZK2 **A** **10** **K** **5** **S** **W** **A** – **08** – **□**

❶ ❷ ❸ ❹ ❺ ❻ ❼ ❽

❶ Body/Exhaust type

Symbol	Body	Exhaust type
A	Single unit	Silencer exhaust*1 / Silencer exhaust
B		Port exhaust / Port exhaust
G		High-noise reduction silencer exhaust / High-noise reduction silencer exhaust

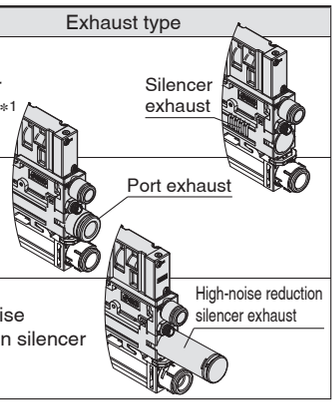

*1 With exhaust port when ❷ is 12 or 15

❷ Nominal nozzle size

Symbol	Nominal nozzle size
07	Ø 0.7
10	Ø 1.0
12	Ø 1.2
15	Ø 1.5

* Refer to page 18 for the standard supply pressure per nozzle diameter.

❸ Combination of supply valve and release valve

Symbol	Supply valve	Release valve
	N.C.	N.C.
K	●	●

❹ Rated voltage (Supply valve/Release valve)

Symbol	Voltage
5	24 VDC
6	12 VDC

❺ Pressure switch for vacuum with energy saving function

Symbol	Pressure range [kPa]	Specifications		
		NPN	PNP	With unit selection function*2
		1 output		
K	-100 to 100	●	—	●
Q		●	—	None (SI unit only)
R		—	●	●
S		—	●	None (SI unit only)

*2. The unit for the type without the unit selection function is fixed as kPa.

❻ Connector


Symbol	For pressure switch for vacuum with energy saving function: 2 m (Lead wire with connector)
W	●
L3	None

❼ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❽ Option*3 (For details on the Function/Application, refer to page 42.)

Symbol	Type	Note
—	Without option	—
B	Mounting bracket for single unit (nuts and bolts are included)	—
D	With individual release pressure supply (PD) port (M3)*4	—
E	Vacuum break flow adjusting needle: Screwdriver operation type long lock nut	Can be selected only for the combination of J and K
J	Vacuum break flow adjusting needle: Round lock nut	
K	Vacuum break flow adjusting needle: Screwdriver operation type	

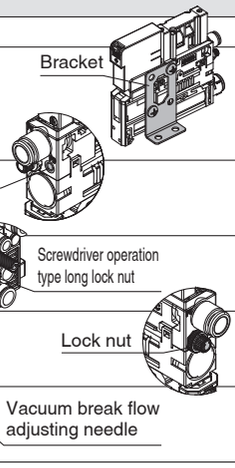

*3 When more than one option is selected, list the option symbols in alphabetical order. (Example -BJ)
*4 Use a One-touch fitting or barb fitting (M-3AU-4) for piping. (O.D.: Within Ø 6.2)

chanhvinh.com

Ejector System Vacuum Unit

ZK2□A Series

CE UK CA RoHS

For Manifold Ejector + With Valve + Without Energy Saving Function

Refer to page 14 for How to Order Manifold, pages 25, 2 6 , 2 8 , and 2 9 for the port layouts (including circuit examples), and pages 39 to 41 for the dimensions.


How to Order

ZK2 C 12 K 5 D L A – 08 – □

❶ ❷ ❸ ❹ ❺ ❻ ❼ ❽

❶ Body/Exhaust type

Symbol	Body	Exhaust type
C	For Manifold	Complex exhaust*1 (Direct exhaust, End plate exhaust)
F		Individual port exhaust (Individual port exhaust)
H		High-noise reduction silencer exhaust (High-noise reduction silencer exhaust)

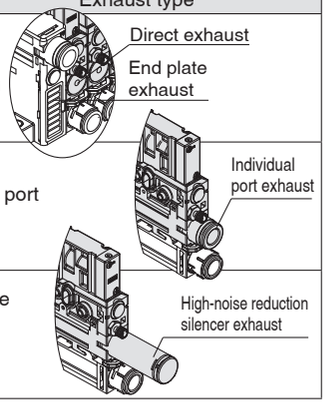

*1 Combination of direct exhaust and end plate exhaust from each station

❷ Nominal nozzle size

Symbol	Nominal nozzle size
07	Ø 0.7
10	Ø 1.0
12	Ø 1.2
15	Ø 1.5

* Refer to page 18 for the standard supply pressure per nozzle diameter.

❸ Combination of supply valve and release valve

Symbol	Supply valve		Release valve
	N.C.	Self-holding	N.C.
K	●	—	●
J	●	—	—
R	—	●*2	●

*2 Supply valve maintains vacuum by energisation (20 ms or more). Stopping the vacuum turns on the release valve.

❹ Rated voltage (Supply valve/Release valve)

Symbol	Voltage
5	24 VDC
6	12 VDC

❺ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications		
			NPN	PNP	With unit selection function*3
			2 outputs		
A	Pressure switch for vacuum	-101 to 0	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	-101 to 0	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				

*3 The unit for the type without the unit selection function is fixed as kPa.

❻ Connector (Supply valve/Release valve/Pressure switch for vacuum)

Symbol	For supply valve/release valve		For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
	Centralised wiring specification (Plug-in)	Individual wiring specification: 300 mm (Connector assembly)*4			
C	●	None	●		Cannot be selected when ❺ is N
C1	●	None	None		Cannot be selected when ❺ is P or T
L	None	●	●		Cannot be selected when ❺ is N
L1	None	None	●		
L2	None	●	None		Cannot be selected when ❺ is P or T
L3	None	None	None		


*4 For the connector length other than 300 mm, order the connector assembly on page 32 separately.

❼ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❽ Option*5 (For details on the Function/Application, refer to page 42.)

Symbol	Type	Note
—	Without option	—
E	Vacuum break flow adjusting needle: Screwdriver operation type long lock nut	Cannot be selected when ❸ is J. Can be selected only for the combination of J and K
J	Vacuum break flow adjusting needle: Round lock nut (Lock nut)	
K	Vacuum break flow adjusting needle: Screwdriver operation type (Vacuum break flow adjusting needle)	
L	Manifold individual supply specification*6 (Individual supply port)	—
P	With manifold common release pressure supply (PD) port	Cannot be selected when ❸ is J
W	With exhaust interference prevention valve (Exhaust interference prevention valve)	When J is selected for ❸, install the release valve or vacuum breaker in the middle of the vacuum piping.

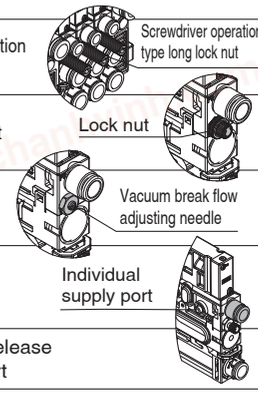

*5 When more than one option is selected, list the option symbols in alphabetical order. (Example -EL)

*6 When F or H is selected for ❶ and L is selected for the option, the space for adjusting the needle is reduced. Products which can be operated more easily can be specified by option E or K.

chanhvinh.com

Ejector System Vacuum Unit

ZK2□A Series

CE UK CA RoHS

For Manifold Ejector + With Valve + With Energy Saving Function

Refer to page 14 for How to Order Manifold.


How to Order

ZK2 C 12 K 5 S W A – 08 – □

❶ ❷ ❸ ❹ ❺ ❻ ❼ ❽

❶ Body/Exhaust type

Symbol	Body	Exhaust type
C	For Manifold	Complex exhaust*1 (Direct exhaust, End plate exhaust)
F	For Manifold	Individual port exhaust (Individual port exhaust)
H	For Manifold	High-noise reduction silencer exhaust (High-noise reduction silencer exhaust)

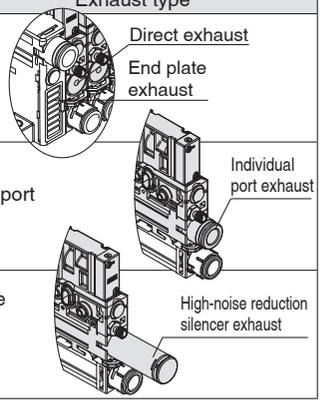

*1 Combination of direct exhaust and end plate exhaust from each station

❷ Nominal nozzle size

Symbol	Nominal nozzle size
07	Ø 0.7
10	Ø 1.0
12	Ø 1.2
15	Ø 1.5

* Refer to page 18 for the standard supply pressure per nozzle diameter.

❸ Combination of supply valve and release valve

Symbol	Supply valve	Release valve
	N.C.	N.C.
K	●	●

❹ Rated voltage (Supply valve/Release valve)

Symbol	Voltage
5	24 VDC
6	12 VDC

❺ Pressure switch for vacuum with energy saving function

Symbol	Pressure range [kPa]	Specifications		
		NPN	PNP	With unit selection function*2
		1 output		
K	-100 to 100	●	—	●
Q	-100 to 100	●	—	None (SI unit only)
R	-100 to 100	—	●	●
S	-100 to 100	—	●	None (SI unit only)

*2 The unit for the type without the unit selection function is fixed as kPa.

❻ Connector


Symbol	For pressure switch for vacuum with energy saving function: 2 m (Lead wire with connector)
W	●
L3	None

❼ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❽ Option*3 (For details on the Function/Application, refer to page 42.)

Symbol	Type	Note
—	Without option	—
E	Vacuum break flow adjusting needle: Screwdriver operation type long lock nut	Can be selected only for the combination of J and K
J	Vacuum break flow adjusting needle: Round lock nut	
K	Vacuum break flow adjusting needle: Screwdriver operation type	
L	Manifold individual supply specification*4	—
P	With manifold common release pressure supply (PD) port	Cannot be selected when ❸ is J

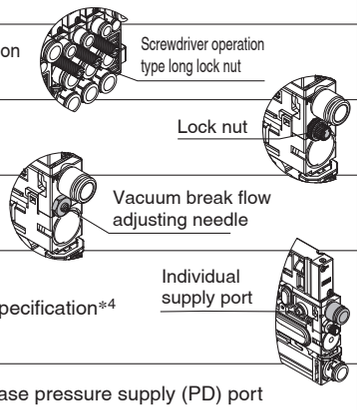

*3 When more than one option is selected, list the option symbols in alphabetical order. (Example -EL)
*4 When F or H is selected for ❶ and L is selected for the option, the space for adjusting the needle is reduced. Products which can be operated more easily can be specified by option E or K.

chanhvinh.com

Ejector System **Vacuum Unit**

ZK2□A Series

Single Unit | For Manifold **Ejector +** Without **Valve +** Without **Energy Saving Function**

Refer to page 14 for How to Order Manifold.


How to Order

ZK2 **A** **10** N 0 **N** **N** A – **08** – **□**

❶ ❷ ❸ ❹ ❺ ❻

❶ Body/Exhaust type

Symbol	Body	Exhaust type
A	Single unit	Silencer exhaust*1
B		Port exhaust
G		High-noise reduction silencer exhaust
C	For Manifold	Complex exhaust*2
F		Individual port exhaust
H		High-noise reduction silencer exhaust

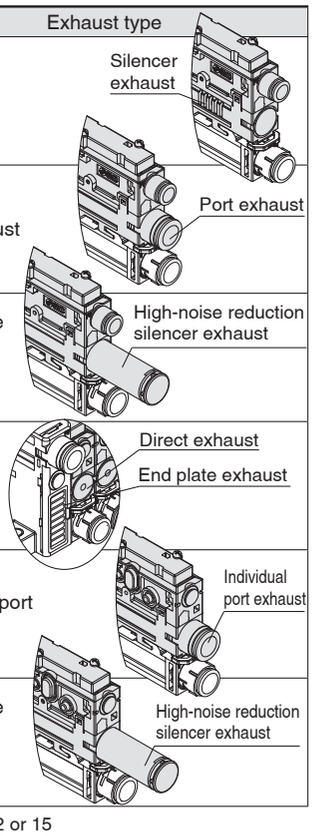

*1 With exhaust port when ❷ is 12 or 15
*2 Combination of direct exhaust and end plate exhaust from each station

❷ Nominal nozzle size

Symbol	Nominal nozzle size
07	Ø 0.7
10	Ø 1.0
12	Ø 1.2
15	Ø 1.5

* Refer to page 1 8 for the standard supply pressure per nozzle diameter.

❹ Connector

Symbol	For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
Y	●		Cannot be selected when ❸ is N
Y1	None		Cannot be selected when ❸ is P, T, or N
N	None		When "N" is selected for ❸

❸ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications: NPN (2 outputs)	Specifications: PNP (2 outputs)	Specifications: With unit selection function*3
A	Pressure switch for vacuum	-101 to 0	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	-101 to 0	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				


*3 The unit for the type without the unit selection function is fixed as kPa.

❺ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❻ Option*4 (For details on the Function/Application, refer to page 42.)

Symbol	Type	Note
—	Without option	—
B	Mounting bracket for single unit (nuts and bolts are included)	Cannot be selected when ❶ is C, F, or H
L	Manifold individual supply specification*5	Cannot be selected when ❶ is A, B, or G
W	With exhaust interference prevention valve	Install the release valve or vacuum breaker in the middle of the vacuum piping.

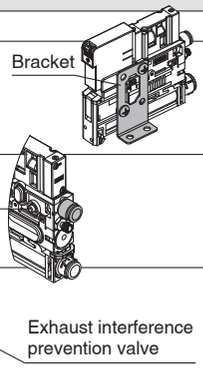

*4 When more than one option is selected, list the option symbols in alphabetical order. (Example -BW)
*5 When F or H is selected for ❶ and L is selected for the option, the space for adjusting the needle is reduced. Products which can be operated more easily can be specified by option E or K.

chanhvinh.com

Ejector System **Vacuum Unit**

ZK2□A Series

Manifold

Refer to pages 11 to 13 for the ejector installed to the manifold.

How to Order Manifold

ZZK2 [04] A− [A] [1] [L] − [ ]

❶ ❷ ❸ ❹ ❺

If the manifold parts (set of end plates for both ends and tension bolts) are shipped unassembled, please refer to page 33.

❶ Stations



Symbol	Stations
01	1 station
02	2 stations
⋮	⋮
10	10 stations

∗ For adequate performance, the number of stations that can be operated simultaneously depends on the nozzle diameter. Refer to the Max. Number of Manifold Stations that can be Operated Simultaneously in page 18.

❷ System/Port

Symbol	System	Port
A	Ejector system	O 8 (Common PV)
AN		O 5/16" (Common PV)

❸ Exhaust

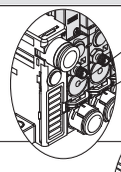Symbol	Exhaust	Selectable single unit number
1	Complex exhaust∗1	ZK2C  Direct exhaust, End plate exhaust
2	Individual exhaust	ZK2F, ZK2H  Individual port exhaust


∗1 Combination of direct exhaust and end plate exhaust from each station

❹ Supply valve and release valve wiring∗2

Symbol	Wiring	Selectable wiring for manifold (Refer to ❻ on pages 11 and 12, and ❹ on page 13.)									
		C	C1	L	L1	L2	L3	W	Y	Y1	N
L	Individual wiring	—	—	●	●	●	●	●	—	—	—
F	D-sub connector	●	●	—	—	—	—	—	—	—	—
P	Flat ribbon cable connector	●	●	—	—	—	—	—	—	—	—
N	No wiring (No valve)	—	—	—	—	—	—	—	●	●	●

∗2 Common wiring F/P is available only for solenoid valve wiring. Individual wiring is specified for vacuum switches and sensors.


❺ Option∗3 (For details on the Function/Application, refer to page 42.)

Symbol	Type	Selectable option for manifold (Refer to ❽ on pages 11 and 12, and ❻ on page 13.)						Note
		E	J	K	L	P	W	
—	Without option	●	●	●	—	—	●	—
B	With DIN rail mounting bracket∗4	●	●	●	—	—	●	—
D	With common release pressure supply (PD) port	●	●	●	—	◎∗5	●	Cannot be selected when ❶ is N
L	Manifold individual supply specification  Individual supply port	●	●	●	◎∗5	—	●	—

∗3 When more than one option is selected, list the option symbols in alphabetical order. (Example -BD)
∗4 The DIN rail should be ordered separately. (Refer to page 33.)
∗5 When the option D is selected, select P for single unit for manifold. When the option L is selected, select L for single unit for manifold. (◎ must be selected.)

How to Order Valve Manifold Assembly

Example

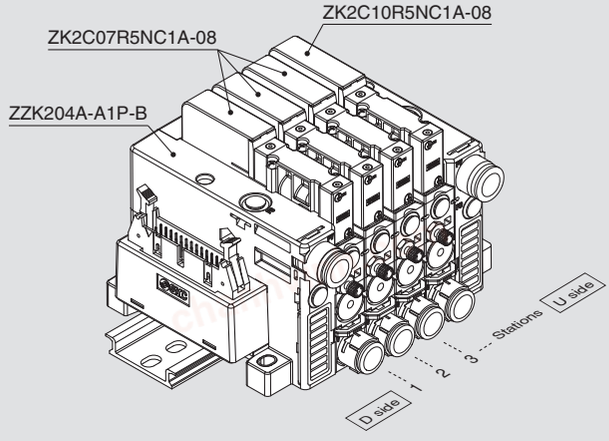

ZZK204A-A1P-B ····· 1 set (Manifold part number)
∗ ZK2C07R5NC1A-08 ····· 3 sets
∗ ZK2C10R5NC1A-08 ····· 1 set
∗ The asterisk denotes the symbol for the assembly.
∗ Prefix to the single unit part number.

- When the manifold is viewed from V port, the first station starts from the left (D side).
- After the manifold part number, specify the installed single unit from the first station.
- Complex exhaust and individual port exhaust cannot be mixed in the ejector system manifold.
- The DIN rail should be ordered separately. (Refer to page 33.)

chanhvinh.com

Vacuum Pump System

Vacuum Unit

ZK2□A Series

Single Unit Vacuum Pump System + With Valve + Without Energy Saving Function

How to Order

ZK2P00 K 5 D L A – 08 – □

❶ ❷ ❸ ❹ ❺ ❻

❶ Combination of supply valve and release valve

Symbol	Supply valve		Release valve
	N.C.	Self-holding	N.C.
K	●	—	●
J	●*1	—	—
R	—	●*2	●

*1 Install the release valve or vacuum breaker in the middle of the vacuum piping.
*2 Supply valve maintains vacuum by energisation (20 ms or more). Stopping the vacuum turns on the release valve.
Refer to the precaution on page 44.

❷ Rated voltage (Supply valve/Release valve)

Symbol	Voltage
5	24 VDC
6	12 VDC

❸ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications		
			NPN	PNP	With unit selection function*3
			2 outputs		
A	Pressure switch for vacuum	-101 to 0	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	-101 to 0	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				

*3 The unit selection function is not available in Japan due to the New Measurement Law. The unit for the type without the unit selection function is fixed as kPa.

❹ Connector (Supply valve/Release valve/Pressure switch for vacuum)







Symbol	For supply valve/release valve: 300 mm (Connector assembly)*4	For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
L	●	●		Cannot be selected when ❸ is N
L1	None	●		
L2	●	None		Cannot be selected when ❸ is P or T
L3	None	None		

*4 For the connector length other than 3 0 0 mm, order the connector assembly on page 32 separately.

❺ Vacuum (V) port

Symbol	Vacuum (V) port
06	ϕ 6
08	ϕ 8
07	ϕ 1/4"
09	ϕ 5/16"

❻ Option*5 (For details on the Function/Application, refer to page 42.)

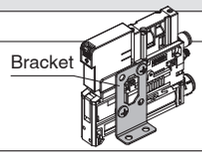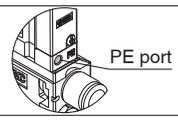Symbol	Type	Note
—	Without option	—
B	Mounting bracket for single unit (nuts and bolts are included) 	—
C	Vacuum pump system PE port female thread specification (M3) 	When R is selected for ❶, D needs to be selected.
D	With individual release pressure supply (PD) port (M3)*6 	Cannot be selected when ❶ is J
E	Vacuum break flow adjusting needle: Screwdriver operation type long lock nut 	Cannot be selected when ❶ is J Can be selected only for the combination of J and K
J	Vacuum break flow adjusting needle: Round lock nut 	
K	Vacuum break flow adjusting needle: Screwdriver operation type 	

*5 When more than one option is selected, list the option symbols in alphabetical order. (Example -BJ)
*6 Use a One-touch fitting or barb fitting (M-3AU-4) for piping. (O.D.: Within ϕ 6.2)

chanhvinh.com

Vacuum Pump System **Vacuum Unit**

ZK2□A Series

For Manifold Vacuum Pump System + With Valve + Without Energy Saving Function

Refer to page 17 for How to Order Manifold, pages 24 and 27 for the port layouts (including circuit examples), and pages 39 to 41 for the dimensions.

How to Order

ZK2Q00 K 5 D L A – 08 – □

❶ ❷ ❸ ❹ ❺ ❻

❶ Combination of supply valve and release valve

Symbol	Supply valve		Release valve
	N.C.	Self-holding	N.C.
K	●	—	●
J	●*1	—	—
R	—	●*2	●

*1 Install the release valve or vacuum breaker in the middle of the vacuum piping.
*2 Supply valve maintains vacuum by energisation (20 ms or more). Stopping the vacuum turns on the release valve.
Refer to the precaution on page 44.

❷ Rated voltage (Supply valve/Release valve)

Symbol	Voltage
5	24 VDC
6	12 VDC

❸ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications		
			NPN	PNP	With unit selection function*3
			2 outputs		
A	Pressure switch for vacuum	-101 to 0	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	-101 to 0	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				

*3 The unit for the type without the unit selection function is fixed as kPa.

❹ Connector (Supply valve/Release valve/Pressure switch for vacuum)





Symbol	For supply valve/release valve		For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
	Centralised wiring specification (Plug-in)	Individual wiring specification: 300 mm (Connector assembly)*4			
C	●	None	●		Cannot be selected when ❸ is N
C1	●	None	None		Cannot be selected when ❸ is P or T
L	None	●	●		Cannot be selected when ❸ is N
L1	None	None	●		
L2	None	●	None		Cannot be selected when ❸ is P or T
L3	None	None	None		

*4 For the connector length other than 300 mm, order the connector assembly on page 32 separately.

❺ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❻ Option*5 (For details on the Function/Application, refer to page 42.)

Symbol	Type	Note
—	Without option	—
C	Vacuum pump system PE port female thread specification (M3) 	When R is selected for ❶, P needs to be selected.
E	Vacuum break flow adjusting needle: Screwdriver operation type long lock nut 	Cannot be selected when ❶ is J. Can be selected only for the combination of J and K
J	Vacuum break flow adjusting needle: Round lock nut 	
K	Vacuum break flow adjusting needle: Screwdriver operation type 	
P	With manifold common release pressure supply (PD) port	Cannot be selected when ❶ is J

*5 When more than one option is selected, list the option symbols in alphabetical order. (Example -EP)

chanhvinh.com

Vacuum Pump System **Vacuum Unit**

ZK2□A Series

Manifold

Refer to page 16 for the vacuum pump system for the manifold.

How to Order Manifold

ZZK2 [04] A – [P] 2 [L] – [ ]

❶ ❷ ❸ ❹

If the manifold parts (set of end plates for both ends and tension bolts) are shipped unassembled, please refer to page 33.

❶ Stations

Symbol	Stations
01	1 station
02	2 stations
⋮	⋮
10	10 stations

❷ System/Port

Symbol	System	Port
P	Vacuum pump system	O 8 (Common PV) O 6 (Common PS)
PN		O 5/16"(Common PV) O 1/4" (Common PS)

❸ Supply valve and release valve wiring*1

Symbol	Wiring	Selectable wiring for manifold ❹ (Refer to page 16.)					
		C	**C1**	**L**	**L1**	**L2**	**L3**
L	Individual wiring	—	—	●	●	●	●
F	D-sub connector	●	●	—	—	—	—
P	Flat ribbon cable connector	●	●	—	—	—	—

*1 Common wiring F/P is available only for solenoid valve wiring. Individual wiring is specified for vacuum switches and sensors.


❹ Option*2 (For details on the Function/Application, refer to page 42.)

Symbol	Type	Selectable option for manifold ❻ (Refer to page 16.)				
		C	**E**	**J**	**K**	**P**
—	Without option	●	●	●	●	—
B	With DIN rail mounting bracket*3	●	●	●	●	—
D	With common release pressure supply (PD) port	●	●	●	●	◎*4

*2 When more than one option is selected, list the option symbols in alphabetical order. (Example -BD)
*3 The DIN rail should be ordered separately. (Refer to page 33.)
*4 When D is selected for manifold option, select P for single unit option. (◎ must be selected.)

How to Order Valve Manifold Assembly

Example

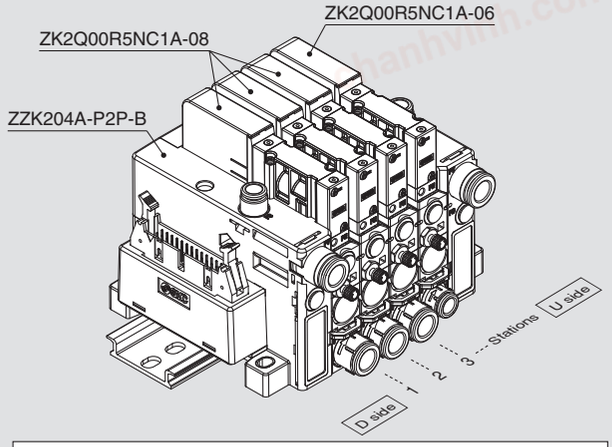

ZZK204A-P2P-B ····· 1 set (Manifold part number)
*** ZK2Q00R5NC1A-08 ····· 3 sets**
*** ZK2Q00R5NC1A-06 ····· 1 set**
*** The asterisk denotes the symbol for the assembly.**
*** Prefix to the single unit part number.**

- When the manifold is viewed from V port, the first station starts from the left (D side).
- After the manifold part number, specify the installed single unit from the first station.
- The DIN rail should be ordered separately. (Refer to page 33.)

chanhvinh.com

Specifications

General Specifications

Operating temperature range (No condensation)	-5 to 50 °C	Without pressure sensor/switch With pressure switch
	0 to 50 °C	With pressure sensor
	5 to 50 °C	Pressure switch with energy saving function
Fluid		Air
Vibration resistance*1	30 m/s²	Without pressure sensor/switch With pressure sensor
	20 m/s²	With pressure switch
Impact*2, *3 resistance	150 m/s²	Without pressure sensor/switch With pressure sensor
	100 m/s²	With pressure switch
Standards		CE/UKCA marking, RoHS

*1 The characteristics are satisfied when tested for 2 hours in each of the X, Y and Z directions at 10 to 500 Hz without energisation. (Initial value)
*2 The characteristics are satisfied when tested one time in each of the X, Y and Z directions without energisation. (Initial value)
*3 For valve type R (Self-holding release valve linked), impact resistance is 50 m/s².

Valve Common Specifications

Model*4	ZK2-VA□K	ZK2-VA□R	ZK2-VA□J
Type of actuation*5	Supply valve: N.C. Release valve: N.C.	Self-holding release valve linked Release valve: N.C.	Supply valve: N.C. Release valve: None
Valve configuration*6	Pilot operated dual 2-port		Pilot operated 2-port
Operating pressure range	0.3 to 0.6 MPa		
Valve construction	Poppet seal		
Manual override	Push type		
Rated voltage	24 VDC, 12 VDC		
Power consumption	0.4 W		
Lead wire (ZK2-LV**-A)	Cross section: 0.2 mm² (AWG24)		
	Insulator O.D.: 1.4 mm		

*4 Refer to the Valve assembly on page 32 for the valve model number.
*5 ZK2-VA□R: After instantaneous energisation of the supply valve (20 ms or more), ON state is maintained without energisation. Supply valve turns off simultaneously when the release valve turns on.
ZK2-VA□K: Supply valve turns off when is not energised. Select this type when energy saving switch is used.
*6 The V100 series is used as the pilot valve. For details on the V100 series, refer to the V100 series in the **Web Catalogue** and the 3/4/5-port solenoid valve precautions.

Ejector Specifications

Item / Model			ZK2□07	ZK2□10	ZK2□12	ZK2□15
Nozzle diameter		[mm]	0.7	1.0	1.2	1.5
Max. suction flow*7	Port exhaust	[l/min (ANR)]	34	56	74	89
	Silencer exhaust/ Complex exhaust	[l/min (ANR)]	29	44	61	67
	High-noise reduction silencer exhaust	[l/min (ANR)]	34	56	72	83
Air consumption*7		[l/min (ANR)]	24	40	58	90
Max. vacuum pressure*7		[kPa]	–91			
Supply pressure range*8		[MPa]	0.3 to 0.6 (0.1 to 0.6)			
Standard supply pressure*9		[MPa]	0.35			0.4 (0.37)

*7 Values at the standard supply pressure. Values are based on standard of SMC measurements. They depend on atmospheric pressure (weather, altitude, etc.) and measurement method.
*8 The value in ( ) is for without valve.
*9 The value in ( ) is for without valve. For nozzle size 07 to 12, the value is common to the ejectors with valve and without valve.

Suction Filter

Nominal filtration rating	30 μm
Filtration area	510 mm²

Max. Number of Manifold Stations that Can Operate Simultaneously*10

Item / Model (Nozzle size)			ZK2□07	ZK2□10	ZK2□12	ZK2□15
Air pressure supply (PV) port Ø 8, Ø 5/16"	Complex exhaust	Supply from one side	8	5	4	3
		Supply from both sides	10	7	5	5
	Individual port exhaust, High-noise reduction silencer exhaust	Supply from one side	8	6	6	3
		Supply from both sides	10	9	9	6

*10 As long as the number of stations operated simultaneously is the value on the table or less, then the manifold is available up to 10 stations.

Noise Level (Reference values)

Item / Model		ZK2□07	ZK2□10	ZK2□12	ZK2□15
Noise level [dB (A)]	ZK2G (High-noise reduction silencer exhaust)	46	55	63	69
	ZK2A (Silencer exhaust)	59	66	75	76

Actual values under SMC's measurement conditions (Not guaranteed values)

Weight

Single Unit

Single unit model	Weight [g]
ZK2P00K□N□A (Vacuum pump system, Single unit, Without pressure sensor/switch)	97
ZK2A□K□N□A (Ejector system, Single unit, Without pressure sensor/switch)	95
ZK2A□N0NN (Ejector system, Single unit, Without valve)	54
ZK2 (One station for manifold, Without pressure sensor/switch)	99

Pressure Sensor/Pressure Switch for Vacuum

Pressure sensor/Pressure switch for vacuum model	Weight [g]
ZK2-PS□-A (Except cable portion)	5
ZK2-ZS□-A (Except lead wire with connector)	14

Manifold Base

	1 station	2 stations	3 stations	4 stations	5 stations	6 stations	7 stations	8 stations	9 stations	10 stations
Weight [g]	129	132	135	138	141	144	147	149	152	155

●Calculation of Weight for the Manifold Type

(Single unit weight x Number of stations) + (Pressure sensor/Pressure switch for vacuum weight x Number of stations) + Manifold base

Example) 5-station manifold with pressure sensors

99 g x 5 pcs. + 5 g x 5 pcs. + 141 g = 661 g


chanhvinh.com

Ejector Exhaust Characteristics/Flow Rate Characteristics (Representative value)


* The flow rate characteristics correspond to the standard supply pressure.

ZK2□07


Exhaust Characteristics

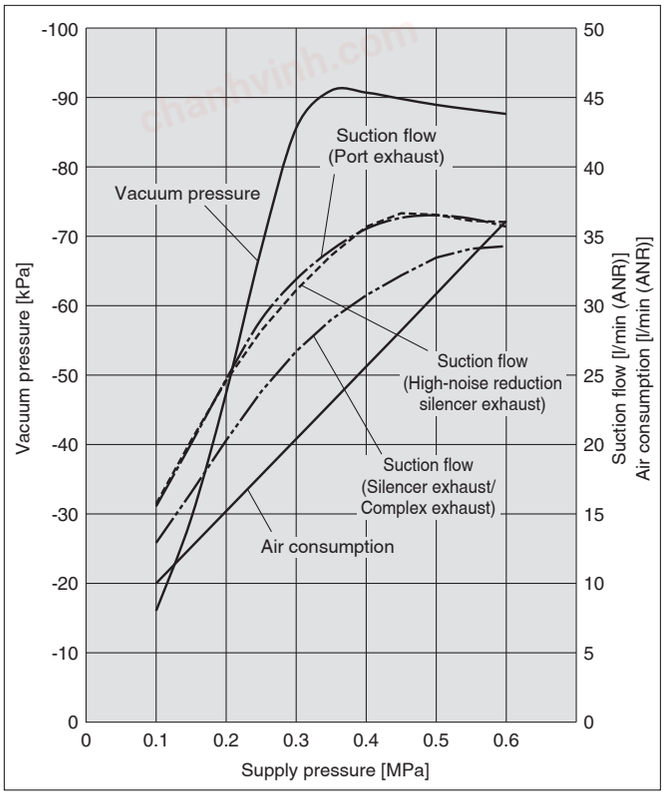

Flow Rate Characteristics

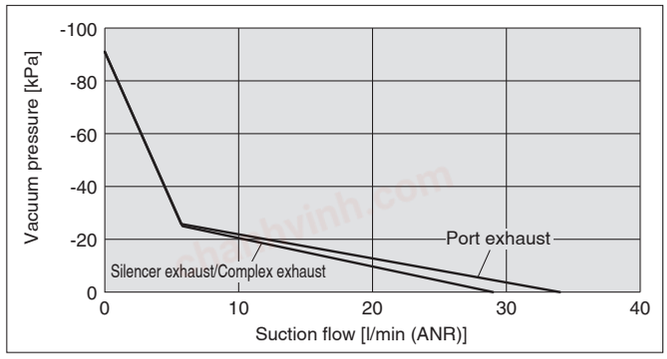


Flow Rate Characteristics

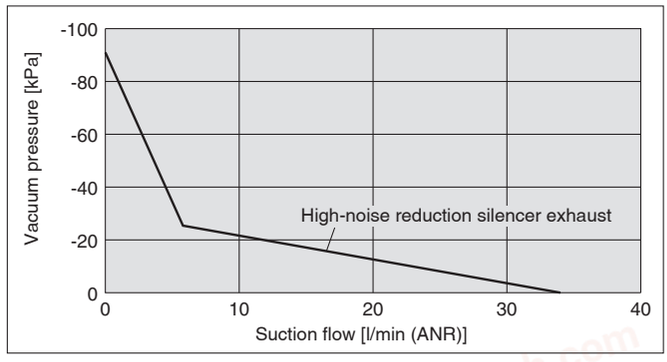


ZK2□10


Exhaust Characteristics

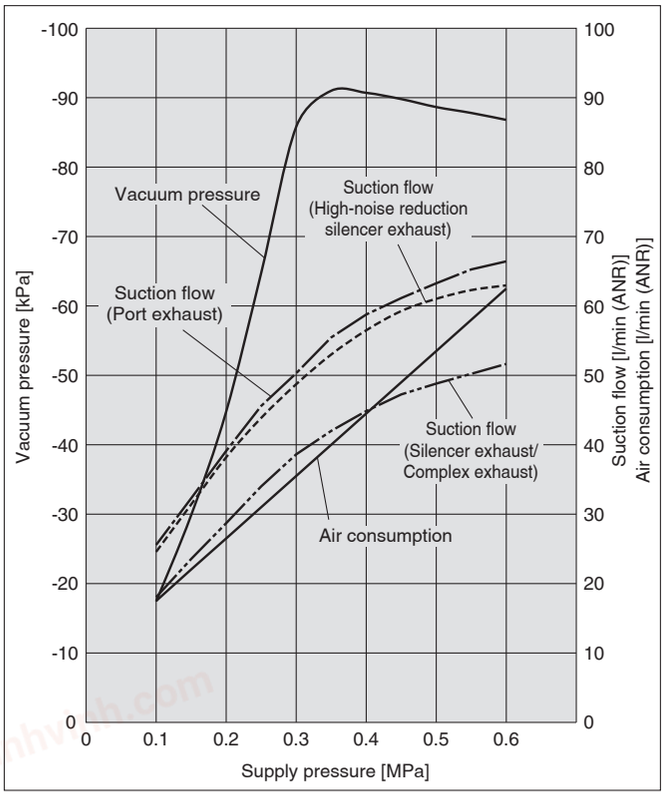

Flow Rate Characteristics

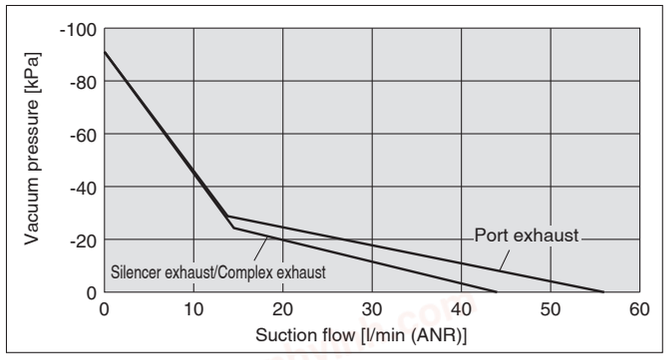

Flow Rate Characteristics

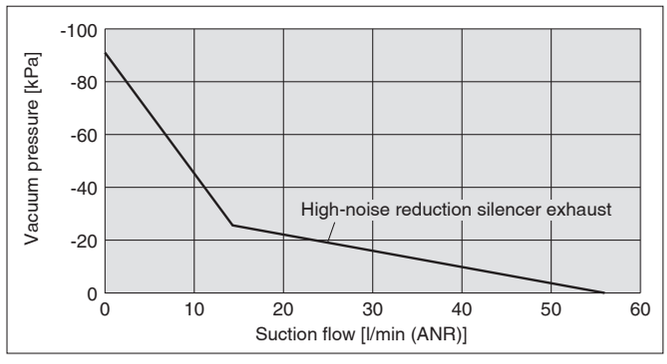


chanhvinh.com

Ejector Exhaust Characteristics/Flow Rate Characteristics (Representative value)


* The flow rate characteristics correspond to the standard supply pressure.

ZK2□12


Exhaust Characteristics

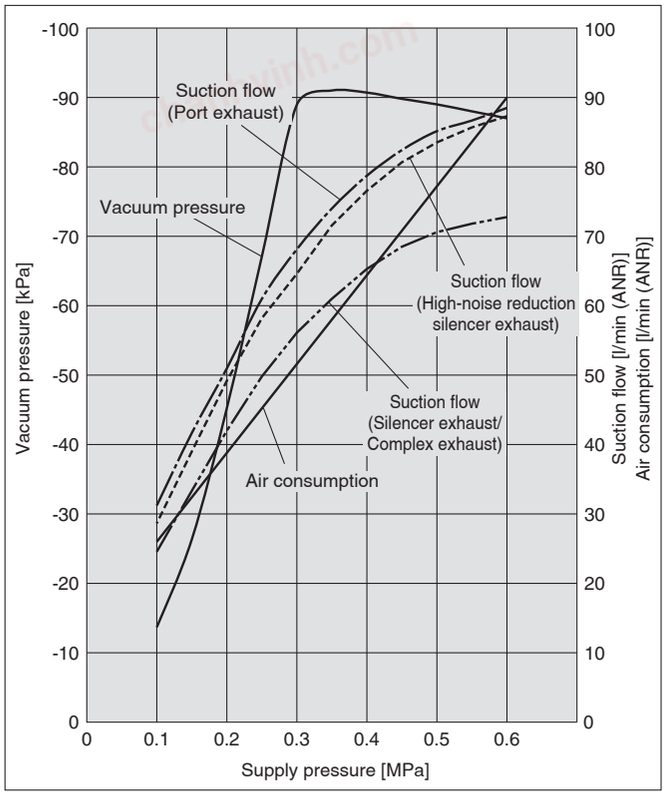

Flow Rate Characteristics

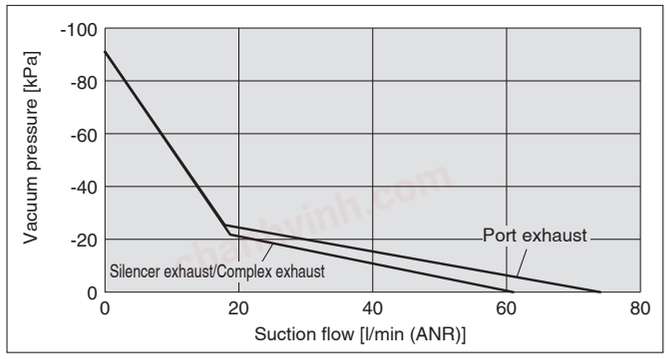


Flow Rate Characteristics

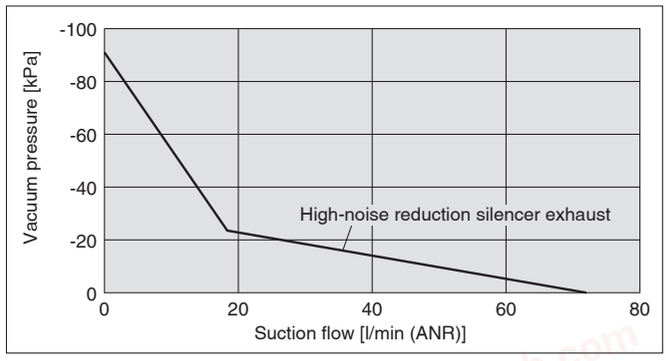


ZK2□15

* The following graphs show the characteristics of the ejector with valve. (Please contact SMC for models without valve.)


Exhaust Characteristics

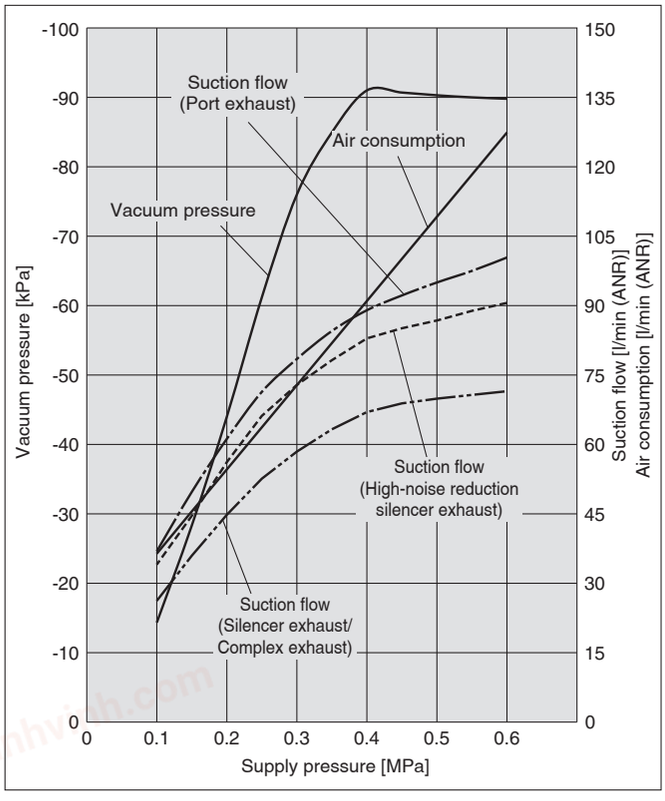

Flow Rate Characteristics

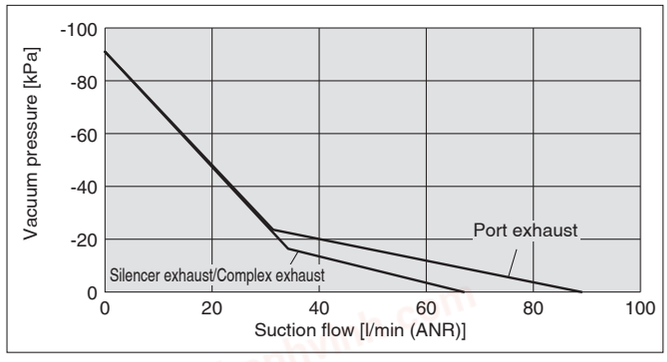


Flow Rate Characteristics

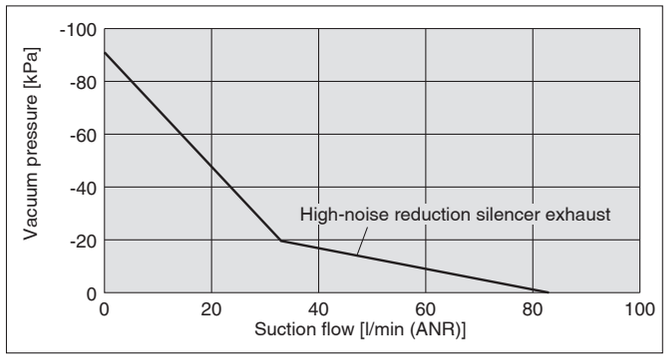

chanhvinh.com

Vacuum Pump System Flow Rate Characteristics/ZK2P00

The graph shows the suction flow rate characteristics of the vacuum pump system at different vacuum pressures.

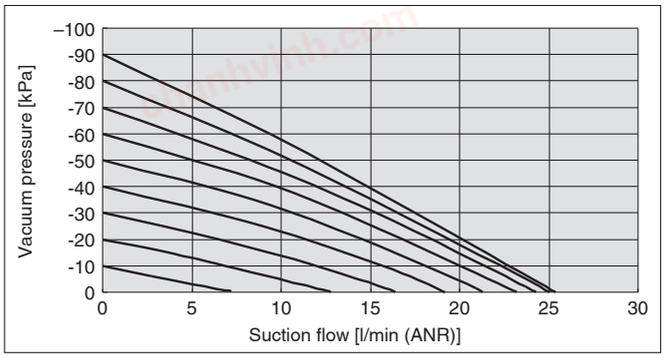


The actual suction flow at the point of suction varies depending on the piping conditions to the vacuum port. (The above graph shows the value when V port is Ø 8.)

Vacuum Release Flow Rate Characteristics


The graph shows the flow rate characteristics at different supply pressures when the vacuum break flow adjusting needle is open from the fully closed state.

ZK2□□□(Ejector system)

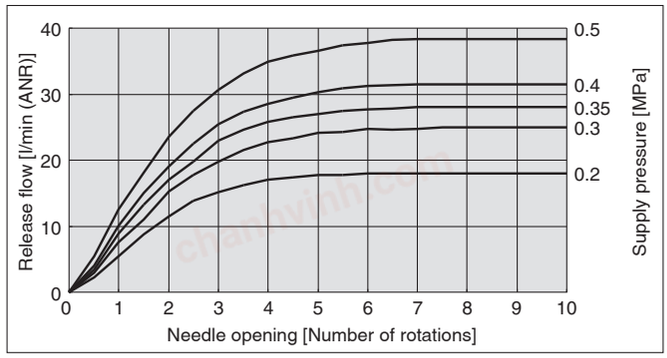

The actual suction flow at the point of suction varies depending on the piping conditions to the vacuum port. (The above graph shows the value of the ZK2B07.)

ZK2□□□(Pump system)

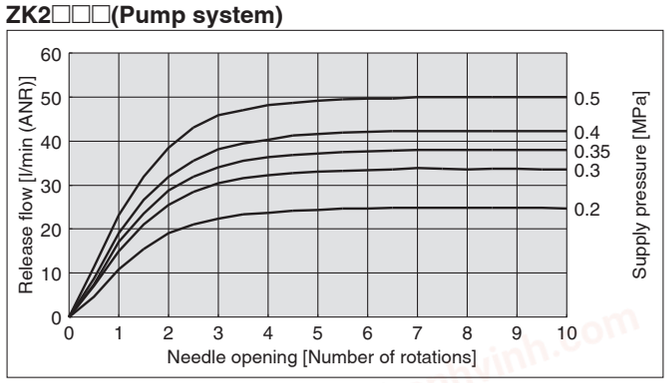

The actual suction flow at the point of suction varies depending on the piping conditions to the vacuum port.


Vacuum Pump System Flow Rate Characteristics of Flow Path and Vacuum Release

Port size		Flow rate characteristics of V → PV (Vacuum side)				Flow rate characteristics of PS → V (Vacuum release side)*1			
PV port	V port	C[dm³/(s·bar)]	b	Cv	Q [l/min (ANR)]*2	C[dm³/(s·bar)]	b	Cv	Q [l/min (ANR)]*2
Ø 6	Ø 8	0.39	0.14	0.09	90	0.20	0.06	0.04	45

*1 When needle is fully open

*2 These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

How to Read the Flow Rate Characteristics Graph

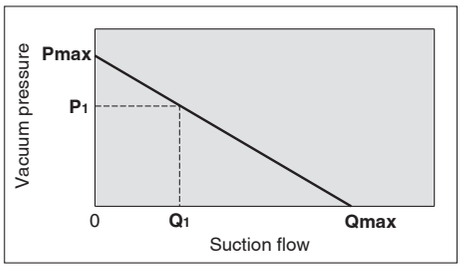


The flow rate characteristics indicate the relationship between the vacuum pressure and the suction flow of the ejector. They also show that when the suction flow changes, the vacuum pressure also changes. In general, this indicates the relationship at the ejector's standard operating pressure.
In the graph, **Pmax** indicates the max. vacuum pressure, and **Qmax** indicates the max. suction flow. These are the values that are published as specifications in catalogues, etc. Changes in vacuum pressure are explained in the order below.

1. If the ejector's suction port is closed and sealed tight, the suction flow becomes "0," and the vacuum pressure increases to the max. (**Pmax**).
2. If the suction port is opened gradually and air is allowed to flow (the air leaks), the suction flow increases, and the vacuum pressure decreases. (The condition of P_1 and Q_1)
3. If the suction port is opened completely, the suction flow increases to the max. (**Qmax**), while the vacuum pressure then drops almost to "0" (atmospheric pressure).

As described above, the vacuum pressure changes when the suction flow changes. In other words, when there is no leakage from the vacuum (V) port, the vacuum pressure can reach its maximum, but as the amount of leakage increases, the vacuum pressure decreases. When the amount of leakage and the maximum suction flow become equal, the vacuum pressure becomes almost zero.
When adsorbing workpieces which are permeable, subject to leakage, etc., caution is required as the vacuum pressure will not be very high.

chanhvinh.com

Pressure Sensor/Pressure Switch for Vacuum Specifications

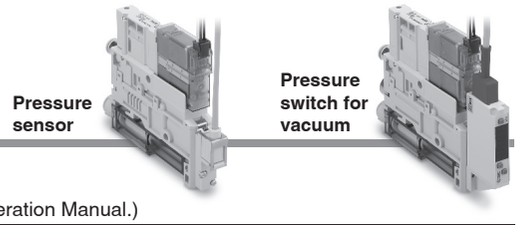

Pressure Sensor (For details, refer to the PSE series in the **Web Catalogue**, and the Operation Manual.)

Model (Sensor unit: Standard model number)		ZK2-PS1-A (PSE541)	ZK2-PS3-A (PSE543)
Rated pressure range		-101 to 0 kPa	-100 to 100 kPa
Proof pressure		500 kPa	
Output voltage		1 to 5 VDC	
Output impedance		Approx. 1 kΩ	
Power supply voltage		12 to 24 VDC ±10 %, Ripple (p-p) 10 % or less	
Current consumption		15 mA or less	
Accuracy		±2 % F.S. (Ambient temperature at 25 °C)	
Linearity		±0.4 % F.S.	
Repeatability		±0.2 % F.S.	
Effect of power supply voltage		±0.8 % F.S.	
Environmental resistance	Temperature range	Stored: –20 to 70 °C (No condensation or freezing)	
	Humidity range	Operating/Stored: 35 to 85 % RH (No condensation)	
Temperature characteristics		±2 % F.S. or less (Ambient temperature: 25 °C reference)	
Material	Case	Resin case: PBT	
	Pressure sensing section	Sensor pressure receiving area: Silicon, O-ring: HNBR	
Lead wire		Oil-resistant vinyl cabtire cable (elliptic) 3 cores, 2.7 x 3.2 mm, 3 m Cross section: 0.15 mm² Insulator O.D.: 0.9 mm	

Pressure Switch for Vacuum (For details, refer to the ZSE/ISE10 series in the **Web Catalogue**, and the Operation Manual.)


Model (Switch unit: Standard model number)		ZK2-ZSE□□□-A (ZSE10)	ZK2-ZSF□□□-A (ZSE10F)
Rated pressure range		-101 to 0 kPa	-100 to 100 kPa
Set pressure range/Pressure display range		-105 to 10 kPa	-105 to 105 kPa
Proof pressure		500 kPa	
Smallest settable increment		0.1 kPa	
Power supply voltage		12 to 24 VDC ±10 %, Ripple (p-p) 10 % or less (Protected against reverse connection)	
Current consumption		40 mA or less	
Switch output	Output type	NPN or PNP open collector 2 outputs (selectable)	
	Max. load current	80 mA	
	Max. applied voltage	28 V (with NPN output)	
	Residual voltage	2 V or less (at load current of 80 mA)	
	Response time	2.5 ms or less (with anti-chattering function: 20, 100, 500, 1000, 2000 ms)	
	Short circuit protection	Yes	
Repeatability		±0.2 % F.S. ±1 digit	
Hysteresis	Hysteresis mode	Variable from 0*1	
	Window comparator mode		
Display type		3 1/2 digit, 7-segment LED, 1-colour display (Red)	
Display accuracy		±2 % F.S. ±1 digit (Ambient temperature at 25 ±3 °C)	
Indicator light		Lights up when output is turned ON. OUT1: Green, OUT2: Red	
Environmental resistance	Enclosure	IP40	
	Temperature range	Stored: –10 to 60 °C (No condensation or freezing)	
	Humidity range	Operating/Stored: 35 to 85 % RH (No condensation)	
	Withstand voltage	1000 VAC for 1 minute between terminals and housing	
	Insulation resistance	50 MΩ or more (500 VDC measured via megohmmeter) between terminals and housing	
Temperature characteristics		±2 % F.S. (Ambient temperature: based on 25 °C)	
Lead wire		Oilproof heavy-duty vinyl cable 5 cores Ø 3.5, 2 m Cross section: 0.15 mm² (AWG26) Insulator O.D.: 1.0 mm	

*1 If the applied pressure fluctuates around the set value, the hysteresis must be set to a value more than the fluctuating width. Otherwise, chattering will occur.

Description (Pressure Switch for Vacuum)

Output (OUT1) display (Green)	Lights up when OUT1 is turned ON.
Output (OUT2) display (Red)	Lights up when OUT2 is turned ON. Pressure switch for vacuum with energy saving function: LED (Red) is ON when the pilot valve for supply valve is energised.
LED display	Displays the current pressure, set mode and error code.
△ button (UP)	Selects the mode or increases the ON/OFF set value.
	Use for switching to the peak display mode.
▽ button (DOWN)	Selects the mode or decreases the ON/OFF set value.
	Use for switching to the bottom display mode.
S button (SET)	Use for changing the mode or setting the set value.


* Refer to the Operation Manual for details on each setting and operation methods.

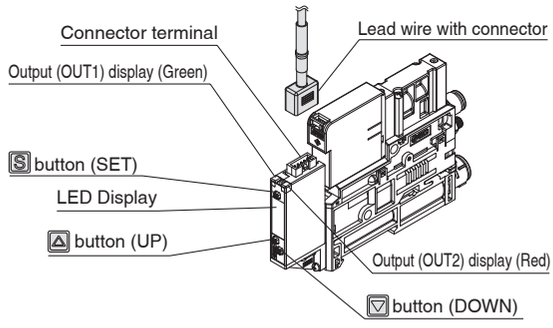

chanhvinh.com

ZK2□A Series

Pressure Switch for Vacuum with Energy Saving Function Specifications

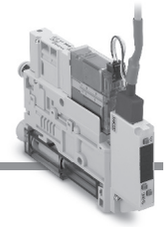

Pressure switch for vacuum with energy saving function

Pressure Switch for Vacuum with Energy Saving Function

(For details, refer to the Operation Manual for the ZK2-ZSV□□□-A on the SMC website.)


Model		ZK2-ZSV□□□-A
Rated pressure range		-100 to 100 kPa
Set pressure range		-105 to 105 kPa
Proof pressure		500 kPa
Smallest settable increment		0.1 kPa
Power supply voltage		12 to 24 VDC ±10 %, Ripple (p-p) 10 % or less (Protected against reverse connection)
Current consumption		40 mA or less
Switch output	Output type	NPN or PNP open collector OUT1: General purpose, OUT2: Valve control
	Max. load current	80 mA
	Max. applied voltage	26.4 VDC
	Residual voltage	2 V or less (at load current of 80 mA)
	Response time	2.5 ms or less (with anti-chattering function: 20, 100, 500, 1000, 2000 ms)
	Short circuit protection	Yes
Repeatability		±0.2 % F.S. ±1 digit
Hysteresis	Hysteresis mode	Variable from 0*1
Display type		3 1/2 digit, 7-segment LED, Colour display (Red)
Display accuracy		±2 % F.S. ±1 digit (Ambient temperature at 25 ±3 °C)
Indicator light		Lights up when output is turned ON. OUT1: Green, OUT2: Red
Environmental resistance	Enclosure	IP40
	Operating temperature range	-5 to 50 °C
	Withstand voltage	1000 VAC for 1 minute between terminals and housing
	Insulation resistance	50 MΩ or more (500 VDC measured via megohmmeter) between terminals and housing
Temperature characteristics		±2 % F.S. (at 25 °C in an operating temperature range of -5 and 50 °C)
Lead wire		Cable: 5 cores O 3.5, 2 m Cross section: 0.15 mm² (AWG26) Insulator O.D.: 1.0 mm

*1 If the applied pressure fluctuates around the set value, the hysteresis must be set to a value more than the fluctuating width. Otherwise, chattering will occur.

Internal Circuit and Wiring Example

Pressure Sensor


ZK2-PS□-A

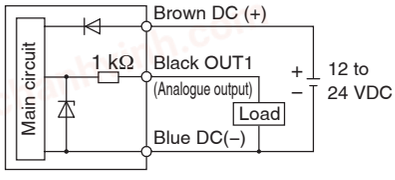

Voltage output type: 1 to 5 V
Output impedance: Approx. 1 kΩ


Pressure Switch for Vacuum

ZK2-ZS□A□□-A
(NPN 2 outputs)

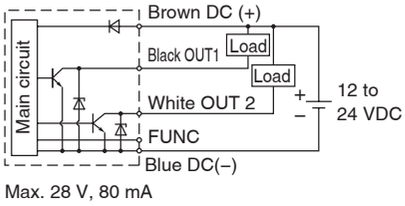

Max. 28 V, 80 mA
Residual voltage: 2 V or less


ZK2-ZS□B□□-A
(PNP 2 outputs)

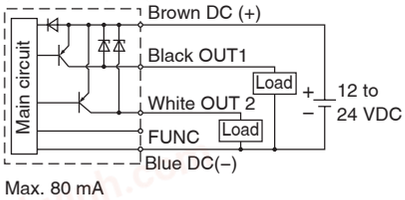


Max. 80 mA
Residual voltage: 2 V or less

Pressure Switch for Vacuum with Energy Saving Function

ZK2-ZSVA□□-A
(NPN 1 output)

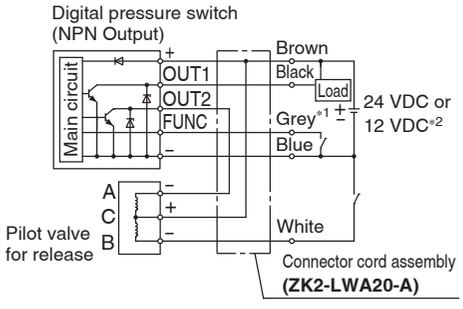


ZK2-ZSVB□□-A
(PNP 1 output)

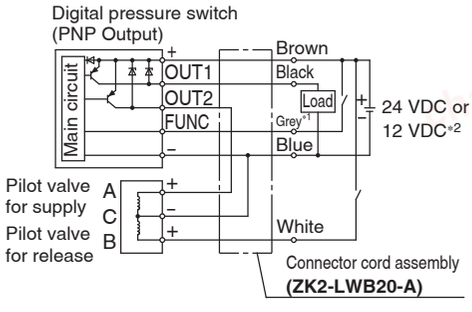


*1 The grey wire (FUNC) is connected when operating the supply valve by energy saving control (for workpiece adsorption). (For details, refer to the Operation Manual for the ZK2-ZSV□□□-A on the SMC website.)
*2 When the valve's rated voltage is 12 VDC, be sure to apply 12 VDC.

Supply Valve/Release Valve

Valve type K/R
(With supply valve/release valve)

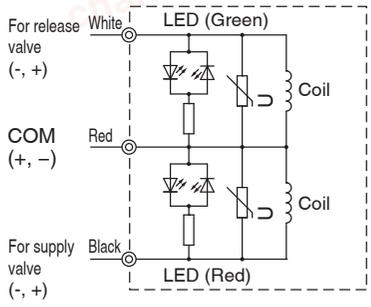

Valve type J
(With supply valve/Without release valve)

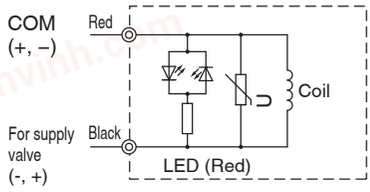

* The FUNC terminal is connected when using the copy function. (For details, refer to the Operation Manual for the ZSE10/ISE10 on the SMC website.)

chanhvinh.com

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PS: Pilot pressure supply port
● PD: Release pressure supply port ● V: Vacuum port ● EXH: Exhaust port
● PE: Pilot pressure exhaust port For details ⇒ Page 30


Port Layout

∗ System depends on vacuum source (vacuum pump/ejector).

Standard Products

Port layout No. 1


Single unit: ZK2P00R□N□A-□

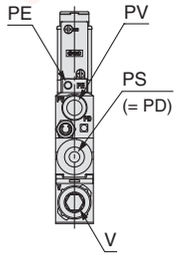

System		Vacuum pump
Body type		Single unit
Exhaust type		Without silencer
Application and purpose	Vacuum pressure	—
	Exhaust	—
	Release pressure	Same pressure as PS

Port combination: PV ≠ PS = PD


Circuit example

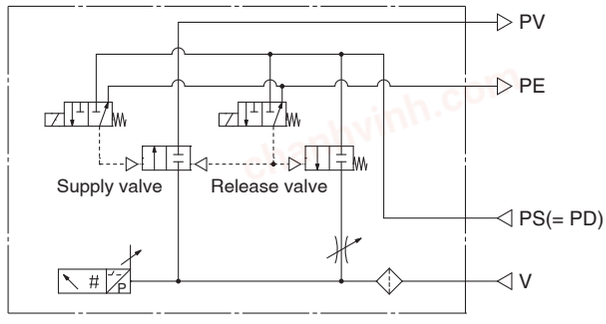

Supply valve: Self-holding type Release valve: N.C. (R type)

Port layout No. 2


Single unit: ZK2Q00$^{R}_{K}$□$^{A}_{J}$□A-□
Manifold: ZZK2□A-P2□

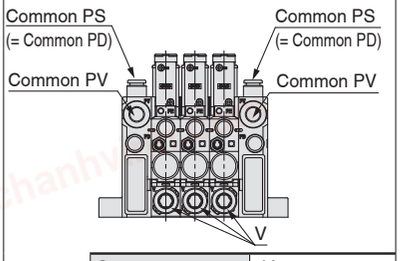

System		Vacuum pump
Body type		Manifold
Exhaust type		Without silencer
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	—
	Release pressure	Same pressure as common PS


Port combination: Common PV ≠ Common PS = Common PD

Circuit example

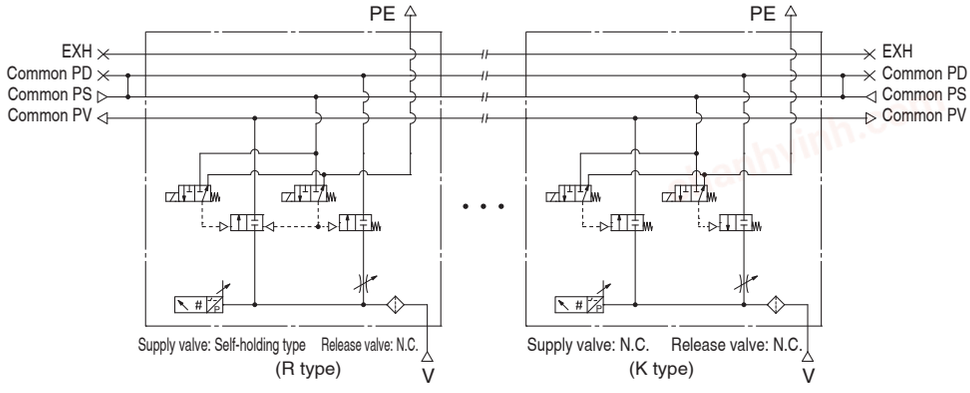

Port layout No. 3


Single unit: ZK2A□R□$^{P}_{T}$□A-□

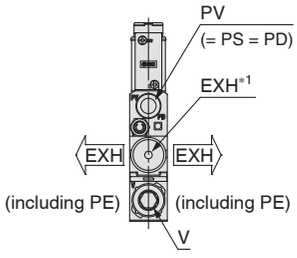

System		Ejector
Body type		Single unit
Exhaust type		Silencer exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	Same pressure as PV

Port combination: PV = PS = PD

Circuit example

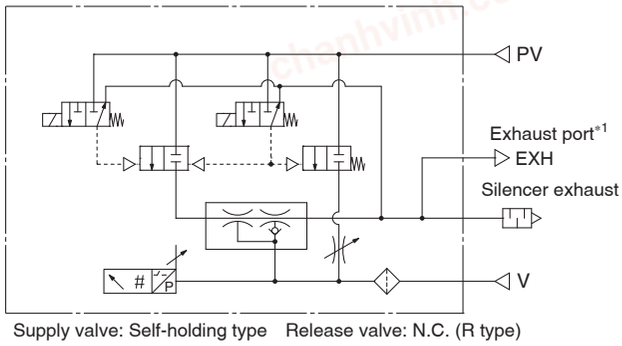

∗1 Nozzle size: 12, 15

Refer to page 30 for the purpose of port and the operating pressure range.

chanhvinh.com

ZK2□A Series

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PS: Pilot pressure supply port
● PD: Release pressure supply port ● V: Vacuum port ● EXH: Exhaust port
● PE: Pilot pressure exhaust port For details ⇒ Page 30


Port Layout

＊ System depends on vacuum source (vacuum pump/ejector).

Standard Products

Port layout No. 4


Single unit: ZK2B□J□[A to J]□A-□

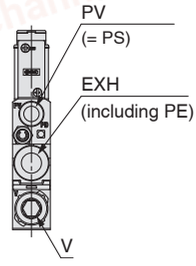

System		Ejector
Body type		Single unit
Exhaust type		Port exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	—

Port combination: PV = PS


Circuit example

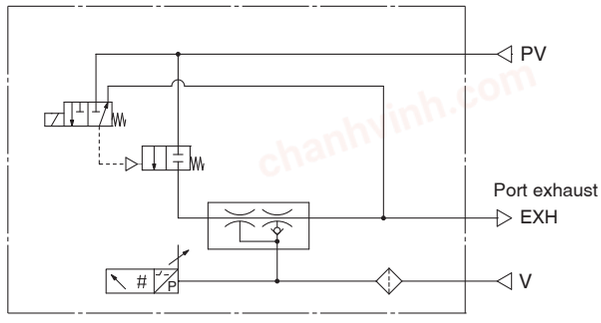

Supply valve: N.C. Release valve: Without release valve (J type)

Port layout No. 5


Single unit: ZK2G□K□[K to S]□A-□

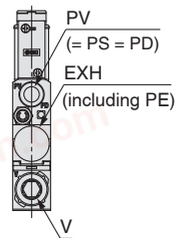

System		Ejector
Body type		Single unit
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	Same pressure as PV

Port combination: PV (= PS = PD)


Circuit example

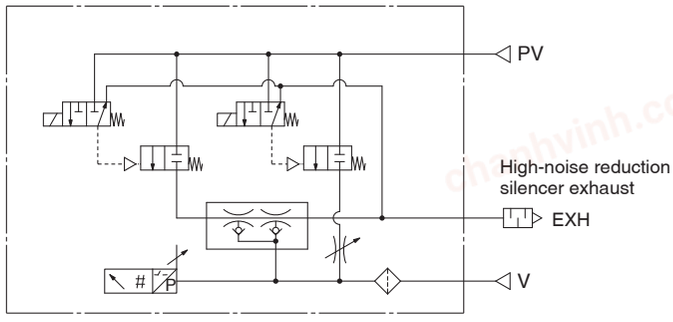

Supply valve: N.C. Release valve: N.C.
(K type)

Port layout No. 6

Single unit: ZK2C□[R K]□[P T]□A-□
Manifold: ZZK2□A-A1□

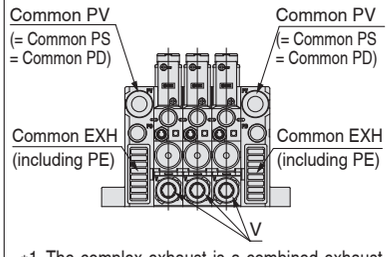


＊1 The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System		Ejector
Body type		Manifold
Exhaust type		Complex exhaust＊1
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	Same pressure as common PV

Port combination: Common PV = Common PS = Common PD

Circuit example

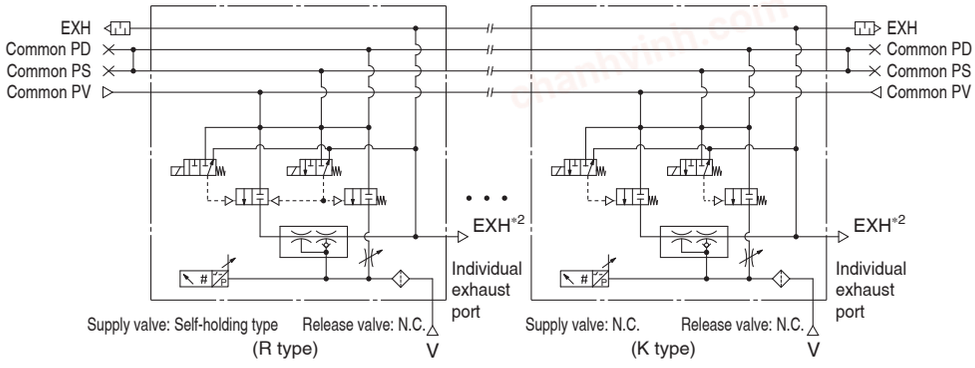

＊2 For complex exhaust type, individual exhaust port is provided to each station.

Refer to page 30 for the purpose of port and the operating pressure range.

chanhvinh.com

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PS: Pilot pressure supply port
● PD: Release pressure supply port ● V: Vacuum port ● EXH: Exhaust port
● PE: Pilot pressure exhaust port For details ⇒ Page 30

Port Layout


＊ System depends on vacuum source (vacuum pump/ejector).

Standard Products

Port layout No. 7

Single unit: ZK2F□J□$^{A}_{J}$□A-□


Manifold: ZZK2□A-A2□

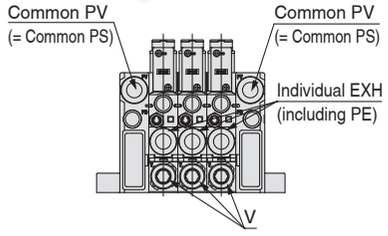

System		Ejector
Body type		Manifold
Exhaust type		Individual port exhaust
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	–

Port combination: Common PV = Common PS


Circuit example

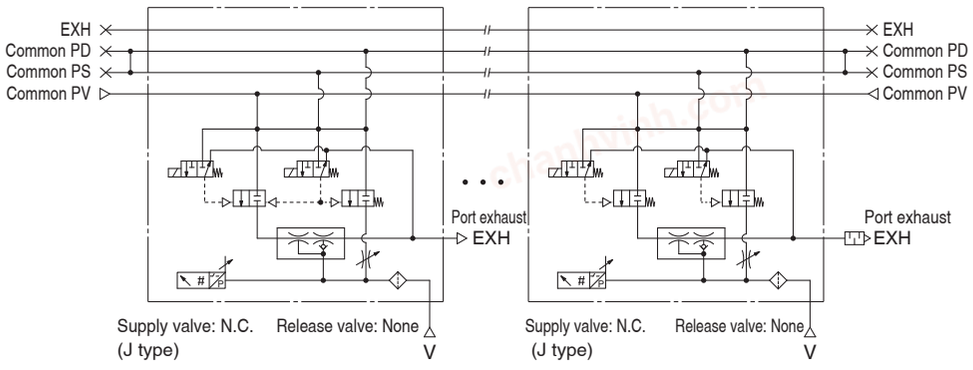

Port layout No. 8

Single unit: ZK2H□K□$^{K}_{S}$□A-□


Manifold: ZZK2□A-A2□

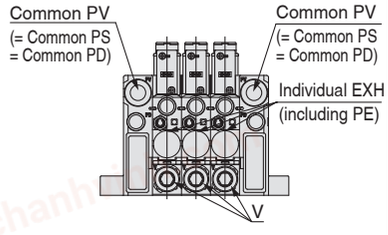

System		Ejector
Body type		Manifold
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	Same pressure as common PV

Port combination: Common PV = Common PS = Common PD


Circuit example

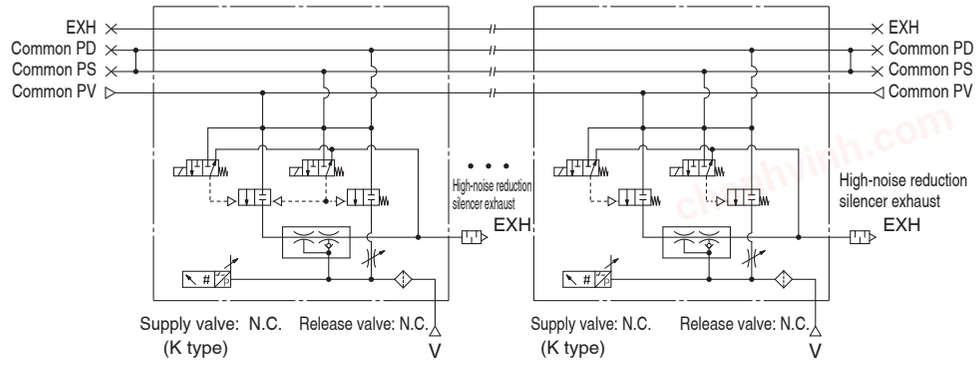

Option -D

Port layout No. 9


Single unit: ZK2P00K□$^{A}_{J}$□A-□-D

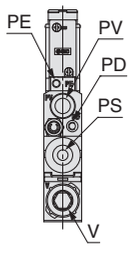

System		Vacuum pump
Body type		Single unit
Exhaust type		Without silencer
Application and purpose	Vacuum pressure	—
	Exhaust	—
	Release pressure	PD pressure has to be supplied with PS pressure.

Port combination: PV ≠ PS ≠ PD

Circuit example

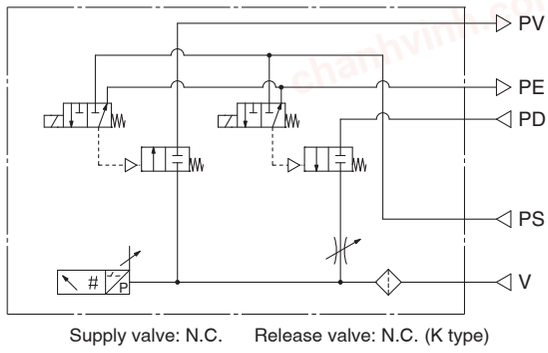

Refer to page 30 for the purpose of port and the operating pressure range.

chanhvinh.com

ZK2□A Series

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PS: Pilot pressure supply port
● PD: Release pressure supply port ● V: Vacuum port ● EXH: Exhaust port
● PE: Pilot pressure exhaust port For details ⇒ Page 30


Port Layout

＊ System depends on vacuum source (vacuum pump/ejector).

Option -D

Port layout No. 10


Single unit: ZK2Q00$^{R}_{K}$□$^{P}_{T}$□A-□-P
Manifold: ZZK2□A-P2□-D

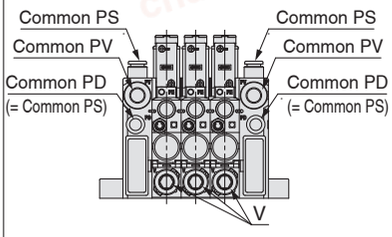

System		Vacuum pump
Body type		Manifold
Exhaust type		Without silencer
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	—
	Release pressure	Common PD pressure has to be supplied with common PS.


Port combination: Common PV ≠ Common PS ≠ Common PD

Circuit example

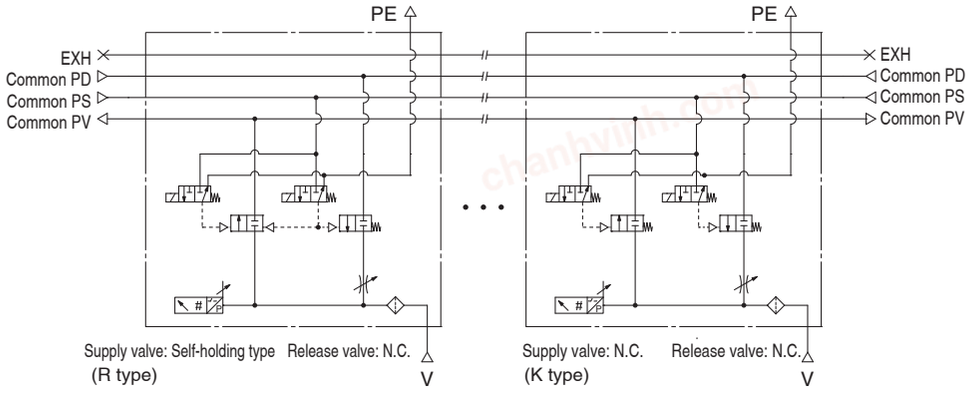

Port layout No. 11


Single unit: ZK2A□R□N□A-□-D

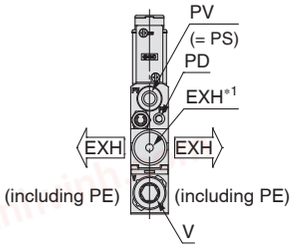

System		Ejector
Body type		Single unit
Exhaust type		Silencer exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	PD pressure has to be supplied with PV pressure.

Port combination: PV = PS ≠ PD

Circuit example

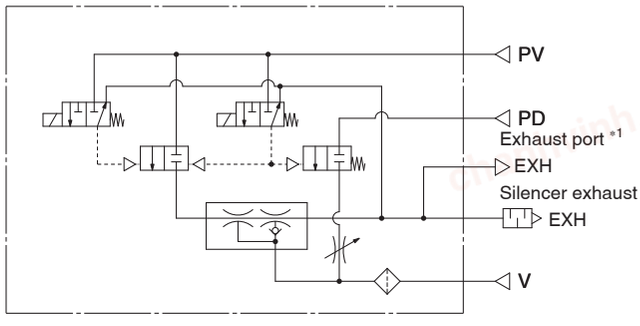


Supply valve: Self-holding type Release valve: N.C. (R type)

＊1 Nozzle size: 12, 15

Port layout No. 12


Single unit: ZK2B□K□$^{P}_{T}$□A-□-D

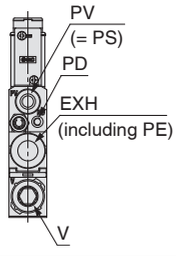

System		Ejector
Body type		Single unit
Exhaust type		Port exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	PD pressure has to be supplied with PV pressure.

Port combination: PV = PS ≠ PD

Circuit example

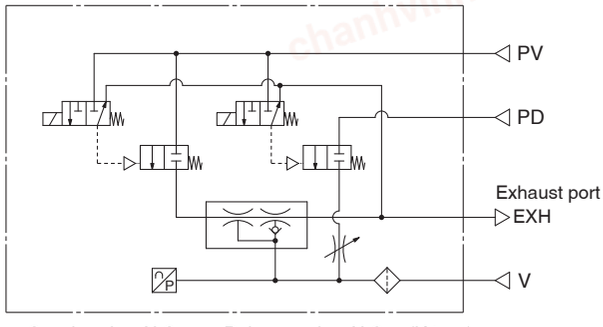

Supply valve: N.C. Release valve: N.C. (K type)

Refer to page 30 for the purpose of port and the operating pressure range.

chanhvinh.com

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PS: Pilot pressure supply port
● PD: Release pressure supply port ● V: Vacuum port ● EXH: Exhaust port
● PE: Pilot pressure exhaust port For details ⇒ Page 30


Port Layout

＊ System depends on vacuum source (vacuum pump/ejector).

Option -D

Port layout No. 13


Single unit: ZK2G□R□$^{A\ to\ J}$□A-□-D

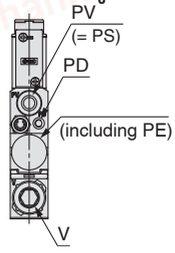

System		Ejector
Body type		Single unit
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	PD pressure has to be supplied with PV pressure.

Port combination: PV = PS ≠ PD


Circuit example

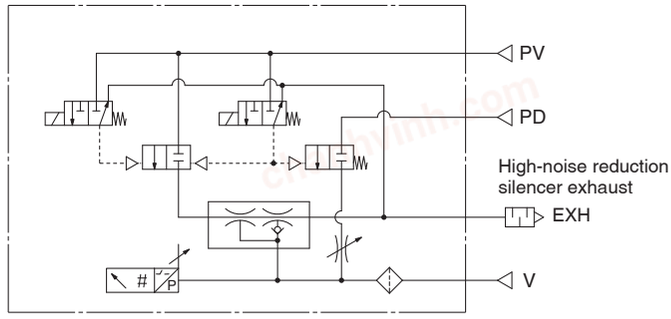

Supply valve: Self-holding type Release valve: N.C.
(R type)

Port layout No. 14

Single unit: ZK2C□$^{R}_{K}$□N□A-□-P
Manifold: ZZK2□A-A1□-D

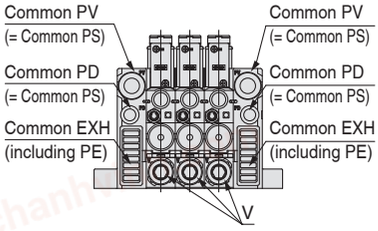


＊1 The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System		Ejector
Body type		Manifold
Exhaust type		Complex exhaust＊1
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	Common PD pressure has to be supplied with common PV.

Port combination: Common PV = Common PS ≠ Common PD


Circuit example

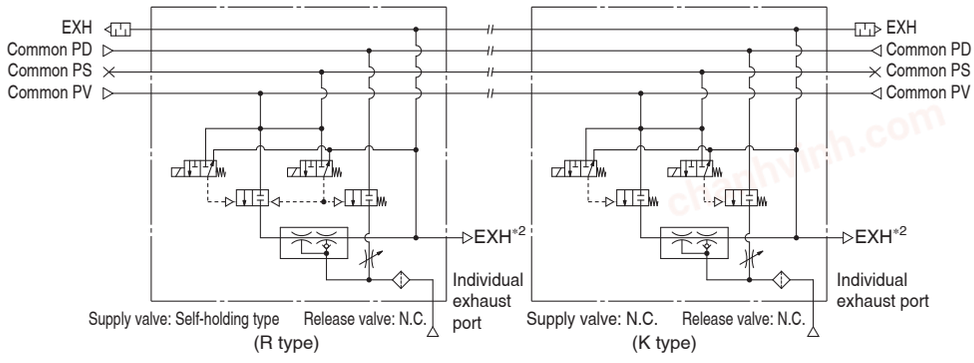

＊2 For complex exhaust type, individual exhaust port is provided to each station.

Port layout No. 15


Single unit: ZK2F□$^{R}_{K}$□$^{P}_{T}$□A-□-P
Manifold: ZZK2□A-A2□-D

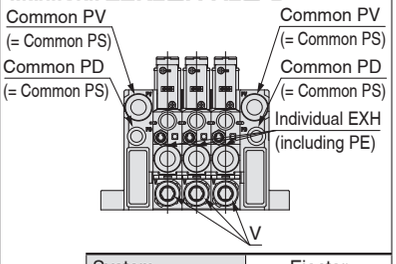

System		Ejector
Body type		Manifold
Exhaust type		Individual port exhaust
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	Common PD pressure has to be supplied with common PV.

Port combination: Common PV = Common PS ≠ Common PD

Circuit example

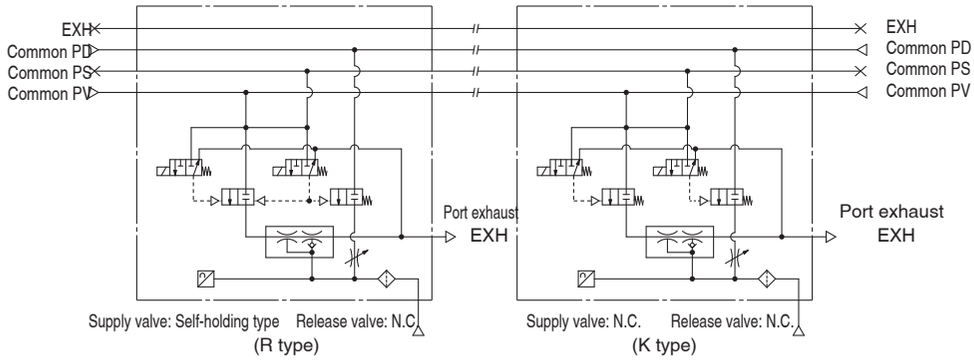

Refer to page 30 for the purpose of port and the operating pressure range.

chanhvinh.com

ZK2□A Series

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PS: Pilot pressure supply port
● PD: Release pressure supply port ● V: Vacuum port ● EXH: Exhaust port
● PE: Pilot pressure exhaust port For details ⇒ Page 30

Port Layout


＊ System depends on vacuum source (vacuum pump/ejector).

Option -D

Port layout No. 16

Single unit: ZK2H□(R/K)□(A to J)□A-□-P


Manifold: ZZK2□A-A2□-D

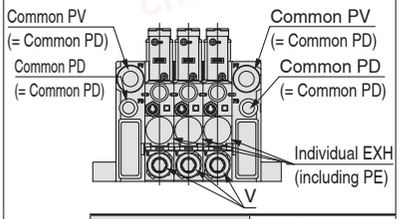

System		Ejector
Body type		Manifold
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	PD pressure has to be supplied with PV pressure.

Port combination: Common PV = Common PS ≠ Common PD

Circuit example

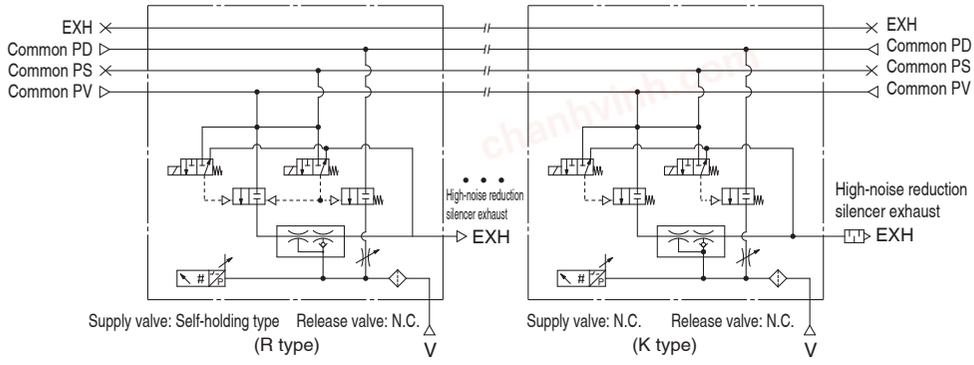


Option -L

Port layout No. 17

Single unit: ZK2C□(R/K)□(P/T)□A-□-L

Manifold: ZZK2□A-A1□-L

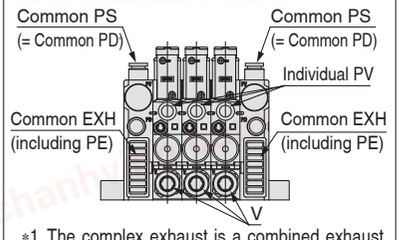


＊1 The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System		Ejector
Body type		Manifold
Exhaust type		Complex exhaust＊1
Application and purpose	Vacuum pressure	PV pressure can be changed per station.
	Exhaust	Released in operating environment
	Release pressure	Same pressure for common PS and common PD

Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

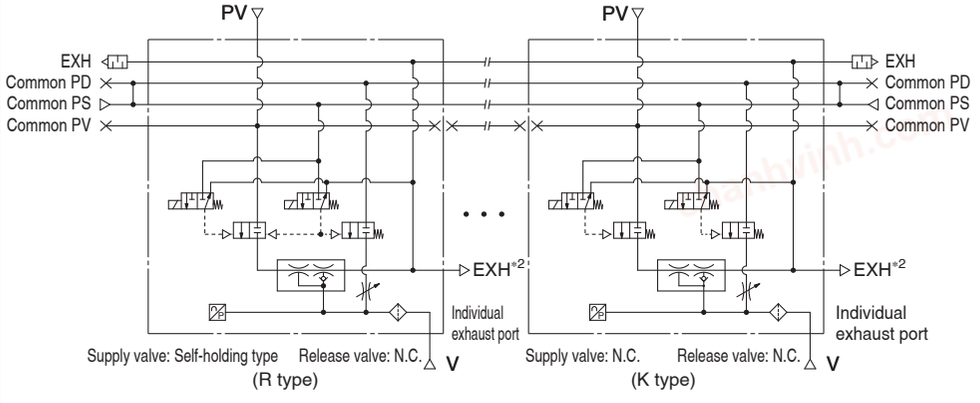


＊2 For complex exhaust type, individual exhaust port is provided to each station

Port layout No. 18

Single unit: ZK2F□(R/K)□(A to J)□A-□-L


Manifold: ZZK2□A-A2□-L

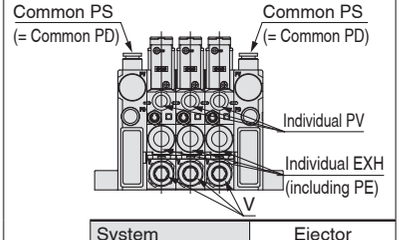

System		Ejector
Body type		Manifold
Exhaust type		Individual port exhaust
Application and purpose	Vacuum pressure	PV pressure can be changed per station.
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	Same pressure for common PS and common PD

Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

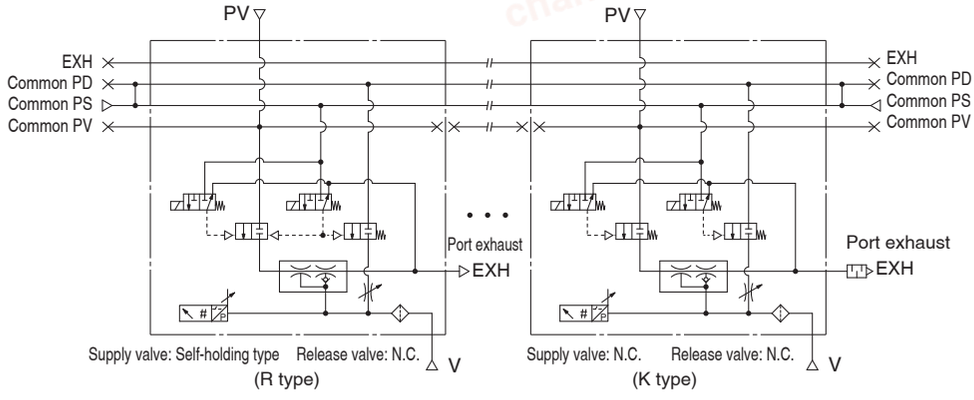

Refer to page 30 for the purpose of port and the operating pressure range.

chanhvinh.com

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PS: Pilot pressure supply port
● PD: Release pressure supply port ● V: Vacuum port ● EXH: Exhaust port
● PE: Pilot pressure exhaust port Refer to the table below for details.

Port Layout


＊ System depends on vacuum source (vacuum pump/ejector).

Option -L

Port layout No. 19

Single unit: ZK2H□K□$^{K}_{to}$□A-□-L


Manifold: ZZK2□A-A2□-L

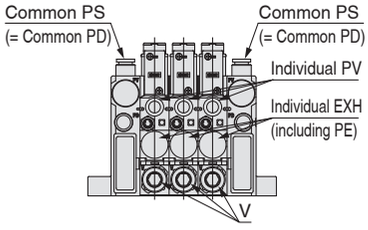

System		Ejector
Body type		Manifold
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	PV pressure can be changed per station.
	Exhaust	Released in operating environment
	Release pressure	Same pressure for common PS and common PD


Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

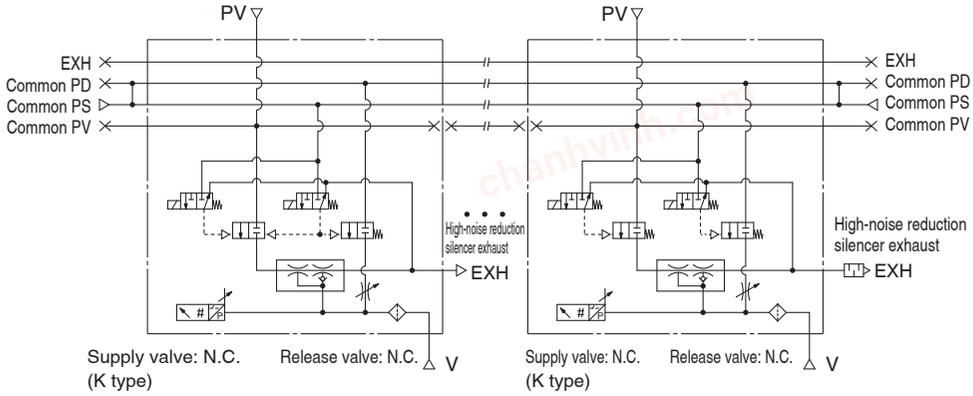

Application and Operating Pressure Range of Each Port


Port	Description	Ejector system	Vacuum pump system
PV	Air pressure supply port	Compressed air supply for operating ejector	—
	(Operating pressure range)	0.3 to 0.6 MPa＊1, ＊2	—
	Vacuum pressure supply port	—	Vacuum source (Vacuum pump)
	(Operating pressure range)	—	0 to –100 kPa
PS	Pilot pressure supply port	—	Compressed air supply for pilot valve
	(Operating pressure range)	—	0.3 to 0.6 MPa
PD	Individual release pressure supply port	Release pressure Compressed air supply for individual setting (Option)	
	(Operating pressure range)	0 to 0.6 MPa (PD ≤ PV)	0 to 0.6 MPa (PD ≤ PS)
V	Vacuum port	For connecting adsorption equipment including pad	
EXH	Exhaust port	Exhaust when ejector operates＊3	—
PE	Pilot pressure exhaust port	Exhaust when valve operates＊4	

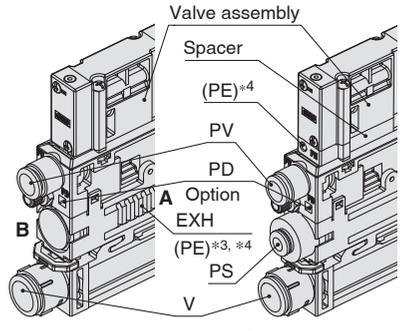


＊1 For models without valve, pressure can be 0.3 MPa or less. (Ejector system)
＊2 Manifold can be used at 0.3 MPa or less when the manifold is for individual SUP. For 0.2 MPa or less, select K or J for the valve type. Set pressure as PV ≤ PS.
＊3 For ejectors with silencer, air exhausts from A (slit on both sides). For port exhaust type, air exhausts from B.
＊4 Pilot pressure for ejectors is exhausted from the ejector and the common exhaust. Vacuum pump system exhausts air from PE port on the spacer. Female thread type (M3) is available by option [C] for PE port of the vacuum pump system.
When option [C] is selected for valve type R, operating conditions below apply.
・Select the type with release pressure supply port (PD) as an option.
Single unit/Manifold: Option [D]
For Manifold: Option [P]
・Vacuum pressure for PV port: –60 to -100 kPa
・The energisation time of the release valve: 200 ms or longer when the PD port is released to the atmosphere
500 ms or longer when the 0.1 MPa is supplied to the PD port
If the product is used out of this operating condition, please contact your local sales office.
＊5 For vacuum pump systems, if vacuum is released when the piping on the V port side is restricted, the V port internal pressure will rise, which may result in the filter case gasket coming off. Therefore, when the internal pressure rises during vacuum release, try to keep the pressure at 0.1 MPa or less.
Depending on the V port piping conditions and the shape of the adsorption part, if there are concerns regarding the internal pressure rise, select the option with a release pressure supply (PD) port, and adjust the PD port supply pressure to 0.1 MPa or less.

chanhvinh.com

Construction

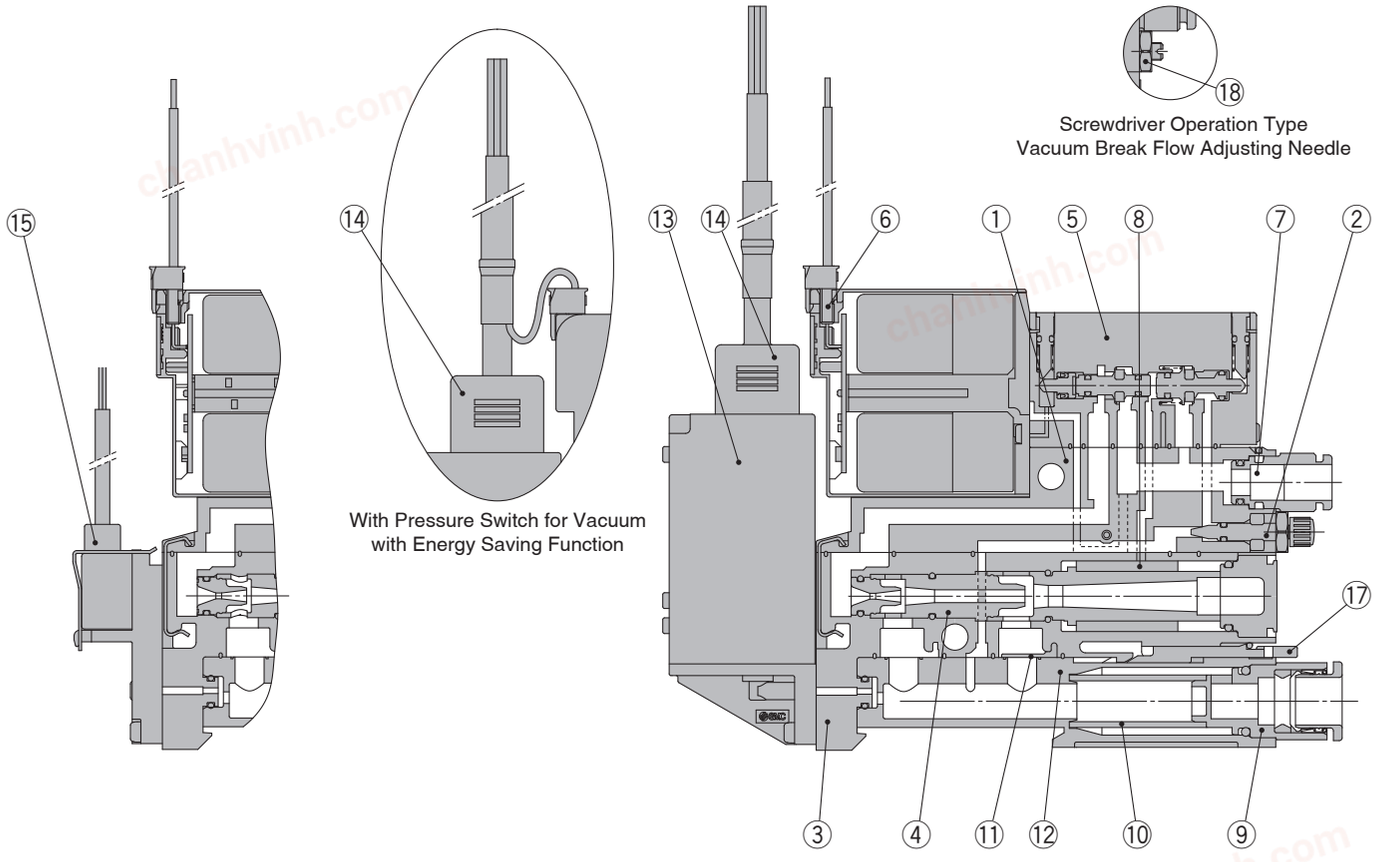

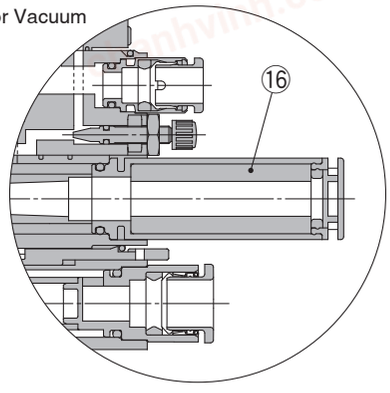

Component Parts

No.	Description	Material	Note
1	**Valve body assembly**	PBT	HNBR, NBR and steel are also used.
2	**Needle assembly**	Brass	Electroless nickel plated brass, resin, steel and NBR are used.
3	**Ejector body assembly**	PBT	HNBR, NBR and steel are also used.
4	**Ejector assembly**	PBT	NBR is also used.

Replacement Parts

No.	Description	Note
5	**Valve assembly**	—
6	**Connector assembly**	Connector for solenoid valve 3 wire (For valve type K/R), 2 wire (For valve type J)
7	**One-touch fitting assembly**	Metric size: Ø 6, Inch size: Ø 1/4"
8	**Sound absorbing material**	10 pcs. per set
9	**Vacuum port adapter assembly**	With One-touch fitting and filter element
10	**Filter element**	Nominal filtration rating: 30 μm, 10 pcs. per set
11	**Body gasket**	Gasket integrated with the exhaust interference prevention valve, 10 pcs. per set
12	**Filter case**	Case body: Polycarbonate (Refer to the Specific Product Precautions on page 47.) Clear filter case: without a port for the pressure switch or sensor, Opaque filter case: with a port for the pressure switch or sensor
13	**Vacuum pressure switch assembly**	With 2 screws and 1 gasket
14	**Lead wire with connector**	—
15	**Pressure sensor assembly**	With 2 screws and 1 gasket
16	**High-noise reduction silencer case assembly**	With sound absorbing material (Part number: ZK2-SE4-6-A)
17	**Release lever**	10 pcs. per set
18	**Lock nut**	10 pcs. per set

chanhvinh.com

Replacement Parts for Single Unit / How to Order

Valve assembly

▶ p. 31 Construction ⑤

ZK2 – VA [A] [K] [5] [L] A – [ ] – A

❶ ❷ ❸ ❹ ❺

❶ Applicable system

A	Ejector system
P	Vacuum pump system

❷ Valve type

K	Supply valve: N.C., Release valve: N.C.
R	Supply valve: Self-holding release valve linked, Release valve: N.C.
J	Supply valve: N.C., Release valve: None

❸ Rated voltage

5	24 VDC
6	12 VDC

❹ Wiring

C	Manifold common wiring
L	Individual wiring: With connector assembly (Lead wire length: 300 mm)
LO	Individual wiring: Without connector assembly

❺ Other specifications

C	Vacuum pump system (Valve type R) PE port female thread specification (M3)
—	Specifications other than that listed above

Select the ZK2-VAAK□LOA-A for a switch with energy saving function.

Connector assembly

▶ p. 31 Construction ⑥


ZK2 – LV [W] [ ] – A


Applicable valve type

W	Valve type K/R
S	Valve type J

Lead wire length

—	300 mm
6	600 mm
10	1000 mm
20	2000 mm
30	3000 mm

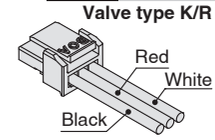

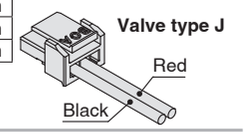

One-touch fitting assembly (Purchasing order is available in units of 10 pieces.)

▶ p. 31 Construction ⑦

KJH [06] – C2

Port size

06	Ø 6 One-touch fitting (Straight)	Metric size
07	Ø 1/4" One-touch fitting (Straight)	Inch size

Sound absorbing material (10 pcs. per set)

▶ p. 31 Construction ⑧

ZK2 – SE1 – [1] – A

Sound absorbing material hole diameter

1	300 μm

Vacuum port adapter assembly (Purchasing order is available in units of 1 piece.)

▶ p. 31 Construction ⑨

ZK2 – VA1S [8] – A

One-touch fitting size

6	Ø 6 One-touch fitting	Metric size
8	Ø 8 One-touch fitting	
7	Ø 1/4" One-touch fitting	Inch size
9	Ø 5/16" One-touch fitting	

Filter element (10 pcs. per set)

▶ p. 31 Construction ⑩

ZK2 – FE1 – [3] – A

Nominal filtration rating

3	30 μm

Body gasket*1 (10 pcs. per set)

▶ p. 31 Construction ⑪

ZK2 – BG5 – [1] – A

Applicable type

1	One check valve type (All specifications other than vacuum switch with energy saving function and exhaust interference prevention valve)
2	Two check valve type (Vacuum switch with energy saving function and exhaust interference prevention valve)

*1 When ZK 2 -BG 5 - 2 -A is mounted, the workpiece cannot be removed until vacuum is released.

Filter case*1

▶ p. 31 Construction ⑫

ZK2 – FC [ ] – A

Port for the pressure switch or sensor

Symbol	Port for the pressure switch or sensor	Filter case colour
P	With port (type with pressure switch or sensor)	Smoke
T	Without port (type without pressure switch or sensor)	Clear

*1 Vacuum port adapter assembly is not included.

Pressure switch for vacuum assembly (With 2 mounting screws)

▶ p. 31 Construction ⑬

ZK2 – ZS [E] [B] [M] [G] [ ] – A

❶ ❷ ❸ ❹ ❺

❶ Rated pressure range and function

E	-101 to 0 kPa	Pressure switch for vacuum	Open collector 2 outputs
F	-100 to 100 kPa		
V	-100 to 100 kPa	Pressure switch for vacuum with energy saving function	Open collector 1 output

❷ Output

A	NPN
B	PNP


❸ Unit

—	Unit selection function
M	SI unit only*1

*1 Fixed unit: kPa

❹ Lead wire with connector

—	None	
G	With lead wire	When ❶ is E or F···For pressure switch for vacuum, Lead wire with connector (Length 2 m)
		When ❶ is V···For pressure switch for vacuum with energy saving function, Lead wire with connector (Length 2 m)

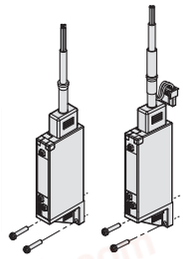

❺ Mounting*3

—	Mounted to the single unit
L	Mounted to the manifold

The length of the mounting screw ejector included in the package is different.

*3 When ordering an ejector without valve, select — for mounting.

Lead wire with connector

▶ p. 31 Construction ⑭

(When individual lead wire is necessary, order with the port number below.)

- **Lead wire with connector for pressure switch for vacuum**
  ZS – 39 – 5G
- **Lead wire with connector for pressure switch for vacuum with energy saving function**
  ZK2 – LW [B] 20 – A


Output

A	NPN open collector
B	PNP open collector

Pressure sensor assembly (With 2 mounting screws)

▶ p. 31 Construction ⑮

ZK2 – PS [1] [ ] – A



Rated pressure range

1	0 to –101 kPa, Output: 1 to 5 V, Accuracy: ± 2 % F.S.
3	–100 to 100 kPa, Output: 1 to 5 V, Accuracy: ± 2 % F.S.

Mounting*4

—	Mounted to the single unit
L	Mounted to the manifold

The length of the mounting screw ejector included in the package is different.

*4 When ordering an ejector without valve, select — for mounting.

High-noise reduction silencer case assembly

▶ p. 31 Construction ⑯

ZK2 – SC3 – [4] – A

Applicable nozzle size

4	For nozzle size 07, 10
6	For nozzle size 12, 15

Release lever (10 pcs. per set)

▶ p. 31 Construction ⑰

ZK2 – RL1 – A


Lock nut (10 pcs. per set)

▶ p. 31 Construction ⑱

ZK2 – LN1 – A

chanhvinh.com

Vacuum Unit/*ZK2□A Series*
Exploded View of Manifold

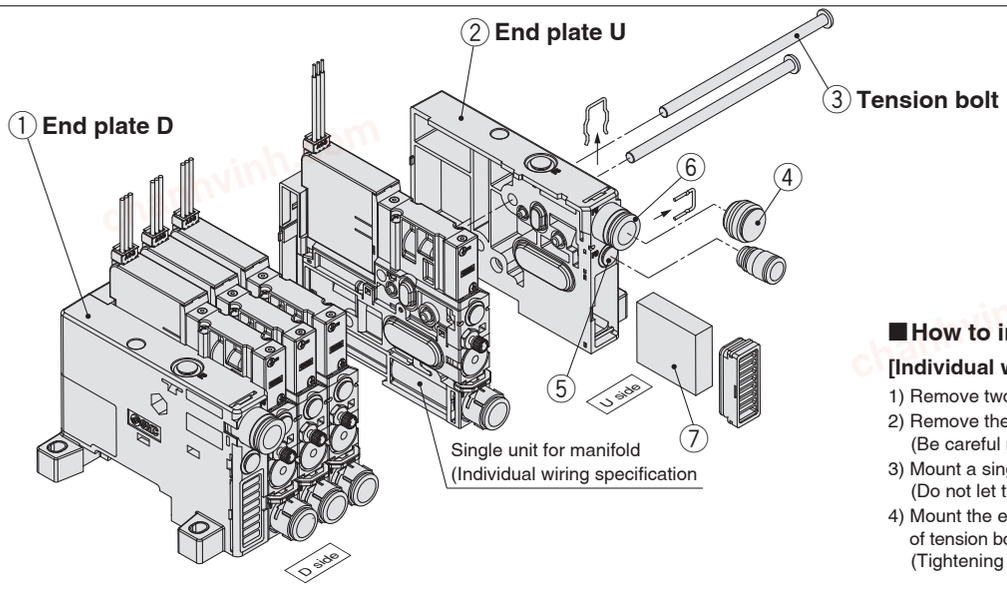

■How to increase manifold stations

[Individual wiring specifications]

1) Remove two tension bolts.
2) Remove the end plate U.
   (Be careful not to drop the gasket.)
3) Mount a single unit to the end surface of U side.
   (Do not let the gasket get caught.)
4) Mount the end plate U with the appropriate length of tension bolts for the number of stations required.
   (Tightening torque: 0.75 N·m)

Component Parts

No.	Description	Material	Note
1	**End plate D assembly**	Resin	HNBR, NBR and steel are also used.
2	**End plate U assembly**	Resin	Electroless nickel plated brass, resin, steel and NBR are used.

Replacement Parts

No.	Description	Note
3	**Tension bolt assembly**	2 pcs. per set
4	**Port plug assembly**	Plug for changing PV port to single side supply type (Common for mm and inch type)
5	**Port plug assembly**	Plug for changing PS or PD port to single side supply type (Common for mm and inch type)
6	**One-touch fitting assembly**	Metric size: Ø 8, Inch size: Ø 5/16"
7	**Sound absorbing material**	2 pcs. per set - Material: Non-woven cloth (Silencer cover is not included.)
8	**DIN rail**	Refer to Dimensions (Refer to pages 39 to 41) for the recommended length for each number of manifolds stations.
9	**Connector housing assembly**	Available connector is even number only. (If you need a connector for odd number, specify the connector of the number you need + 1 station.)

Replacement Parts for Manifold / How to Order

Manifold end plate assembly

▶ Exploded View ①, ②, ③

Assembly number including ①End plate D, ②End plate U and ③Tension bolt assembly (Used for the maintenance of the end plate)

ZZK2 [ ] – A

● Manifold end plate assembly

Refer to pages 14, 17, 43-2, and 43-4 for the manifold part number.

Tension bolt assembly (2 pcs. per set)

▶ Exploded View ③

ZK2 – TB1 – [05] – A

● Applicable stations

01	For 1 station manifold
⋮	⋮
10	For 10 stations manifold

Port plug assembly

▶ Exploded View ④

(Purchasing order is available in units of 1 piece.)

VVQZ2000 – CP

Port plug assembly

▶ Exploded View ⑤

(Purchasing order is available in units of 1 piece.)

ZK2 – MP1C6 – A

One-touch fitting assembly (Purchasing order is available in units of 10 pieces.)

▶ Exploded View ⑥

VVQ1000 – 51A – [C8]

● Port size

C8	Ø 8 One-touch fitting
N9	Ø 5/16" One-touch fitting

Sound absorbing material (2 pcs. per set)

▶ Exploded View ⑦

ZK2 – SE2 – 1 – A


DIN rail

AXT100 – DR – [5]

● Length symbol

1	to	40
↓		↓
L = 23	to	L = 510.5

[L = 12.5 x ■ + 10.5]
■: Length symbol 1 to 40

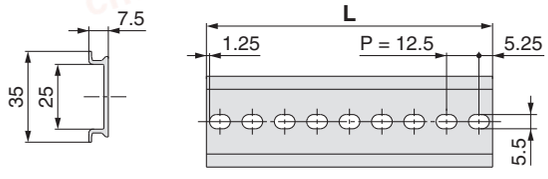



* When selecting the number, refer to "L6" in dimension table on pages 39 to 41.

L Dimensions

No.	1	2	3	4	5	6	7	8	9	10
L Dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L Dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L Dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L Dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

chanhvinh.com

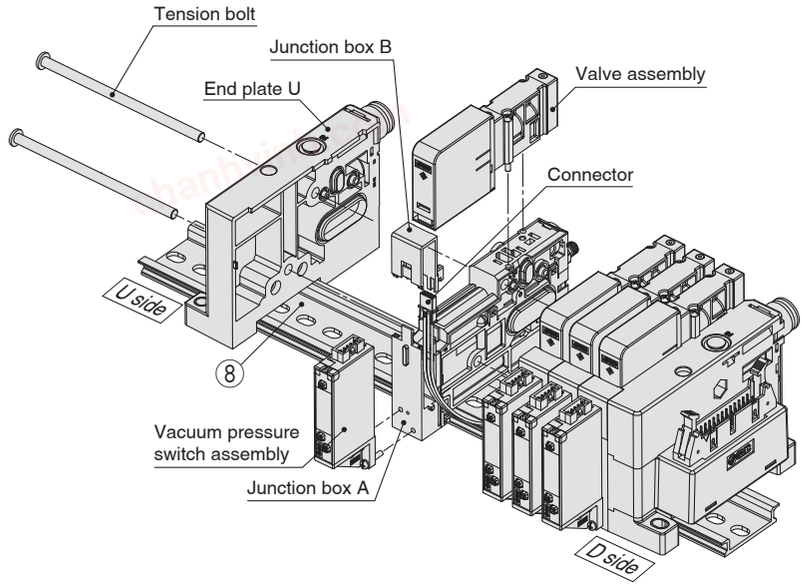

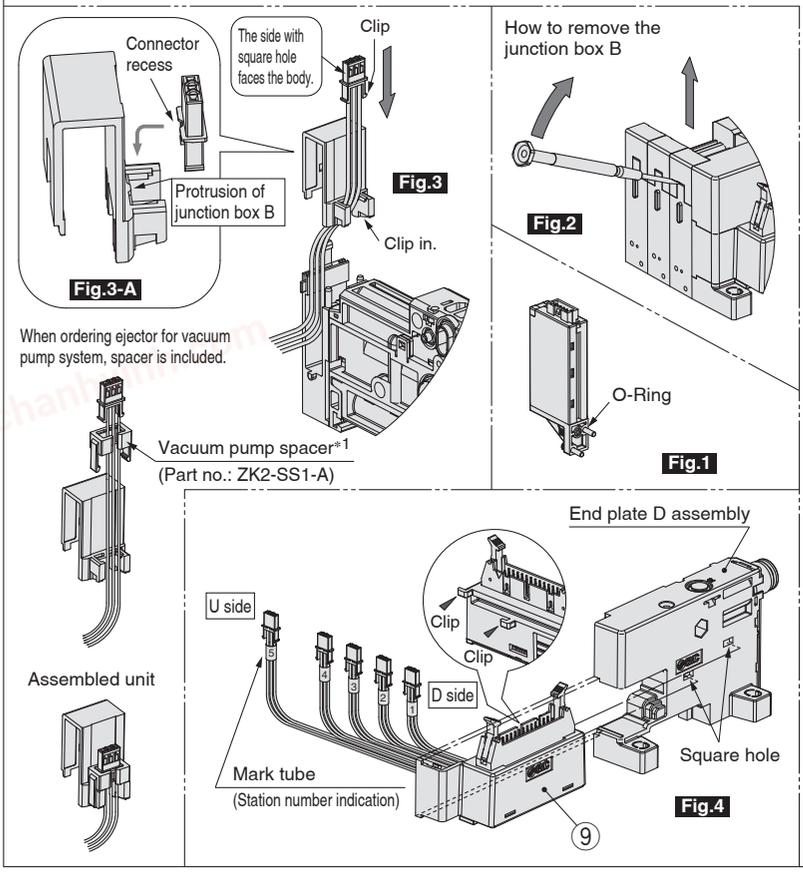

■ How to increase manifold stations

[To increase the number of stations from odd number (1, 3, 5, 7, 9) in common wiring type to even number (2, 4, 6, 8, 10)]

(Common wiring of odd number station has a vacant connector for one station. Easy to add a station.)

1) Remove the tension bolt.
2) Remove the end plate U.
3) Remove the valve assembly of a single unit for extra station(s) for manifold.
4) Remove the switch assembly if it is present. (Be careful not to drop the O-ring. Refer to **Fig.1**)
5) Remove the junction box B (top) using a precision screwdriver. (Refer to **Fig.2**)
6) Mount the extra connector to the junction box B. (Refer to **Fig.3**) (Engage the recess of the connector and the protrusion of the junction box B. (Refer to **Fig.3-A**)
7) Mount a single unit for extra station(s) for manifold to the end surface of U side. (Do not let the gasket or lead wire get caught.)
8) Mount the end plate U with the appropriate length of tension bolts for the number of stations required. (Tightening torque: 0.75 N·m.)
9) Mount the junction box B to the junction box A.
10) Assemble the valve assembly. (Tightening torque: 0.15 N·m)
11) For products with a switch, mount the switch assembly. (Be careful not to drop the O-ring. Tightening torque: 0.08 to 0.10 N·m)

[To increase the number of stations from even number to odd number, or increase two stations or more]

1) Remove the valve assembly for all stations. (Single unit for extra station is also removed.)
2) Remove the switch assembly if it is present. (Be careful not to drop the O-ring. Refer to **Fig.1**)
3) Remove the junction box B (top) for all stations using a precision screwdriver. (Refer to **Fig.2**) (Remove the junction box B from D side.)
4) Remove all connectors mounted to the junction box B. (Be careful not to break the connector clip.)
5) Remove the tension bolt.
6) Remove the end plate D assembly.
7) Remove the connector housing assembly from the end plate D assembly. (Refer to **Fig.4**)
8) Mount the connector housing assembly for extra station(s) to the end plate D assembly. (Refer to **Fig.4**) (Insert two clips of the housing mounting surface to the square holes of the end plate, and slide the connector housing assembly.)
9) Remove the end plate U. (Be careful not to drop the gasket.)
10) Mount a single unit for extra station(s) for manifold to the end surface of U side. Do not let the gasket get caught.
11) Mount the end plate U and D with the appropriate length of tension bolts for the number of stations required. (Tightening torque: 0.75 N·m.)
12) Mount the connector for all stations to the junction box B. (Refer to **Fig.3**) (Engage the recess of the connector and the protrusion of the junction box B. (Refer to **Fig.3-A**)
13) Mount the junction box A to the junction box B. Push the wires down the side and mount the junction box A to the junction box B following a decreasing mark tube numbers from U side. (Do not let the lead wire get caught.)
14) Assemble the valve assembly. (Tightening torque: 0.15 N·m)
15) For products with a switch, mount the switch assembly. (Be careful not to drop the O-ring. Tightening torque: 0.08 to 0.10 N·m)

*1 When adding a vacuum pump system, the vacuum pump spacer for extra station is required separately.

Connector housing assembly

▶ Exploded View ⑨

ZK2 − CH 2 04 − A

Applicable stations

02	For 2 stations manifold
04	For 4 stations manifold
06	For 6 stations manifold
08	For 8 stations manifold
10	For 10 stations manifold

Connector type


1	D sub-connector (25 pins)
2	Flat ribbon cable connector (26 pins)


■ Plug (For One-touch fitting)

(Purchasing order is available in units of 10 pieces.)

Mounted onto ports which are not used (PV, PS, PD, etc.)

KQ2P − 06



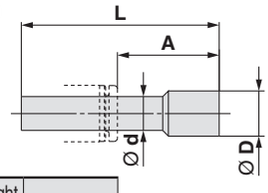

Models and Dimensions

Symbol	Applicable size Ø d	A	L	Ø D	Weight [g]	Note
06	Ø 6	18	35	8	1	White
08	Ø 8	20.5	39	10	2	White
07	Ø 1/4"	18	35	8.5	1	Orange
09	Ø 5/16"	20.5	39	10	2	Orange


chanhvinh.com

Dimensions: Single Unit


ZK2 A/B/G □ K/R □ NL2A-□

Ejector system, Single unit, With supply valve/release valve, Without pressure sensor/switch


For high-noise reduction silencer exhaust

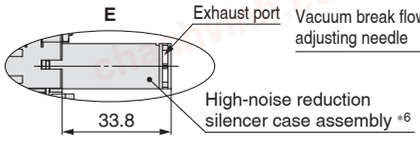



For port exhaust

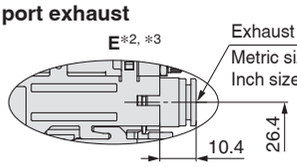

For screwdriver operation type long lock nut

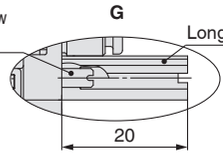

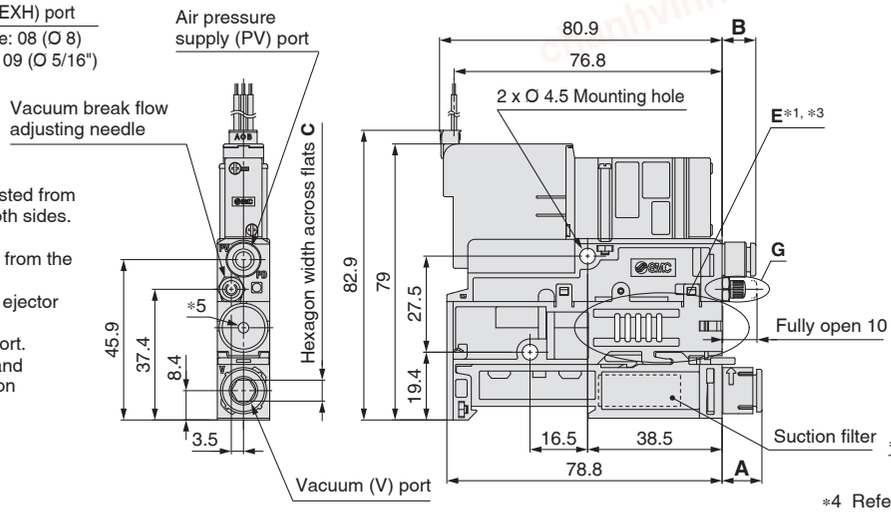

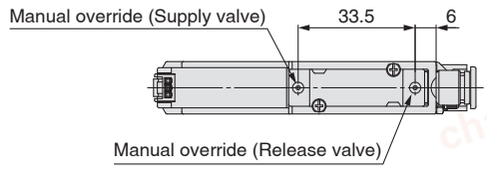

*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
*2 For port exhaust type, air is exhausted from the One-touch fitting.
*3 Pilot pressure exhaust is common with ejector exhaust.
*5 Nozzle size 12 and 15 have exhaust port.
*6 Refer to page 46 for the part number and maintenance of the high-noise reduction silencer case assembly.

*4 Refer to page 38 for dimensions with a mounting bracket.


PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3

V port type			A	C
Metric size	06	Ø 6	8.25	4
	08	Ø 8	11.4	6
Inch size	07	Ø 1/4"	9.7	4.76
	09	Ø 5/16"	11.4	6


ZK2P00 K/R □ NL2A-□


Vacuum pump system, Single unit, With supply valve/release valve, Without pressure sensor/switch

For screwdriver operation type long lock nut

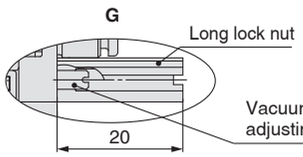

PE port female thread specification

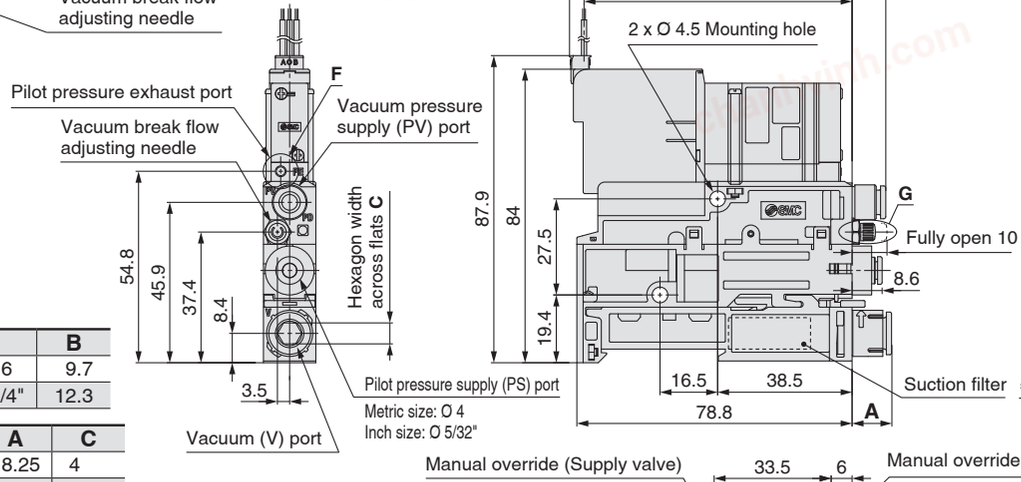

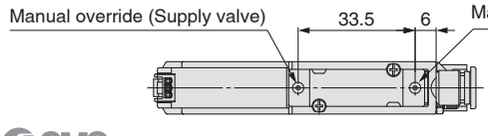

*1 Refer to page 38 for dimensions with a mounting bracket.

PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3


V port type			A	C
Metric size	06	Ø 6	8.25	4
	08	Ø 8	11.4	6
Inch size	07	Ø 1/4"	9.7	4.76
	09	Ø 5/16"	11.4	6

chanhvinh.com


Dimensions: Single Unit

ZK2 A/B/G □J□NL2A-□


Ejector system, Single unit, With supply valve, Without pressure sensor/switch

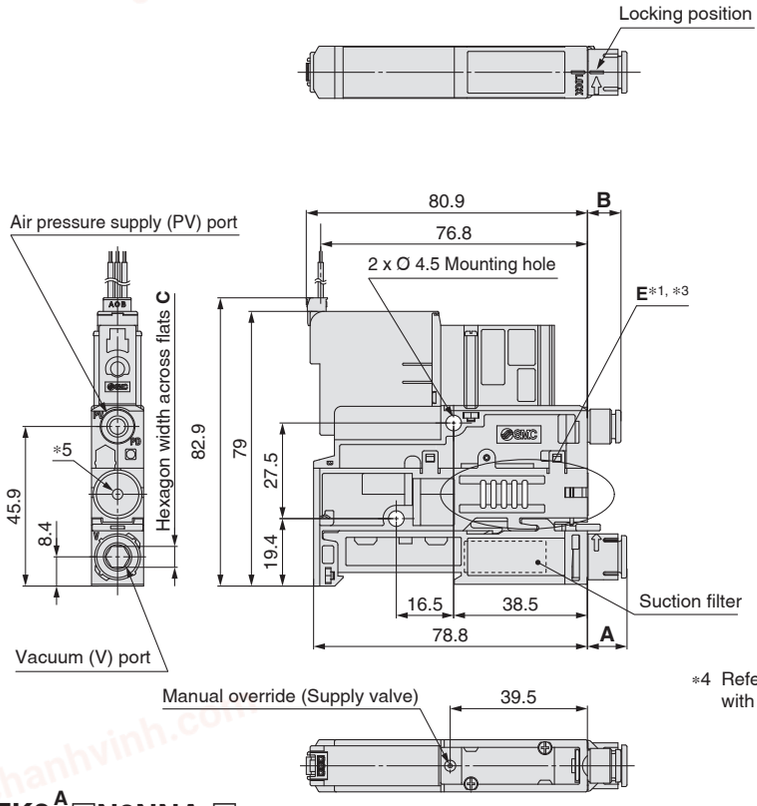

For high-noise reduction silencer exhaust

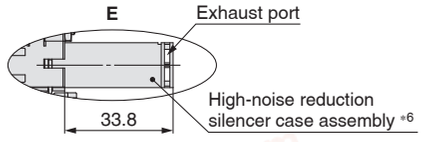

For port exhaust

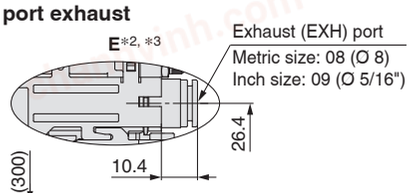

*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
*2 For port exhaust type, air is exhausted from the One-touch fitting.
*3 Pilot pressure exhaust is common with ejector exhaust.
*5 Nozzle size 1 2 and 1 5 have exhaust port.
*6 Refer to page 4 6 for the part number and maintenance of the high-noise reduction silencer case assembly.


*4 Refer to page 38 for dimensions with a mounting bracket.

PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3


V port type			A	C
Metric size	06	Ø 6	8.25	4
	08	Ø 8	11.4	6
Inch size	07	Ø 1/4"	9.7	4.76
	09	Ø 5/16"	11.4	6

ZK2 A/B/G □N0NNA-□


Ejector system, Single unit, Without valve, Without pressure sensor/switch

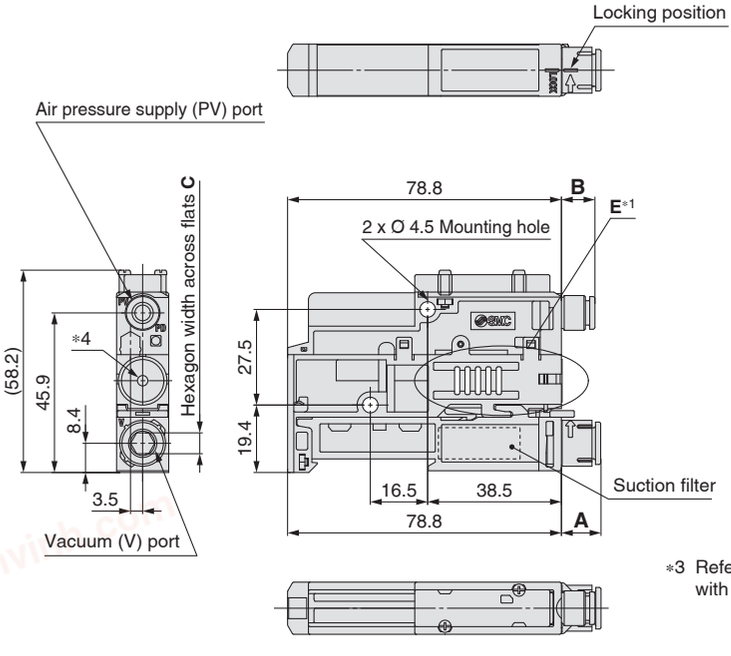

For high-noise reduction silencer exhaust

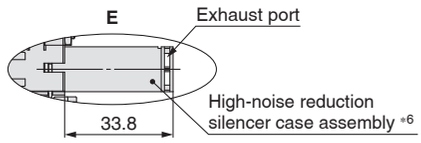

For port exhaust

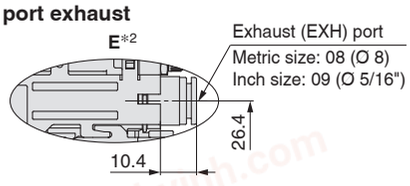

*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
*2 For port exhaust type, air is exhausted from the One-touch fitting.
*4 Nozzle size 1 2 and 1 5 have exhaust port.
*5 Refer to page 4 6 for the part number and maintenance of the high-noise reduction silencer case assembly.

*3 Refer to page 38 for dimensions with a mounting bracket.

PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3

V port type			A	C
Metric size	06	Ø 6	8.25	4
	08	Ø 8	11.4	6
Inch size	07	Ø 1/4"	9.7	4.76
	09	Ø 5/16"	11.4	6


chanhvinh.com

ZK2□A Series

Dimensions: Single Unit

ZK2 A/B/G □ K/R □ P/T LA-□

Ejector system, Single unit, With supply valve/release valve, With pressure sensor

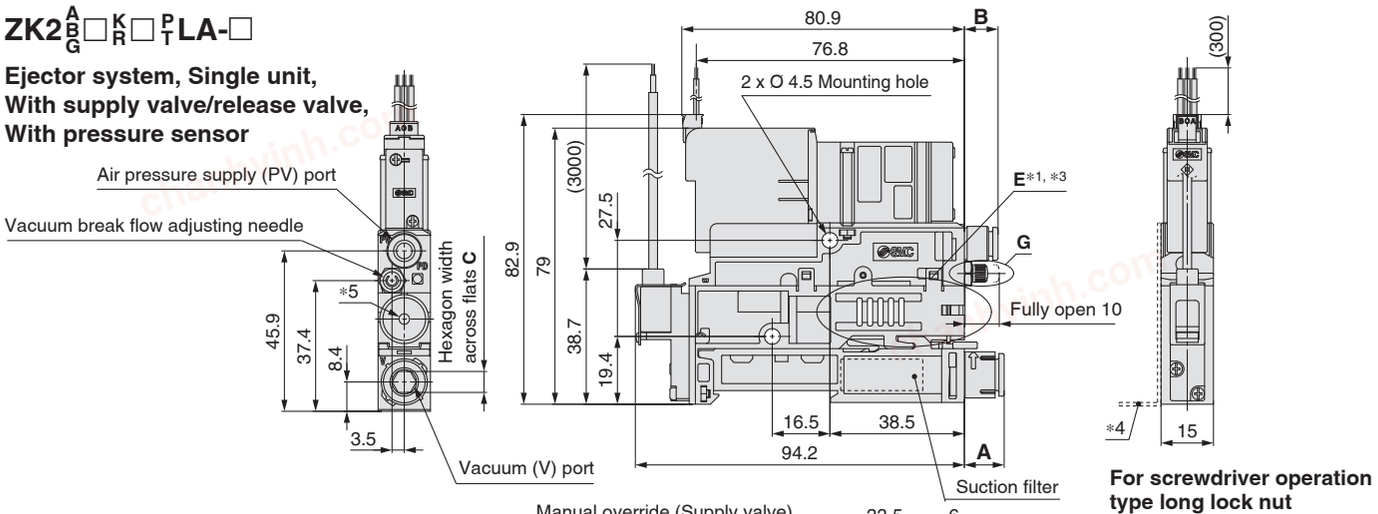


PV port type			B
Metric size	06	O 6	9.7
Inch size	07	O 1/4"	12.3


V port type			A	C
Metric size	06	O 6	8.25	4
	08	O 8	11.4	6
Inch size	07	O 1/4"	9.7	4.76
	09	O 5/16"	11.4	6

*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
*2 For port exhaust type, air is exhausted from the One-touch fitting.
*3 Pilot pressure exhaust is common with ejector exhaust.
*4 Refer to page 38 for dimensions with a mounting bracket.
*5 Nozzle size 12 and 15 have exhaust port.
*6 Refer to page 4 6 for the part number and maintenance of the high-noise reduction silencer case assembly.


For screwdriver operation type long lock nut

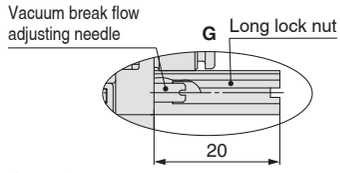

For high-noise reduction silencer exhaust

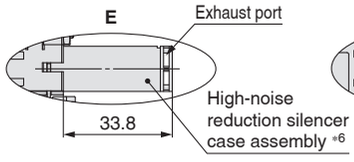


For port exhaust

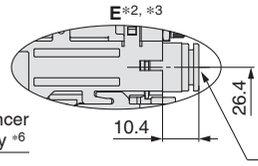

ZK2 A/B/G □ K/R □□ LA-□ A to J

Ejector system, Single unit, With supply valve/release valve, With pressure switch

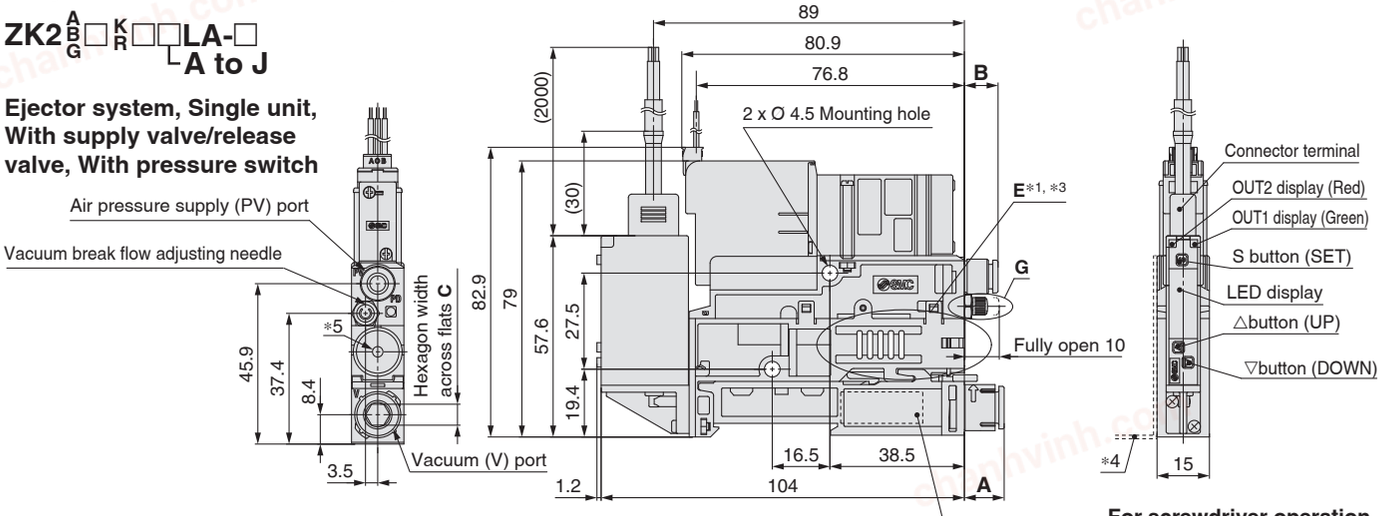


PV port type			B
Metric size	06	O 6	9.7
Inch size	07	O 1/4"	12.3


V port type			A	C
Metric size	06	O 6	8.25	4
	08	O 8	11.4	6
Inch size	07	O 1/4"	9.7	4.76
	09	O 5/16"	11.4	6

*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
*2 For port exhaust type, air is exhausted from the One-touch fitting.
*3 Pilot pressure exhaust is common with ejector exhaust.
*4 Refer to page 38 for dimensions with a mounting bracket.
*5 Nozzle size 12 and 15 have exhaust port.
*6 Refer to page 4 6 for the part number and maintenance of the high-noise reduction silencer case assembly.


For screwdriver operation type long lock nut

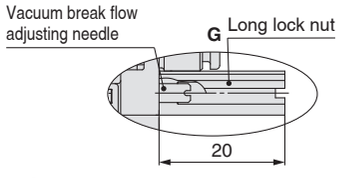

For high-noise reduction silencer exhaust

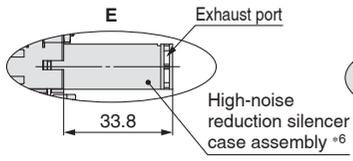

For port exhaust

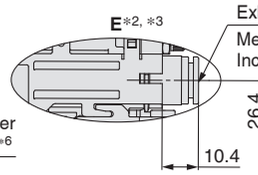


chanhvinh.com

Dimensions: Single Unit


ZK2 A/B/G □K□□WA-□ └K to S


Ejector system, Single unit, With supply valve/release valve, Pressure switch with energy saving function

For high-noise reduction silencer exhaust

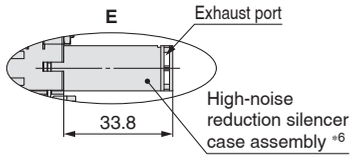



For port exhaust

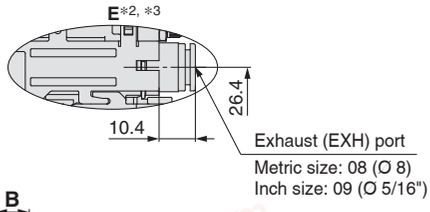

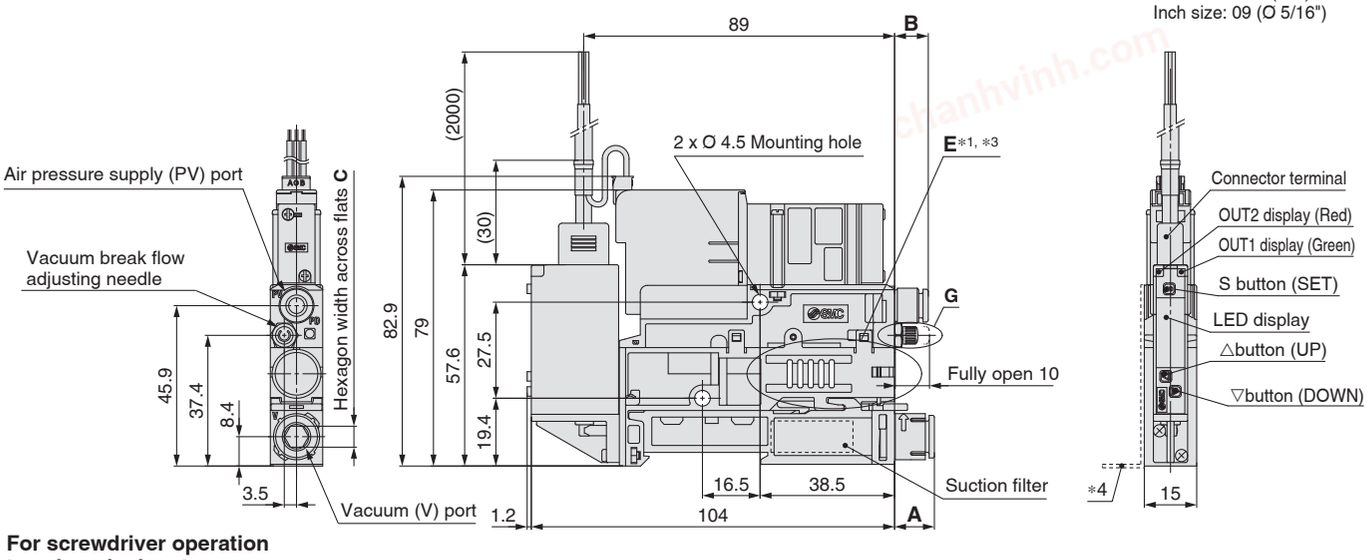

For screwdriver operation type long lock nut

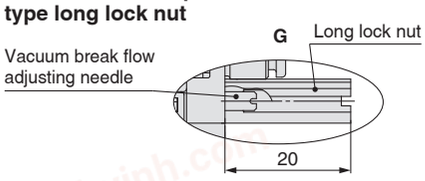

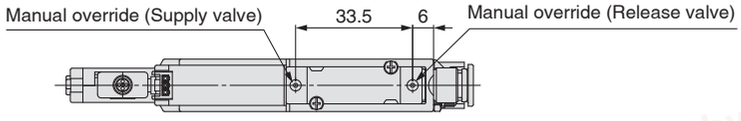



V port type			A	C
Metric size	06	Ø 6	8.25	4
	08	Ø 8	11.4	6
Inch size	07	Ø 1/4"	9.7	4.76
	09	Ø 5/16"	11.4	6

PV port type			B
Metric size	06	Ø 6	9.7
Inch size	07	Ø 1/4"	12.3

*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
*2 For port exhaust type, air is exhausted from the One-touch fitting.
*3 Pilot pressure exhaust is common with ejector exhaust.
*4 Refer to the following for dimensions with a mounting bracket.
*5 Refer to page 4 6 for the part number and maintenance of the high-noise reduction silencer case assembly.

With bracket

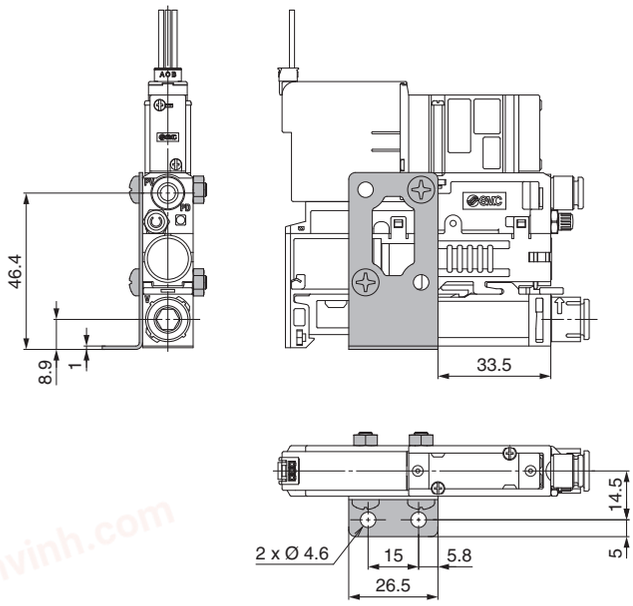

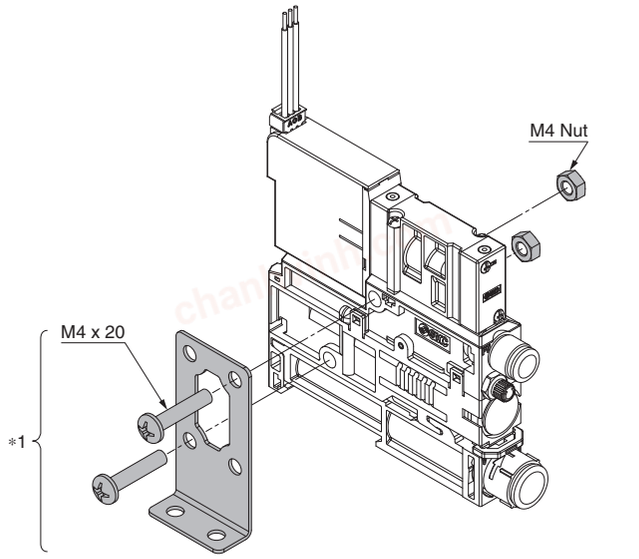

*1 Mounting bracket for single unit (Option), [Nuts and bolts are included.]
Part number: ZK2-BK1-A


chanhvinh.com


ZK2□A Series


Dimensions: Manifold Individual Wiring


ZZK2□A- P/A□L


Ejector system, Vacuum pump system, Individual wiring manifold, With supply valve/release valve, Without pressure sensor/switch

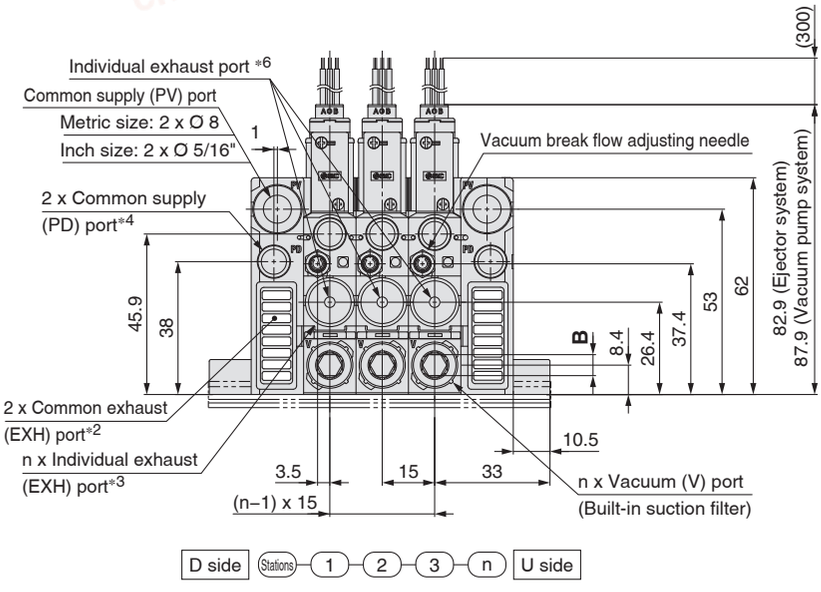


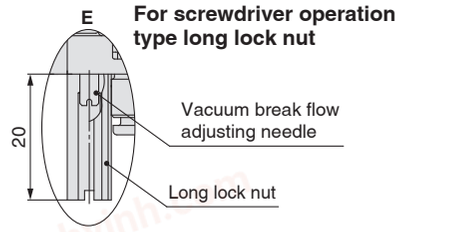

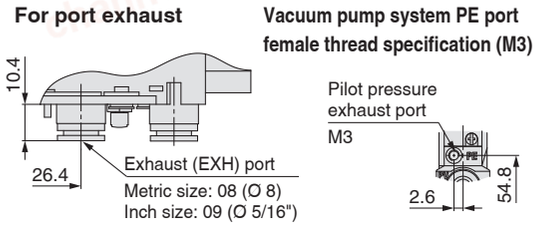

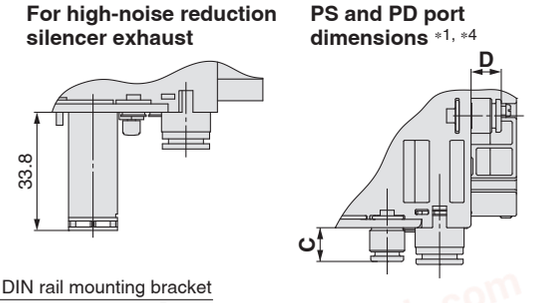

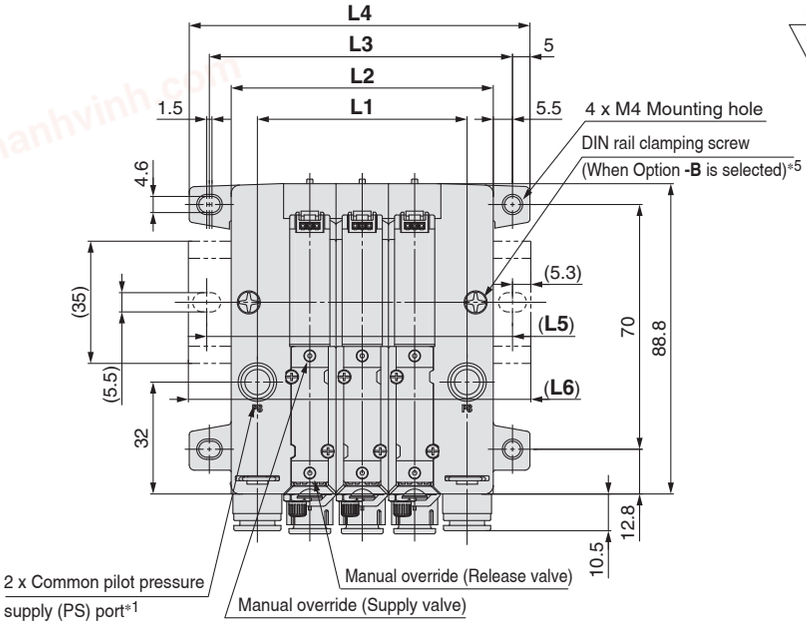

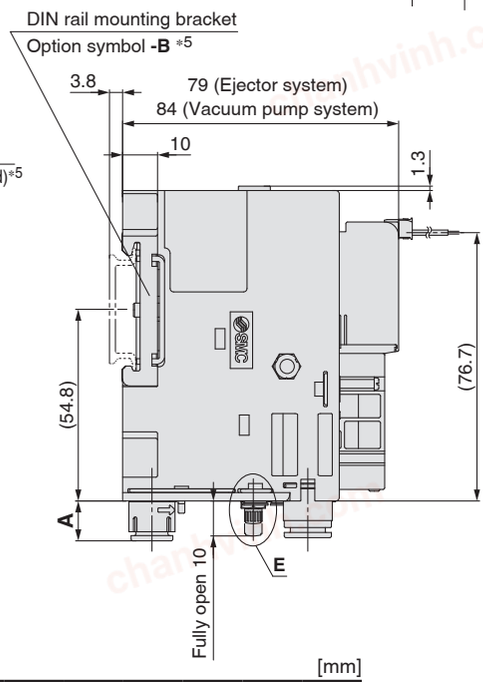

[mm]

Port type		A	Hexagon width across flats B	C	D
Metric size	06	8.3	4	9.7	8.7
	08	11.4	6	—	—
Inch size	07	9.7	4.76	12.3	11.3
	09	11.4	6	—	—

Stations	1	2	3	4	5	6	7	8	9	10
L1	30	45	60	75	90	105	120	135	150	165
L2	45	60	75	90	105	120	135	150	165	180
L3	56.8	71.8	86.8	101.8	116.8	131.8	146.8	161.8	176.8	191.8
L4	67.5	82.5	97.5	112.5	127.5	142.5	157.5	172.5	187.5	202.5
L5	62.5	75	87.5	112.5	125	137.5	150	162.5	187.5	200
L6	73	85.5	98	123	135.5	148	160.5	173	198	210.5


*1 Common pilot pressure supply (PS) port is available for vacuum pump system or option L (Manifold individual supply specification). (mm: O 6 inch: O 1/4")
*2 Vacuum pump system with individual exhaust port type does not have exhaust port.
*3 When individual exhaust port type is selected (Body type: F)
*4 Only when common PD port type option (Symbol: -D) is selected (mm: O 6 inch: O 1/4")
*5 To fix the manifold to DIN rail, select an option for the manifold model number.
*6 For complex exhaust type, air is also exhausted from the individual exhaust port of each station in addition to the common exhaust. (Ejector system)


chanhvinh.com


Dimensions: Manifold D-sub Connector


ZZK2□A-$^{P}_{A}$□F


Ejector system, Vacuum pump system, Common wiring manifold, With supply valve/release valve, With pressure sensor

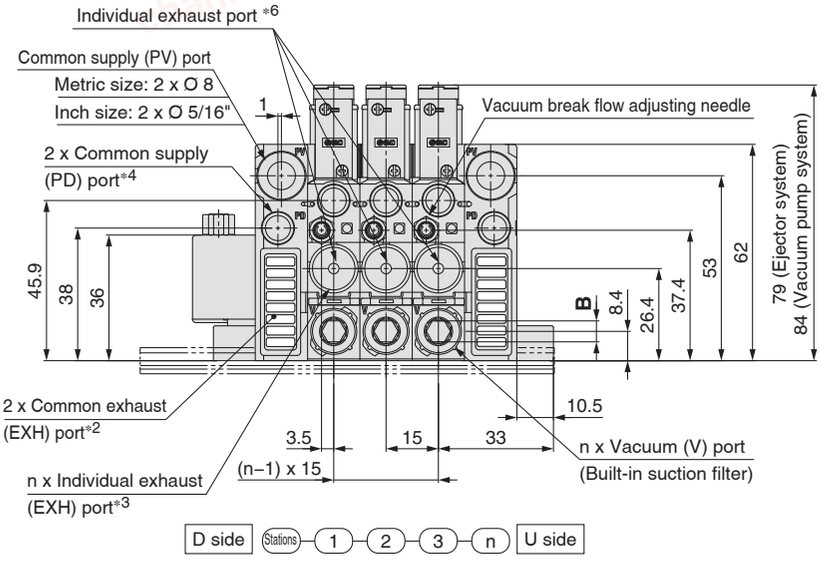


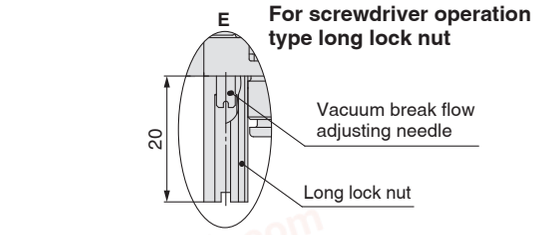

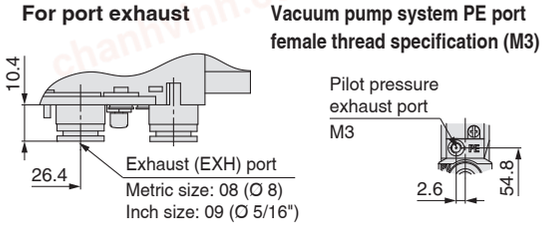

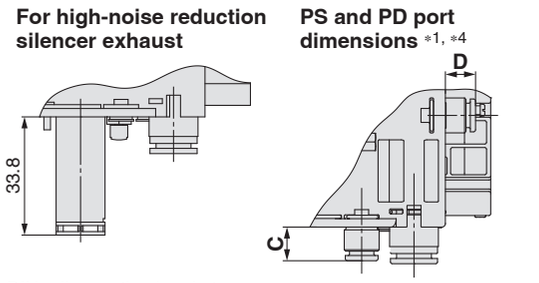

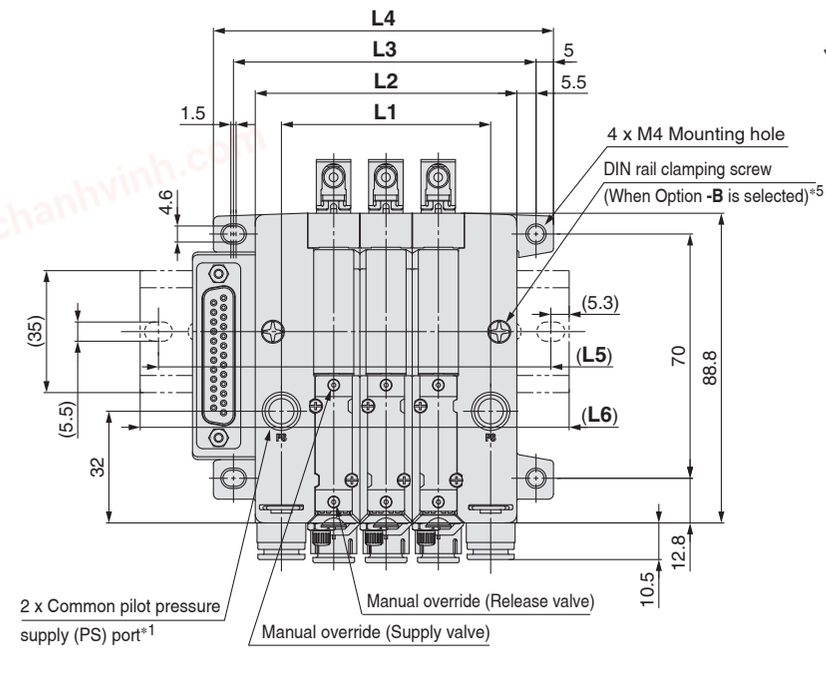

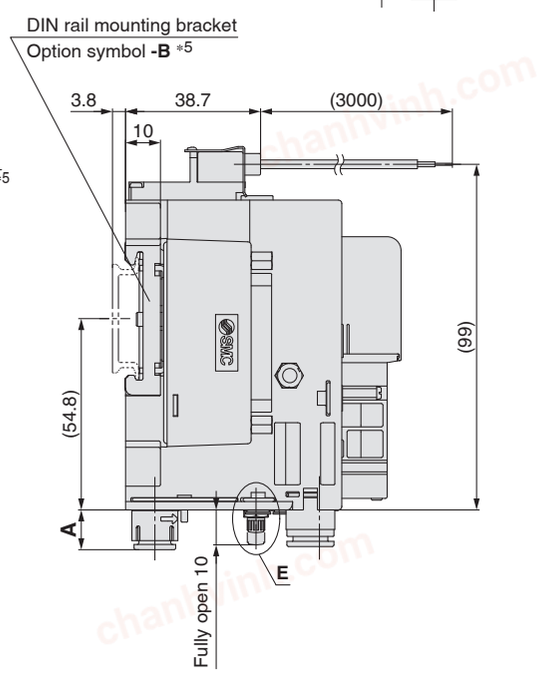

[mm]

Port type		A	Hexagon width across flats B	C	D
Metric size	06	8.3	4	9.7	8.7
	08	11.4	6	—	—
Inch size	07	9.7	4.76	12.3	11.3
	09	11.4	6	—	—

Stations	1	2	3	4	5	6	7	8	9	10
L1	30	45	60	75	90	105	120	135	150	165
L2	45	60	75	90	105	120	135	150	165	180
L3	56.8	71.8	86.8	101.8	116.8	131.8	146.8	161.8	176.8	191.8
L4	73.5	88.5	103.5	118.5	133.5	148.5	163.5	178.5	193.5	208.5
L5	75	100	112.5	125	137.5	150	175	187.5	200	212.5
L6	85.5	110.5	123	135.5	148	160.5	185.5	198	210.5	223

*1 Common pilot pressure supply (PS) port is available for vacuum pump system or option L (Manifold individual supply specification). (mm: O 6 inch: O 1/4")
*2 Vacuum pump system with individual exhaust port type does not have exhaust port.
*3 When individual exhaust port type is selected (Body type: F)
*4 Only when common PD port type option (Symbol: -D) is selected (mm: O 6 inch: O 1/4")
*5 To fix the manifold to DIN rail, select an option for the manifold model number.
*6 For complex exhaust type, air is also exhausted from the individual exhaust port of each station in addition to the common exhaust. (Ejector system)


chanhvinh.com


ZK2□A Series


Dimensions: Manifold Flat Ribbon Cable


ZZK2□A-$^{P}_{A}$□P


Ejector system, Common wiring manifold, With supply valve/release valve, With pressure switch

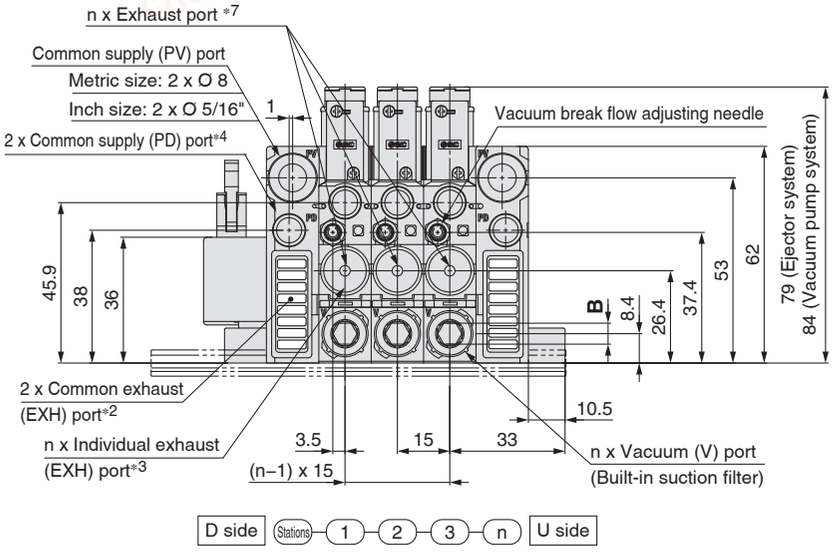


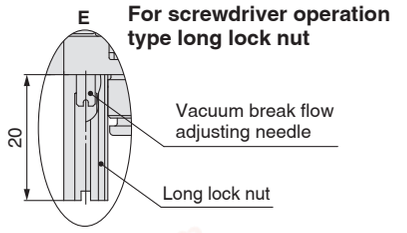


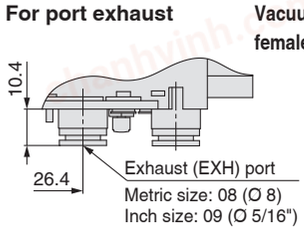


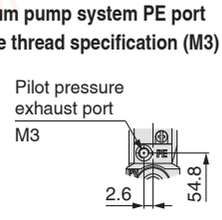

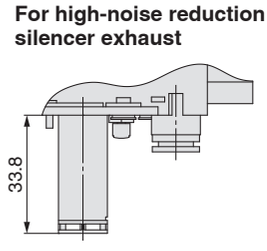

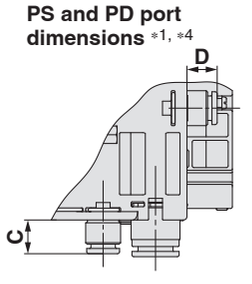

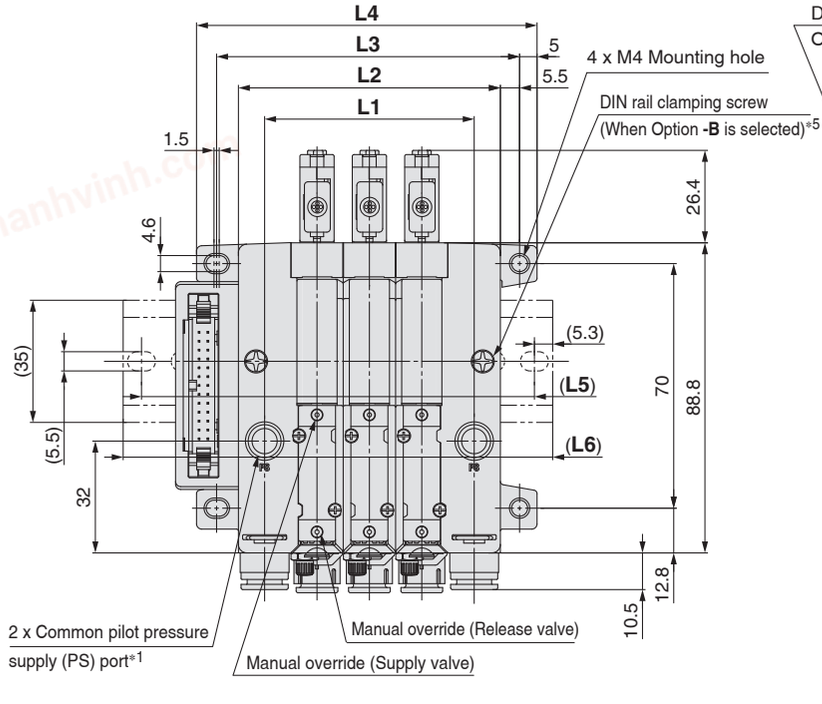

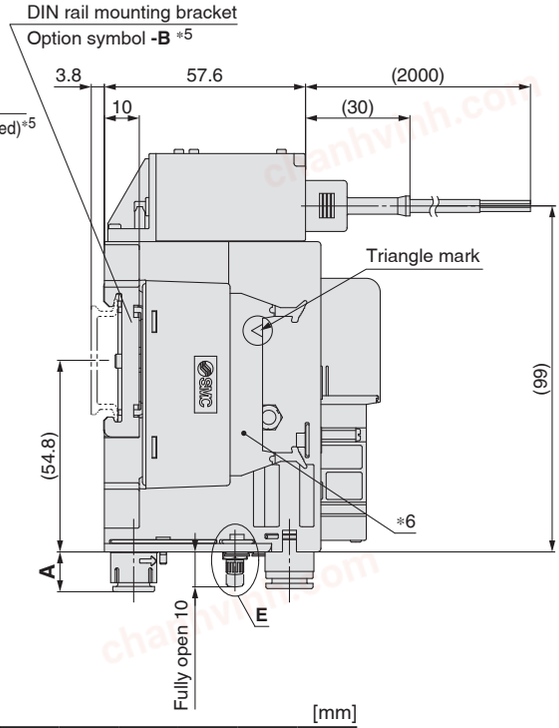

[mm]

Port type		A	Hexagon width across flats B	C	D
Metric size	06	8.3	4	9.7	8.7
	08	11.4	6	—	—
Inch size	07	9.7	4.76	12.3	11.3
	09	11.4	6	—	—


Stations	1	2	3	4	5	6	7	8	9	10
L1	30	45	60	75	90	105	120	135	150	165
L2	45	60	75	90	105	120	135	150	165	180
L3	56.8	71.8	86.8	101.8	116.8	131.8	146.8	161.8	176.8	191.8
L4	73.5	88.5	103.5	118.5	133.5	148.5	163.5	178.5	193.5	208.5
L5	75	100	112.5	125	137.5	150	175	187.5	200	212.5
L6	85.5	110.5	123	135.5	148	160.5	185.5	198	210.5	223

*1 Common pilot pressure supply (PS) port is available for vacuum pump system or option L (Manifold individual supply specification). (mm: O 6 inch: O 1/4")
*2 Vacuum pump system with individual exhaust port type does not have exhaust port.
*3 When individual exhaust port type is selected (Body type: F)
*4 Only when common PD port type option (Symbol: -D) is selected (mm: O 6 inch: O 1/4")
*5 To fix the manifold to DIN rail, select an option for the manifold model number.
*6 Applicable connector: Connector for flat ribbon cable (26P)(MIL-C-83503 compliant)
*7 For complex exhaust type, air is also exhausted from the individual exhaust port of each station in addition to the common exhaust. (Ejector system)

chanhvinh.com

Electrical Wiring Specifications


D-sub Connector

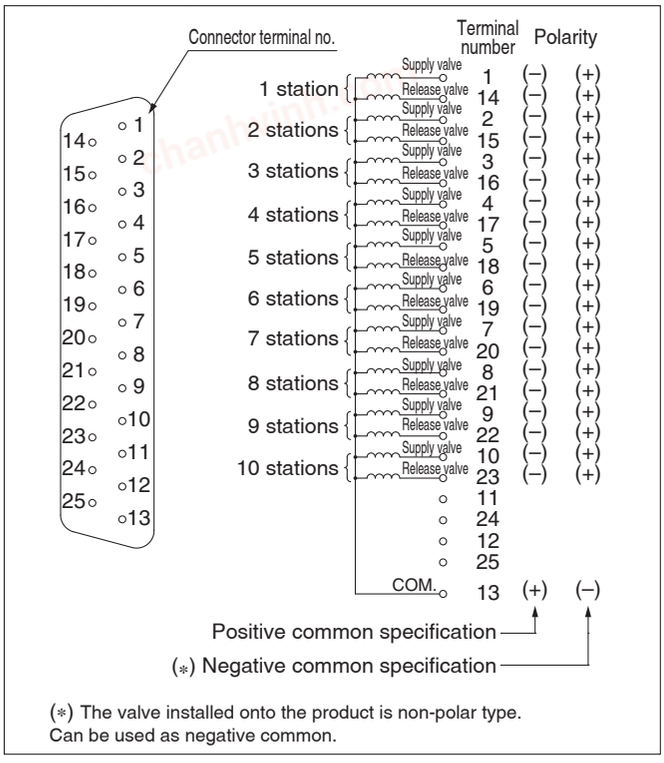

(∗) The valve installed onto the product is non-polar type.
Can be used as negative common.

A D-sub connector (25P) conforming to MIL standards is used.









Flat Ribbon Cable Connector

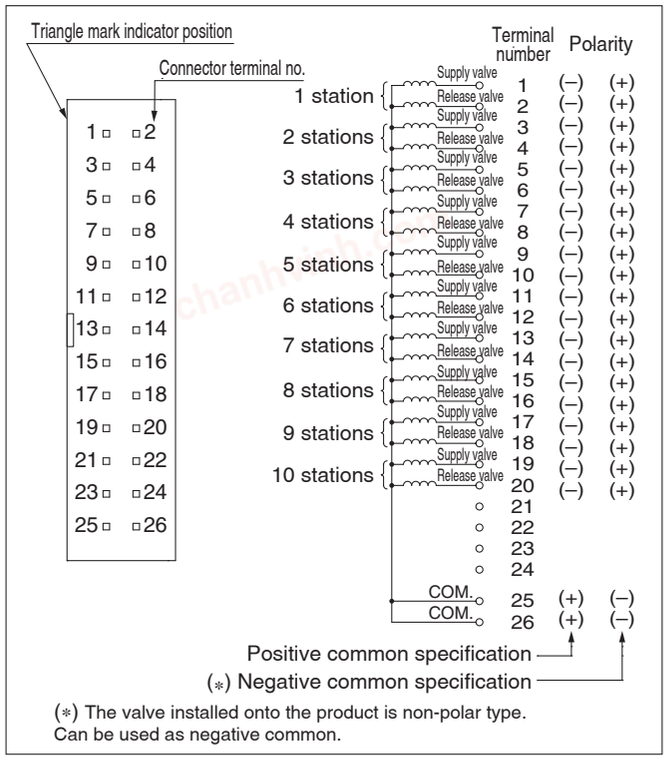

(∗) The valve installed onto the product is non-polar type.
Can be used as negative common.

A flat ribbon cable connector (26P) conforming to MIL standards is used.

Optional Specifications/Functions/Applications

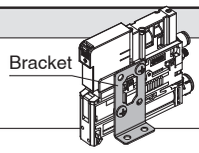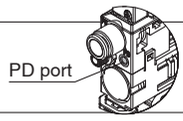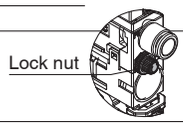
Symbol	Type		Function/Application
B	Mounting bracket for single unit (nuts and bolts are included)		· Use when a single unit is mounted to the floor in an upright position is requested. (When ordering only bracket, refer to page 38.)
C	Vacuum pump system PE port female thread specification (M3)		· Use for pilot pressure exhaust piping (Standard vacuum pump system is released to the atmosphere.)
D	With individual release pressure supply (PD) port (M3)		· Use when supply pressure for vacuum release is individually requested.
E	Vacuum break flow adjusting needle — Screwdriver operation type long lock nut		· Used when the port position is close to the manifold individual supply and the needle adjustment operation is difficult
J	Vacuum break flow adjusting needle — Round lock nut		· Thicker than standard hexagon type. More suitable for hand tightening. · Round lock nut improves operability when manifold, vacuum pump system, or exhaust port type is used.
K	Vacuum break flow adjusting needle — Screwdriver operation type		· Slotted type improves fine adjustment performance when manifold, vacuum pump system, or exhaust port type is used.
L	Manifold individual supply specification		· Adjust the supply pressure individually for manifold in order to adjust the vacuum pressure reached by each ejector.
P	With manifold common release pressure supply (PD) port		· When selecting “D” (with common release pressure supply (PD) port) for manifold option, supplying a pressure which is different from for common PV to common PD is requested.
W	With exhaust interference prevention valve		· When ejectors are operated individually, exhausted air may flow backward from the V port of ejectors that are turned off. Exhaust interference prevention valve prevents backflow.

chanhvinh.com

Cable Assembly

D-sub Connector

AXT100-DS25- 015 / 030 / 050

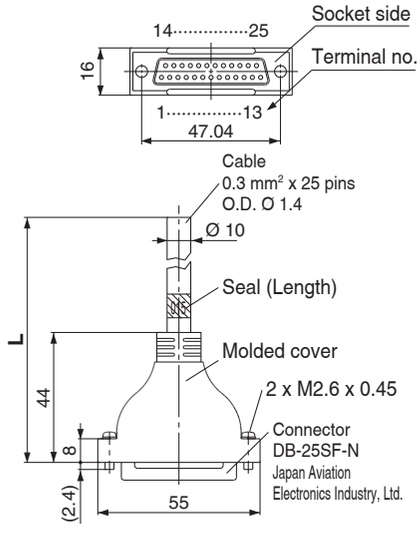

D-sub connector cable assembly
Wire Colour by Terminal Number

Terminal number	Lead wire colour	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Grey	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Grey	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Grey	Red
24	Black	White
25	White	None

D-sub Connector Cable Assembly (Option)

Cable length (**L**)	Assembly part number	Note
1.5 m	AXT100-DS25-015	Cable 0.3 mm² x 25 cores
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25-pin type with female connector conforming to MIL-C-24308.
* Cannot be used for movable wiring

Electrical Characteristics

Item	Property
Conductor resistance Ω/km, 20 °C	65 or less
Voltage limit V, 1 min, AC	1000
Insulation resistance MΩ/km, 20 °C	5 or more


Connector manufacturer's example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

* The minimum bending inner radius of D-sub connector cable is 20 mm.

Flat Ribbon Cable Connector

AXT100-FC26- 1 / 2 / 3

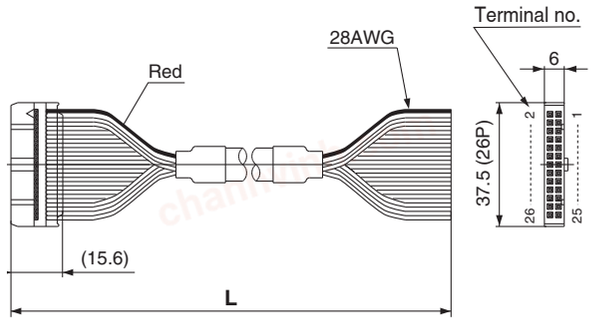

Flat Ribbon Cable Connector Assembly (Option)

Cable length (**L**)	Assembly part number
	26P
1.5 m	AXT100-FC26-1
3 m	AXT100-FC26-2
5 m	AXT100-FC26-3

* For other commercial connectors, use a 26-pin type with strain relief conforming to MIL-C-83503.
* Cannot be used for movable wiring

Connector manufacturer's example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

chanhvinh.com

Air Operated Specification **Vacuum Unit**

ZK2□A Series

Single Unit Ejector System

CE UKCA RoHS

Refer to pages 43-6 to 43-9 for the port layouts (including circuit examples) and page 43-14 for the dimensions.

How to Order

ZK2 [G] [12] [Q] [1] [B] [Y] A – [08] – [ ]


❶ ❷ ❸ ❹ ❺ ❻

Air Operated

Supply valve: N.C.
Release valve: N.C.

❶ Body/Exhaust type

Symbol	Body	Exhaust type
A	Single unit	Silencer exhaust*1
B		Port exhaust
G		High-noise reduction silencer exhaust

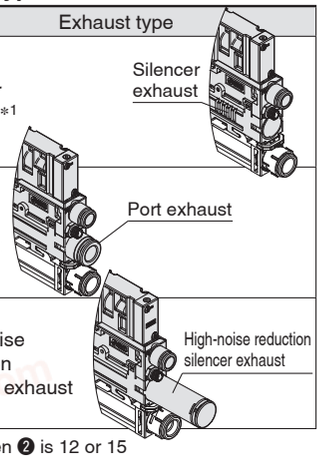

*1 With exhaust port when ❷ is 12 or 15

❷ Nominal nozzle size

Symbol	Nominal nozzle size
07	Ø 0.7
10	Ø 1.0
12	Ø 1.2
15	Ø 1.5

* Refer to page 43-5 for the standard supply pressure per nozzle diameter.

❸ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications: NPN (2 outputs)	Specifications: PNP (2 outputs)	Specifications: With unit selection function
A	Pressure switch for vacuum	0 to -101	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	0 to -101	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				

❹ Connector (Pressure switch for vacuum)


Symbol	For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
Y	●		Cannot be selected when ❸ is N
Y1	None		Cannot be selected when ❸ is P, T, or N
N	None		When "N" is selected for ❸

❺ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❻ Option*2

Symbol	Type	Note
—	Without option	—
B	Mounting bracket for single unit (nuts and bolts are included)	—
D	With individual release pressure supply (PD) port (M3)*3	—
E	Vacuum break flow adjusting needle: Screwdriver operation type long lock nut	Can be selected only for the combination of J and K
J	Vacuum break flow adjusting needle: Round lock nut	
K	Vacuum break flow adjusting needle: Screwdriver operation type	
W	With exhaust interference prevention valve	—

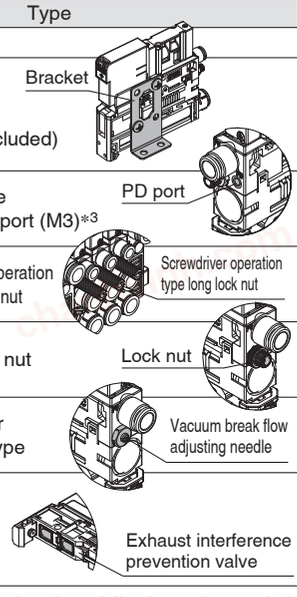

*2 When more than one option is selected, list the option symbols in alphabetical order. (Example -BJ)

*3 Use a One-touch fitting or barb fitting (M-3AU-4) for piping. (O.D.: Within Ø 6.2)

chanhvinh.com

Air Operated Specification Vacuum Unit

ZK2□A Series

For Manifold Ejector System

RoHS

Refer to pages 43-7 to 43-11 for the port layouts (including circuit examples) and page 43-16 for the dimensions.

How to Order

Single unit for manifold part number ZK2 H 12 Q 1 B Y A – 08 – □

❶ ❷ Q: Air Operated; 1: Supply valve: N.C./Release valve: N.C.; ❸ ❹ ❺ ❻

❶ Body/Exhaust type

Symbol	Body	Exhaust type
C	For Manifold	Complex exhaust*1 / Direct exhaust / End plate exhaust
F	For Manifold	Individual port exhaust / Individual port exhaust
H	For Manifold	High-noise reduction silencer exhaust / High-noise reduction silencer exhaust

*1 Combination of direct exhaust and end plate exhaust from each station

❷ Nominal nozzle size

Symbol	Nominal nozzle size
07	Ø 0.7
10	Ø 1.0
12	Ø 1.2
15	Ø 1.5

* Refer to page 43-5 for the standard supply pressure per nozzle diameter.

❸ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications: NPN (2 outputs)	Specifications: PNP (2 outputs)	Specifications: With unit selection function
A	Pressure switch for vacuum	0 to -101	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	0 to -101	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				

❹ Connector (Pressure switch for vacuum)

Symbol	For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
Y	●		Cannot be selected when ❸ is N
Y1	None		Cannot be selected when ❸ is P, T, or N
N	None		When "N" is selected for ❸

❺ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❻ Option*2

Symbol	Type	Note
—	Without option	—
E	Vacuum break flow adjusting needle: Screwdriver operation type long lock nut	Can be selected only for the combination of J and K
J	Vacuum break flow adjusting needle: Round lock nut	
K	Vacuum break flow adjusting needle: Screwdriver operation type	
M	Manifold individual supply specification*3	Multiple options cannot be selected.
P	With manifold common release pressure supply (PD) port	
W	With exhaust interference prevention valve	—

*2 When more than one option is selected, list the option symbols in alphabetical order. (Example -EM)

*3 When F or H is selected for ❶ and M is selected for the option, the space for adjusting the needle is reduced. Products which can be operated more easily can be specified by option E.

How to Order Manifold

ZZK2 04 A – A 2 L – □

7 8 9 10

If the manifold parts (set of end plates for both ends and tension bolts) are shipped unassembled, please refer to page 33.

❼ Stations

Symbol	Stations
01	1 station
02	2 stations
⋮	⋮
10	10 stations

* For adequate performance, the number of stations that can be operated simultaneously depends on the nozzle diameter. Refer to the Max. Number of Manifold Stations that can be Operated Simultaneously in page 43-5.

❽ System/Port

Symbol	System	Port
A	Ejector system	Ø 8 (Common PV)
AN		Ø 5/16" (Common PV)

❾ Exhaust

Symbol	Exhaust	Note
1	Complex exhaust*4	Select this option when "C" is selected for ❶ Body/Exhaust type.
2	Individual exhaust	Select this option when "H" or "F" is selected for ❶ Body/Exhaust type.

*4 Combination of direct exhaust and end plate exhaust from each station

❿ Option*5


Symbol	Type	Note	
—	Without option	—	
B	With DIN rail mounting bracket	The DIN rail should be ordered separately.	
D	With common release pressure supply (PD) port	Select this option when "P" is selected for ❻ Option.	Multiple options cannot be selected.
M	Manifold individual supply specification	Select this option when "M" is selected for ❻ Option.	

*5 When more than one option is selected, list the option symbols in alphabetical order. (Example -BD)

How to Order Valve Manifold Assembly

Example

ZK2H12Q1NNA-08
ZK2F07Q1NNA-06
ZZK204A-A2L-B

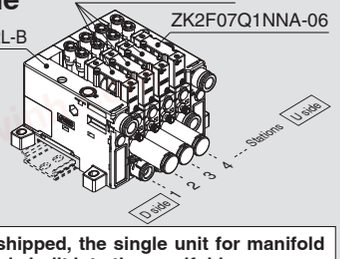

[1] When shipped, the single unit for manifold is already built into the manifold:
After the manifold part number, specify the single unit for manifold part number from the first station.
In addition, prefix an asterisk to the single unit for manifold part number to indicate that it is to be built into the manifold.

Ex.) ZZK204A-A2L-B .....1 (Manifold 4 stations)
*** ZK2H12Q1NNA-08.....3 (Single unit for manifold: Stations 1 to 3)**
*** ZK2F07Q1NNA-06 .....1 (Single unit for manifold: Stations 4)**

[2] When only ordering the single unit for manifold: Order using the single unit for manifold part number.
Ex.) ZK2H12Q1NNA-08

- When the manifold is viewed from V port, the first station starts from the left (D side).
- Complex exhaust and individual port exhaust (High-noise reduction silencer exhaust) cannot be mixed in the ejector system manifold.
- The DIN rail should be ordered separately. (Refer to page 33.)

chanhvinh.com

Air Operated Specification **Vacuum Unit**

ZK2□A Series

Single Unit **Vacuum Pump System**

Refer to page 43-6 for the port layout (including a circuit example) and page 43-15 for the dimensions.

How to Order

ZK2P00 Q 1 B Y A – 08 – □

❶ ❷ ❸ ❹

- Air Operated
- Supply valve: N.C.
  Release valve: N.C.

❶ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications		
			NPN	PNP	With unit selection function
			2 outputs		
A	Pressure switch for vacuum	0 to -101	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	0 to -101	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				






❷ Connector (Pressure switch for vacuum)

Symbol	For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
Y	●		Cannot be selected when ❶ is N
Y1	None		Cannot be selected when ❶ is P, T, or N
N	None		When "N" is selected for ❶

❸ Vacuum (V) port

Symbol	Vacuum (V) port
06	ϕ 6
08	ϕ 8
07	ϕ 1/4"
09	ϕ 5/16"

❹ Option*1

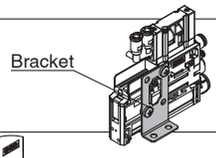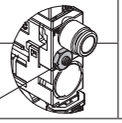Symbol	Type		Note
—	Without option		—
B	Mounting bracket for single unit (nuts and bolts are included)	 Bracket	—
C	Vacuum pump system breathing (PE) port female thread specification (M3)	 PE port	—
E	Vacuum break flow adjusting needle	Screwdriver operation type long lock nut	 Screwdriver operation type long lock nut	Can be selected only for the combination of J and K
J		Round lock nut	 Lock nut	
K		Screwdriver operation type	 Vacuum break flow adjusting needle	

*1 When more than one option is selected, list the option symbols in alphabetical order. (Example -BJ)

chanhvinh.com

Air Operated Specification **Vacuum Unit**

ZK2□A Series

For Manifold **Vacuum Pump System**

Refer to page 43-6 for the port layout (including a circuit example) and page 43-16 for the dimensions.

How to Order

Single unit for manifold part number ZK2Q00 Q 1 B Y A – 08 – □

❶ ❷ ❸ ❹

Air Operated ● Supply valve: N.C./Release valve: N.C.

❶ Pressure switch for vacuum/Pressure sensor

Symbol	Type	Pressure range [kPa]	Specifications NPN (2 outputs)	PNP (2 outputs)	With unit selection function
A	Pressure switch for vacuum	0 to -101	●	—	●
B			●	—	None (SI unit only)
C			—	●	●
D			—	●	None (SI unit only)
E		-100 to 100	●	—	●
F			●	—	None (SI unit only)
H			—	●	●
J			—	●	None (SI unit only)
P	Pressure sensor	0 to -101	Analogue output 1 to 5 V		
T		-100 to 100			
N	Without pressure switch for vacuum/pressure sensor				

❷ Connector (Pressure switch for vacuum)

Symbol	For pressure switch for vacuum: 2 m (Lead wire with connector)	Pressure sensor assembly: 3 m (With lead wire)	Note
Y	●		Cannot be selected when ❶ is N
Y1	None		Cannot be selected when ❶ is P, T, or N
N	None		When "N" is selected for ❶

❸ Vacuum (V) port

Symbol	Vacuum (V) port
06	Ø 6
08	Ø 8
07	Ø 1/4"
09	Ø 5/16"

❹ Option*1

Symbol	Type		Note
—	Without option		—
C	Vacuum pump system breathing (PE) port female thread specification (M3)		—
E	Vacuum break flow adjusting needle	Screwdriver operation type long lock nut	Can be selected only for the combination of J and K
J		Round lock nut	
K		Screwdriver operation type	

*1 When more than one option is selected, list the option symbols in alphabetical order. (Example -CJ)

Manifold part number ZZK2 04 A – Q 2 L – □

❺ ❻ ❼

If the manifold parts (set of end plates for both ends and tension bolts) are shipped unassembled, please refer to page 33.

❺ Stations

Symbol	Stations
01	1 station
02	2 stations
⋮	⋮
10	10 stations

❻ System/Port


Symbol	System	Port
Q	Vacuum pump system	Ø 8 (Common PV) Ø 6 (Common release pressure)
QN		Ø 5/16" (Common PV) Ø 1/4 (Common release pressure)

❼ Option

Symbol	Type	Note
—	Without option	—
B	With DIN rail mounting bracket	The DIN rail should be ordered separately.

How to Order Valve Manifold Assembly

Example

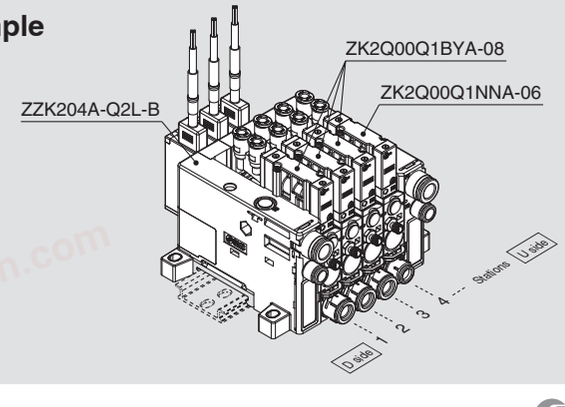

[1] When shipped, the single unit for manifold is already built into the manifold:
After the manifold part number, specify the single unit for manifold part number from the first station.
In addition, prefix an asterisk to the single unit for manifold part number to indicate that it is to be built into the manifold.

Ex.) ZZK204A-Q2L-B·····1 (Manifold 4 stations)
*** ZK2Q00Q1BYA-08·····3 (Single unit for manifold: Stations 1 to 3)**
*** ZK2Q00Q1NNA-06·····1 (Single unit for manifold: Stations 4)**

[2] Lado U:
Order using the single unit for manifold part number.

Ex.) ZK2Q00Q1BYA-08

- When the manifold is viewed from V port, the first station starts from the left (D side).
- The DIN rail should be ordered separately. (Refer to page 33.)

SMC

chanhvinh.com

Specifications

General Specifications

Operating temperature range (No condensation)	**–5 to 50°C**	Without pressure sensor/switch With pressure sensor
	0 to 50°C	With pressure sensor
Fluid		Air
Vibration resistance∗1	**30 m/s²**	Without pressure sensor/switch With pressure sensor
	20 m/s²	With pressure switch
Impact∗2 **resistance**	**150 m/s²**	Without pressure sensor/switch With pressure sensor
	100 m/s²	With pressure switch
Standards		CE/UKCA marking, RoHS

∗1 The characteristics are satisfied when tested for 2 hours in each of the X, Y and Z directions at 10 to 500 Hz without energization. (Initial value)
∗2 The characteristics are satisfied when tested one time in each of the X, Y and Z directions without energization. (Initial value)

Valve Common Specifications

Model∗3	ZK2-VA□Q
Type of actuation	Supply valve: N.C. Release valve: N.C.
Valve configuration	Air operated dual 2-port
Operating pressure range	0.3 to 0.6 MPa
Valve construction	Poppet seal
Manual override	Push type

∗3 Refer to the Valve assembly on page 32 for the valve model number.

Ejector Specifications

Item \ Model			ZK2□07	ZK2□10	ZK2□12	ZK2□15
Nozzle diameter		**[mm]**	0.7	1.0	1.2	1.5
Max. suction flow∗4	**High-noise reduction silencer exhaust**	**[l/min (ANR)]**	34	56	72	83
	Port exhaust	**[l/min (ANR)]**	34	56	74	89
	Silencer exhaust/ Complex exhaust	**[l/min (ANR)]**	29	44	61	67
Air consumption∗4		**[l/min (ANR)]**	24	40	58	90
Max. vacuum pressure∗4		**[kPa]**	–91			
Supply pressure range		**[MPa]**	0.3 to 0.6			
Standard supply pressure		**[MPa]**	0.35			0.4

∗4 Values at the standard supply pressure. Values are based on standard of SMC measurements. They depend on atmospheric pressure (weather, altitude, etc.) and measurement method.

Suction Filter

Nominal filtration rating	30 μm
Filtration area	510 mm²

Max. Number of Manifold Stations that Can Operate Simultaneously∗5

Item \ Model (Nozzle size)			ZK2□07	ZK2□10	ZK2□12	ZK2□15
Air pressure supply (PV) port Ø 8, Ø 5/16"	**High-noise reduction silencer exhaust, Individual port exhaust**	Supply from one side	8	6	6	3
		Supply from both sides	10	9	9	6
	Complex exhaust	Supply from one side	8	5	4	3
		Supply from both sides	10	7	5	5

∗5 As long as the number of stations operated simultaneously is the value on the table or less, then the manifold is available up to 10 stations.

Noise Level (Reference values)

Item \ Model		ZK2□07	ZK2□10	ZK2□12	ZK2□15
Noise level [dB (A)]	**ZK2G (High-noise reduction silencer exhaust)**	46	55	63	69
	ZK2A (Silencer exhaust)	59	66	75	76

Actual values under SMC's measurement conditions (Not guaranteed values)

Weight

Single Unit

Single unit model	Weight [g]
ZK2P00Q1NNA (Vacuum pump system, Single unit, Without pressure sensor/switch)	81
ZK2A□Q1NNA (Ejector system, Single unit, Without pressure sensor/switch)	66
ZK2 (One station for manifold, Without pressure sensor/switch)	70

Pressure Sensor/Pressure Switch for Vacuum

Pressure sensor/Pressure switch for vacuum model	Weight [g]
ZK2-PS□-A (Except cable portion)	5
ZK2-ZS□-A (Except lead wire with connector)	14

Manifold Base

	1 station	2 stations	3 stations	4 stations	5 stations	6 stations	7 stations	8 stations	9 stations	10 stations
Weight [g]	129	132	135	138	141	144	147	149	152	155

● Calculation of Weight for the Manifold Type

(Single unit weight x Number of stations) + (Pressure sensor/Pressure switch for vacuum weight x Number of stations) + Manifold base

Example) 5-station manifold with pressure sensors

70 g x 5 pcs. + 5 g x 5 pcs. + 141 g = 516 g

∗ The ejector exhaust characteristics/flow rate characteristics are the same as those of the model with a valve. Refer to page 19 and on for details.

chanhvinh.com

ZK2□A Series

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PD: Release pressure supply port
● PA: Supply valve pilot pressure supply port ● PB: Release valve pilot pressure supply port
● V: Vacuum port ● EXH: Exhaust port For details ⇒ Page 43-11


Port Layout

∗ System depends on vacuum source (vacuum pump/ejector).

Standard Products

Port layout No. 1


Single unit: ZK2P00Q1□□A-□

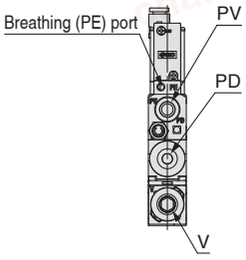

System		Vacuum pump
Body type		Single unit
Exhaust type		—
Application and purpose	Vacuum pressure	—
	Exhaust	—
	Release pressure	Supplied from the PD port


Port combination: PV ≠ PD

Circuit example

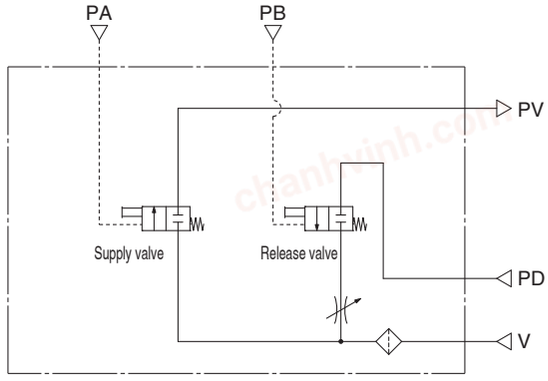

Port layout No. 2


Single unit: ZK2Q00Q1□□A-□
Manifold: ZZK2□A-Q2L

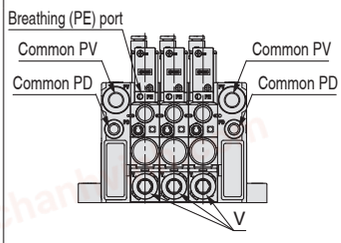

System		Vacuum pump
Body type		Manifold
Exhaust type		—
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	—
	Release pressure	Common for each station


Port combination: Common PV ≠ Common PD

Circuit example

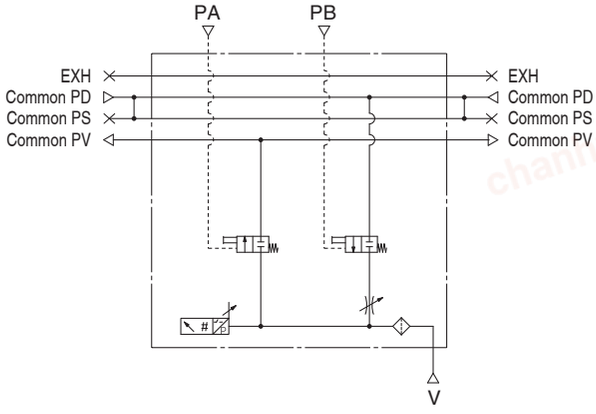

Port layout No. 3


Single unit: ZK2A□Q1□□A-□

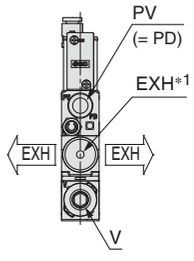

System		Ejector
Body type		Single unit
Exhaust type		Silencer exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	Same pressure as PV

Port combination: PV = PD

Circuit example

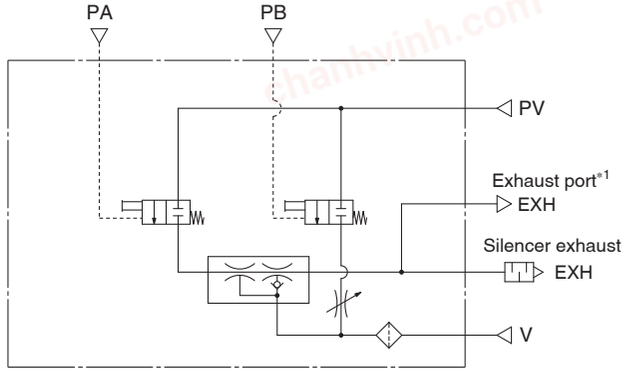

∗1 Nozzle size: 12, 15

Refer to page 43-11 for the purpose of port and the operating pressure range.

chanhvinh.com

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PD: Release pressure supply port
● PA: Supply valve pilot pressure supply port ● PB: Release valve pilot pressure supply port
● V: Vacuum port ● EXH: Exhaust port For details ⇒ Page 43-11


Port Layout

∗ System depends on vacuum source (vacuum pump/ejector).

Standard Products

Port layout No. 4


Single unit: ZK2B□Q1□□A-□

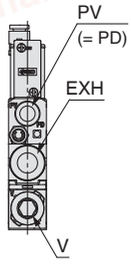

System		Ejector
Body type		Single unit
Exhaust type		Port exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	Same pressure as PV


Port combination: PV = PD

Circuit example

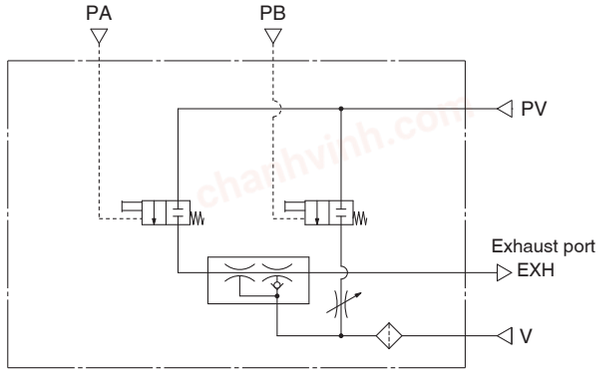

Port layout No. 5


Single unit: ZK2G□Q1□□A-□



System		Ejector
Body type		Single unit
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	Same pressure as PV


Port combination: PV (= PD)

Circuit example

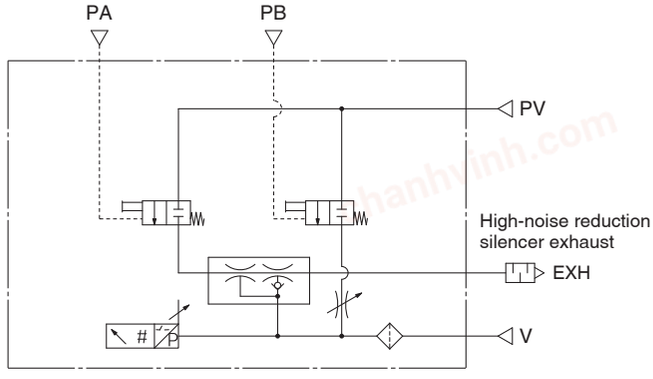

Port layout No. 6

Single unit: ZK2C□Q1□□A-□
Manifold: ZZK2□A-A1L

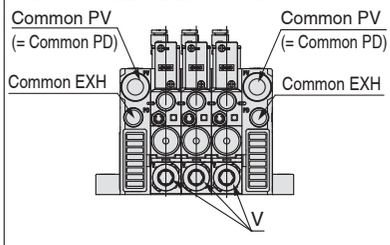


∗1 The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System		Ejector
Body type		Manifold
Exhaust type		Complex exhaust∗1
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	Same pressure as common PV

Port combination: Common PV = Common PD

Circuit example

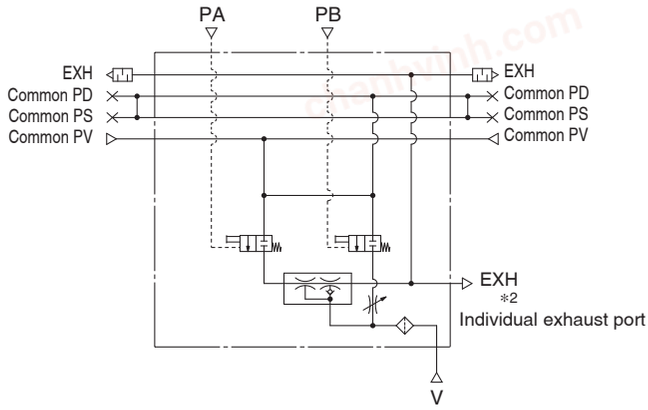

∗2 For complex exhaust type, individual exhaust port is provided to each station.

Refer to page 43-11 for the purpose of port and the operating pressure range.

chanhvinh.com

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PD: Release pressure supply port
● PA: Supply valve pilot pressure supply port ● PB: Release valve pilot pressure supply port
● V: Vacuum port ● EXH: Exhaust port For details ⇒ Page 43-11


Port Layout

∗ System depends on vacuum source (vacuum pump/ejector).

Standard Products

Port layout No. 7


Single unit: ZK2F□Q1□□A-□
Manifold: ZZK2□A-A2L

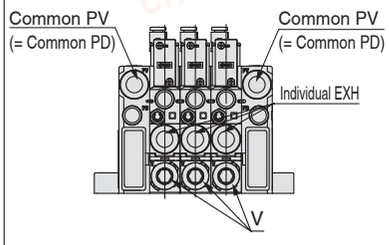

System		Ejector
Body type		Manifold
Exhaust type		Individual port exhaust
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	Same pressure as common PV


Port combination: Common PV = Common PD

Circuit example

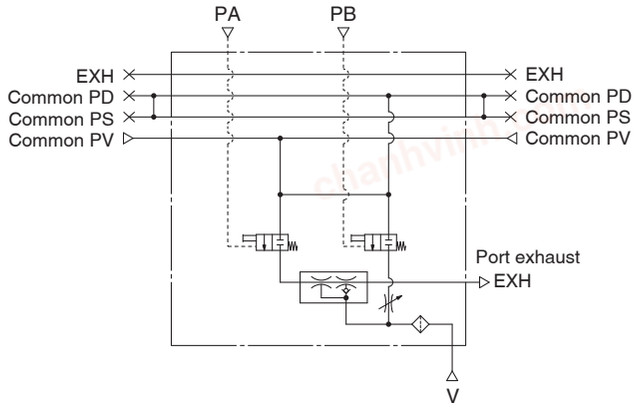

Port layout No. 8


Single unit: ZK2H□Q1□□A-□
Manifold: ZZK2□A-A2L

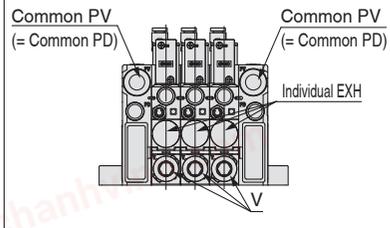

System		Ejector
Body type		Manifold
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	Same pressure as common PV

Port combination: Common PV = Common PD


Circuit example

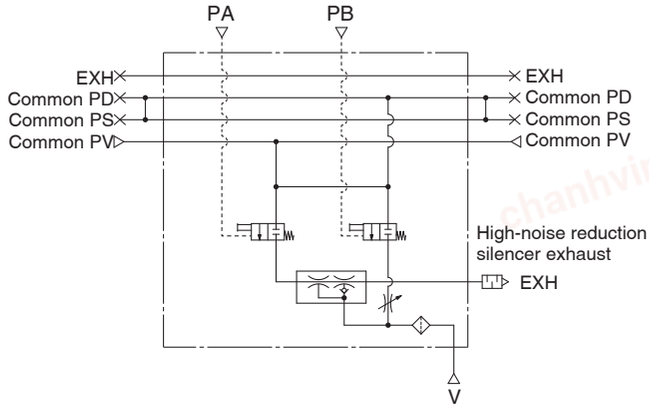

Option -D

Port layout No. 9


Single unit: ZK2A□Q1□□A-□-D

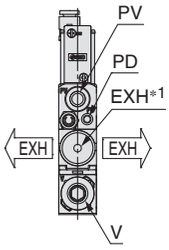

System		Ejector
Body type		Single unit
Exhaust type		Silencer exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	PD pressure has to be supplied with PS pressure.

Port combination: PV ≠ PD

Circuit example

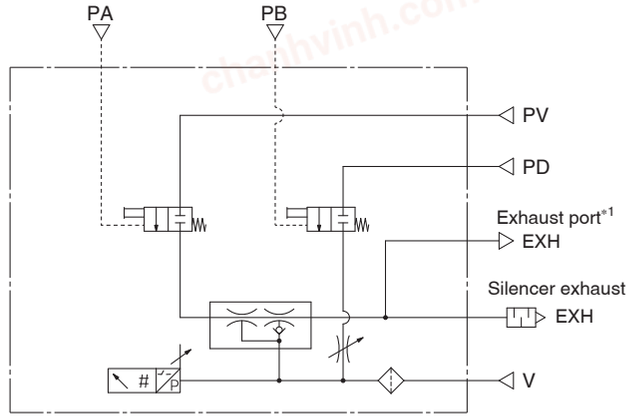

∗1 Nozzle size: 12, 15

Refer to page 43-11 for the purpose of port and the operating pressure range.

chanhvinh.com

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PD: Release pressure supply port
● PA: Supply valve pilot pressure supply port ● PB: Release valve pilot pressure supply port
● V: Vacuum port ● EXH: Exhaust port For details ⇒ Page 43-11


Port Layout

＊ System depends on vacuum source (vacuum pump/ejector).

Option -D

Port layout No. 10


Single unit: ZK2B□Q1□□A-□-D



System		Ejector
Body type		Single unit
Exhaust type		Port exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	PD pressure has to be supplied with PV pressure.


Port combination: PV ≠ PD

Circuit example

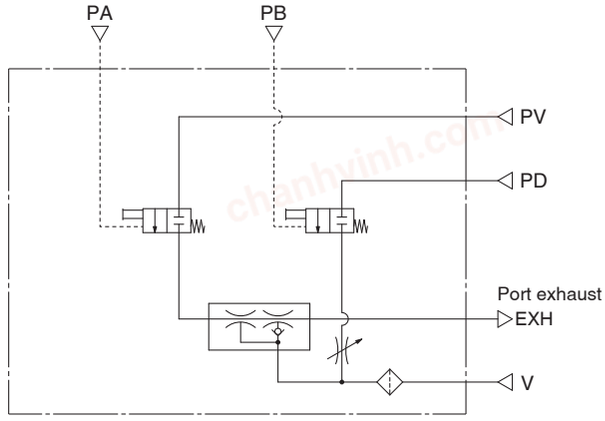

Port layout No. 11


Single unit: ZK2G□Q1□□A-□-D



System		Ejector
Body type		Single unit
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	—
	Exhaust	Released in operating environment
	Release pressure	PD pressure has to be supplied with PV pressure.


Port combination: PV ≠ PD

Circuit example

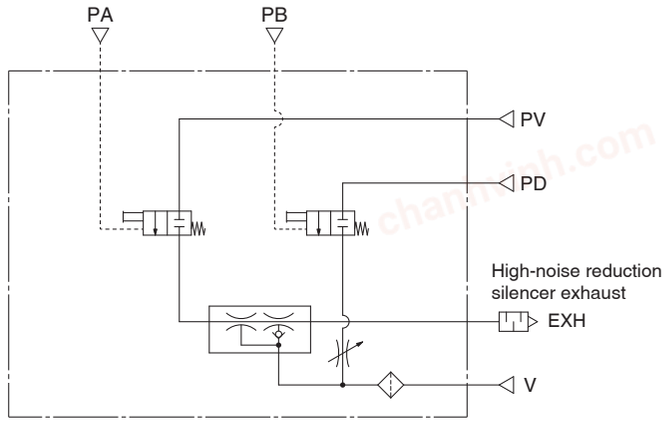

Port layout No. 12

Single unit: ZK2C□Q1□□A-□-P
Manifold: ZZK2□A-A1L-D

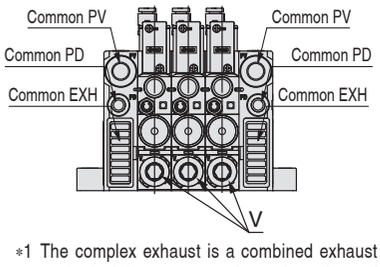


＊1 The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System		Ejector
Body type		Manifold
Exhaust type		Complex exhaust＊1
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	Common PD pressure has to be supplied with common PV.

Port combination: Common PV ≠ Common PD

Circuit example

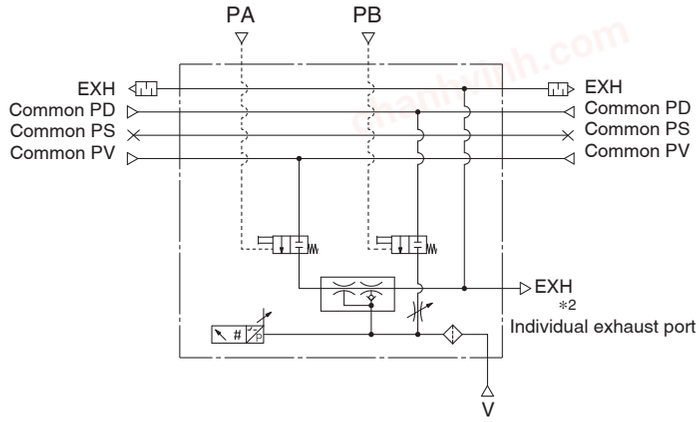

＊2 For complex exhaust type, individual exhaust port is provided to each station

Refer to page 43-11 for the purpose of port and the operating pressure range.

chanhvinh.com

ZK2□A Series

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PD: Release pressure supply port
● PA: Supply valve pilot pressure supply port ● PB: Release valve pilot pressure supply port
● V: Vacuum port ● EXH: Exhaust port For details ⇒ Page 43-11


Port Layout

＊ System depends on vacuum source (vacuum pump/ejector).

Option -D

Port layout No. 13


Single unit: ZK2F□Q1□□A-□-P
Manifold: ZZK2□A-A2L-D

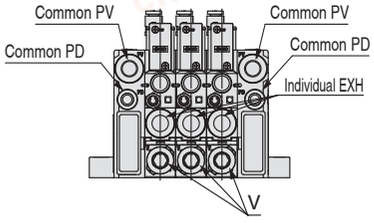

System		Ejector
Body type		Manifold
Exhaust type		Individual port exhaust
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	t


Port combination: Common PV ≠ Common PD

Circuit example

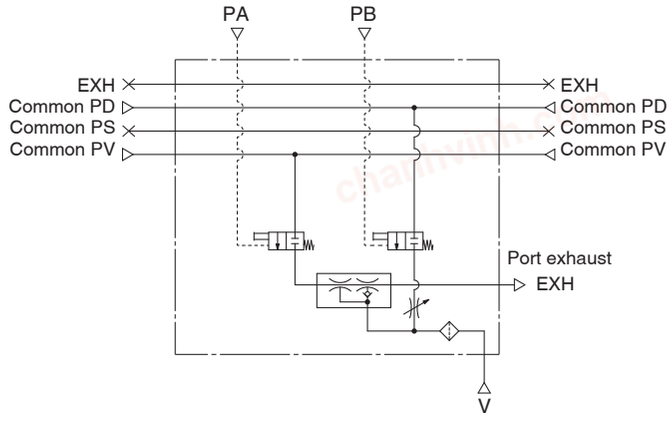

Port layout No. 14


Single unit: ZK2H□Q1□□A-□-P
Manifold: ZZK2□A-A2L-D

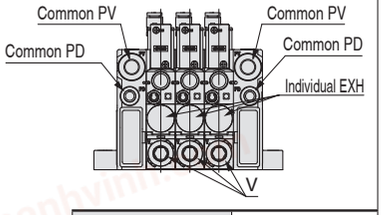

System		Ejector
Body type		Manifold
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	Common for each station
	Exhaust	Released in operating environment
	Release pressure	PD pressure has to be supplied with PV pressure.

Port combination: Common PV ≠ Common PD


Circuit example

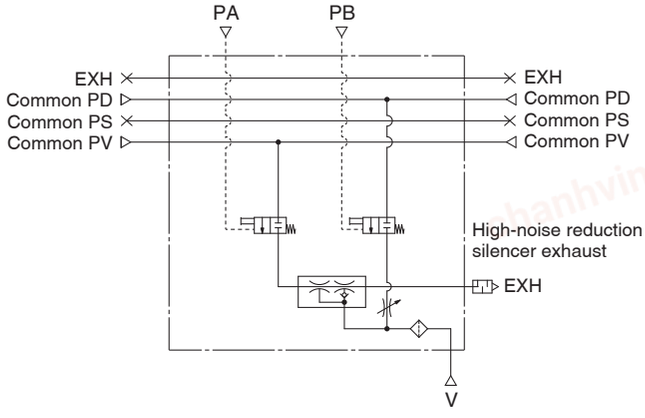

Option -M

Port layout No. 15

Single unit: ZK2C□Q1□□A-□-M
Manifold: ZZK2□A-A1L-M

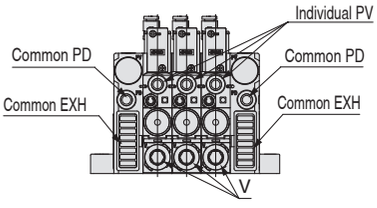


＊1 The complex exhaust is a combined exhaust method of the common exhaust from the end plate and the direct exhaust from each station.

System		Ejector
Body type		Manifold
Exhaust type		Complex exhaust＊1
Application and purpose	Vacuum pressure	PV pressure can be changed per station.
	Exhaust	Released in operating environment
	Release pressure	Common for each station

Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

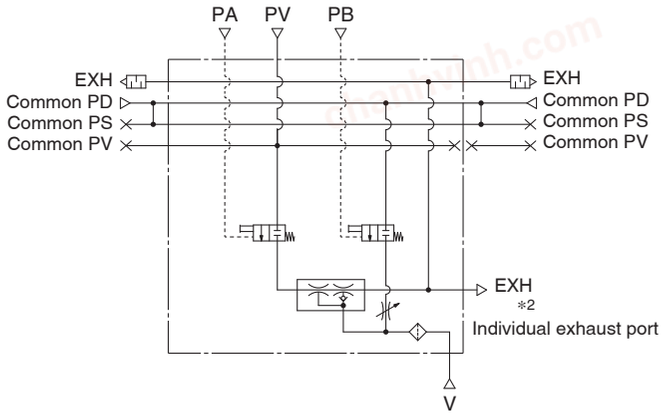

＊2 For complex exhaust type, individual exhaust port is provided to each station.

Refer to page 43-11 for the purpose of port and the operating pressure range.

chanhvinh.com

● PV: Air pressure supply port/Port for vacuum source (Vacuum pump) ● PD: Release pressure supply port
● PA: Supply valve pilot pressure supply port ● PB: Release valve pilot pressure supply port
● V: Vacuum port ● EXH: Exhaust port Refer to the table below for details.


Port Layout

∗ System depends on vacuum source (vacuum pump/ejector).

Option -M

Port layout No. 16


Single unit: ZK2F□Q1□□A-□-M
Manifold: ZZK2□A-A2L-M

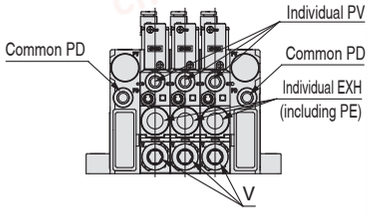

System		Ejector
Body type		Manifold
Exhaust type		Individual port exhaust
Application and purpose	Vacuum pressure	PV pressure can be changed per station.
	Exhaust	After piping, individual exhaust is necessary.
	Release pressure	Common for each station


Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

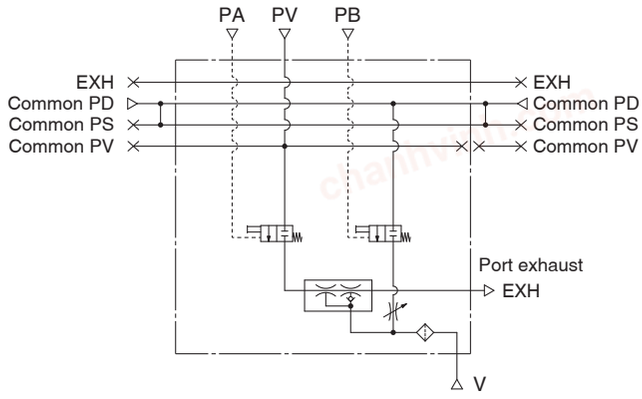

Port layout No. 17


Single unit: ZK2H□Q1□□A-□-M
Manifold: ZZK2□A-A2L-M

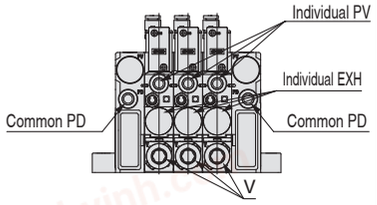

System		Ejector
Body type		Manifold
Exhaust type		High-noise reduction silencer exhaust
Application and purpose	Vacuum pressure	PV pressure can be changed per station.
	Exhaust	Released in operating environment
	Release pressure	Common for each station


Port combination: Individual PV ≠ Common PS = Common PD

Circuit example

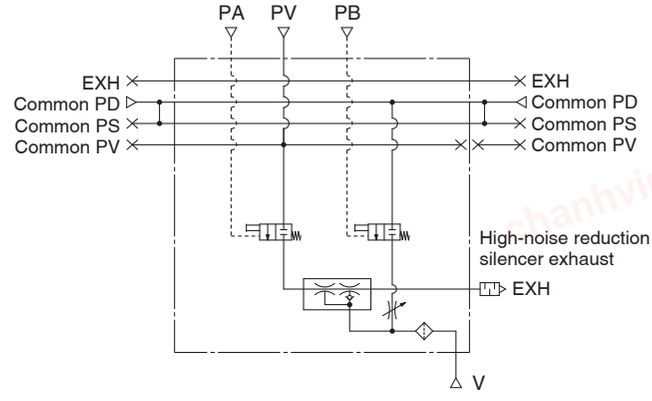

Application and Operating Pressure Range of Each Port

Port	Description	Ejector system	Vacuum pump system
PV	Air pressure supply port	Compressed air supply for operating ejector	—
	(Operating pressure range)	0.3 to 0.6 MPa∗1	—
	Vacuum pressure supply port	—	Vacuum source (Vacuum pump)
	(Operating pressure range)	—	0 to -100 kPa
PA	Supply valve pilot pressure supply port	Compressed air supply for operating supply valve	
	(Operating pressure range)	0.3 to 0.6 MPa	
PB	Release valve pilot pressure supply port	Compressed air supply for operating release valve	
	(Operating pressure range)	0.3 to 0.6 MPa	
PD	Release pressure supply port	Release pressure Compressed air supply for individual setting (Option)	
	(Operating pressure range)	0 to 0.6 MPa (PD ≤ PA/PB)	
V	Vacuum port	For connecting adsorption equipment including pad	
EXH	Exhaust port	Exhaust when ejector operates∗2	—
PE	Breathing port	Exhaust when main valve operates∗3	

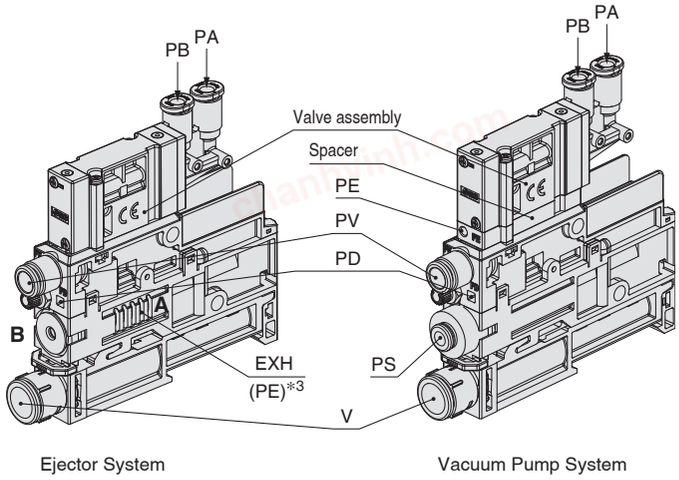


Ejector System Vacuum Pump System

∗1 The manifold individual supply specification can be operated at a PV pressure of 0.3 MPa or less.
∗2 For ejectors with silencer, air exhausts from A (slit on both sides). For port exhaust type, air exhausts from B.
∗3 Female thread type (M3) is available by option [C] for breathing (PE) port of the vacuum pump system.

chanhvinh.com

ZK2□A Series

Construction

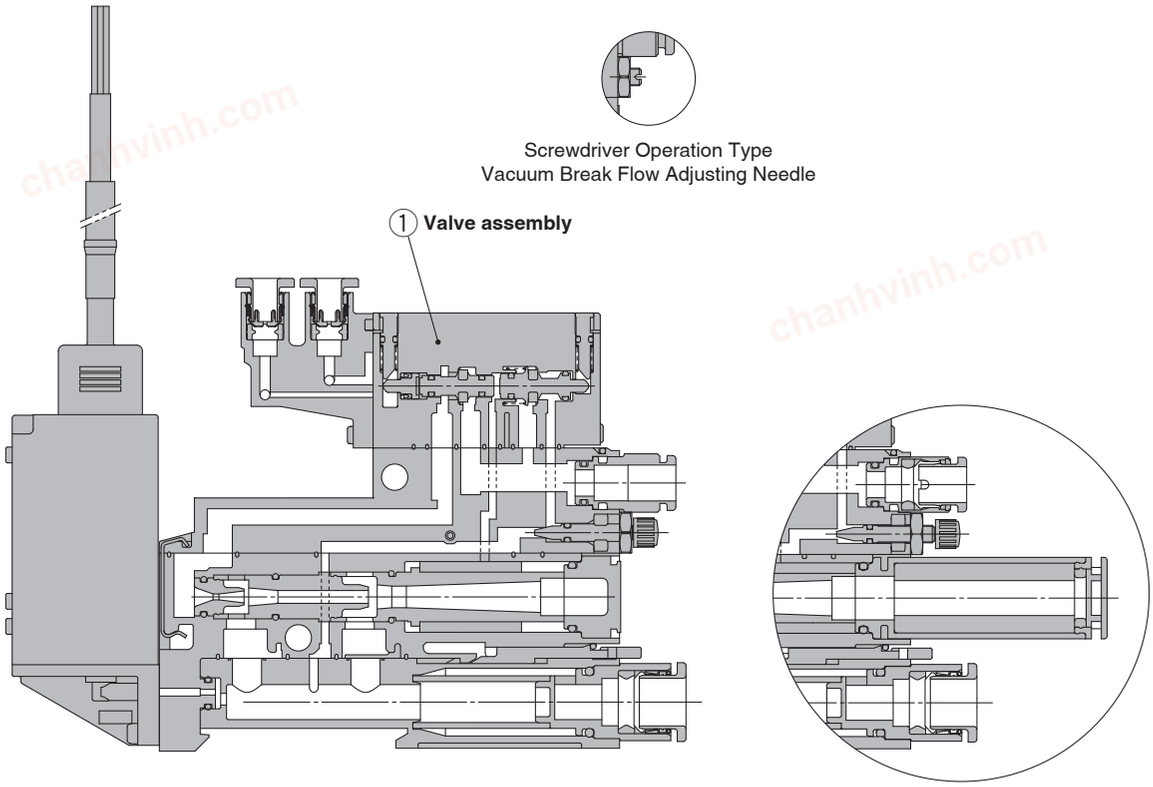

With Pressure Switch for Vacuum

With High-noise Reduction Silencer

∗ For details on replacement parts, refer to page 33.

Replacement Parts for Single Unit / How to Order

Valve assembly **Construction ①**

ZK2 – VA A Q 1 4 A – A

❶ ❷


Air Operated **Supply valve: N.C.**
Release valve: N.C.

❶ Applicable system

A	Ejector system
P	Vacuum pump system

❷ Pilot pressure supply port size

4	∅ 4	Metric size
3	∅ 5/32"	Inch size

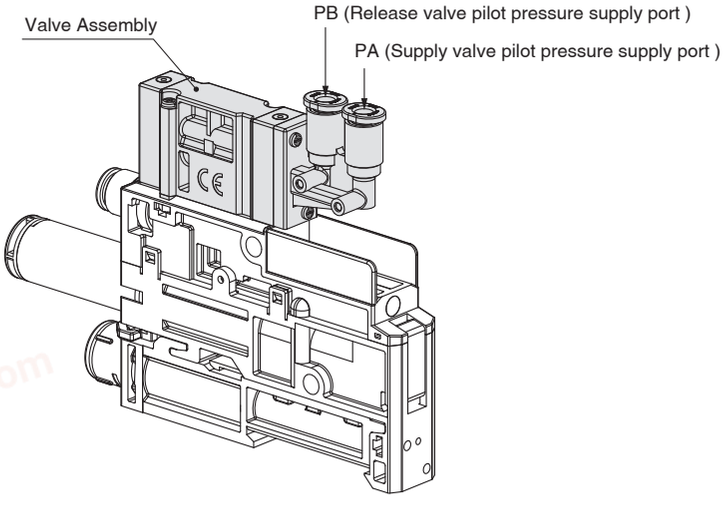


chanhvinh.com

Air Operated Specification

Vacuum Unit/*ZK2□A Series*

Exploded View of Manifold

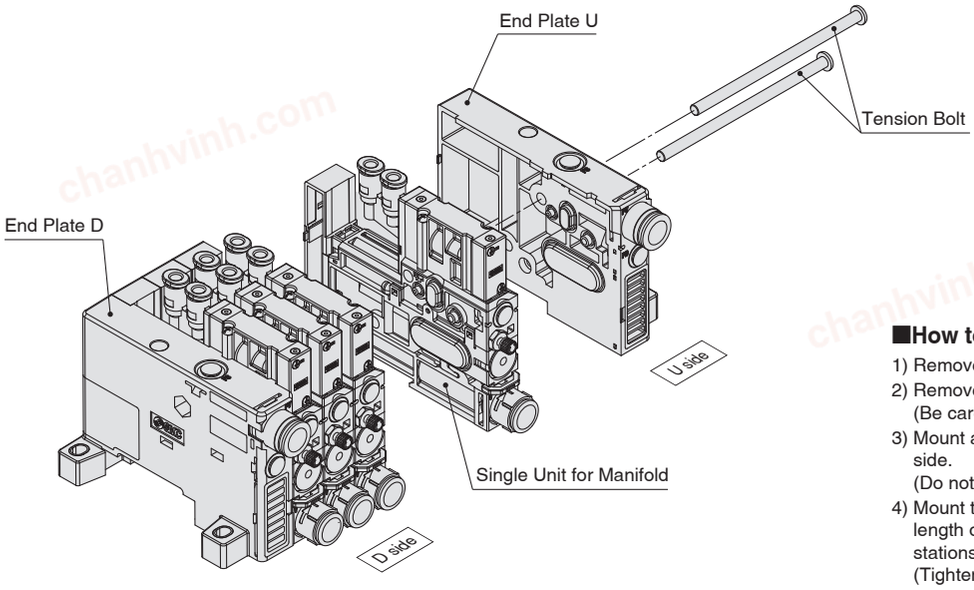

■How to increase manifold stations


1) Remove two tension bolts.
2) Remove the end plate U.
   (Be careful not to drop the gasket.)
3) Mount a single unit to the end surface of U side.
   (Do not let the gasket get caught.)
4) Mount the end plate U with the appropriate length of tension bolts for the number of stations required.
   (Tightening torque: 0.75 N·m)

∗ For details on replacement parts, refer to page 33.

chanhvinh.com

Dimensions: Single Unit

ZK2$^{A}_{B}_{G}$□Q1NNA-□

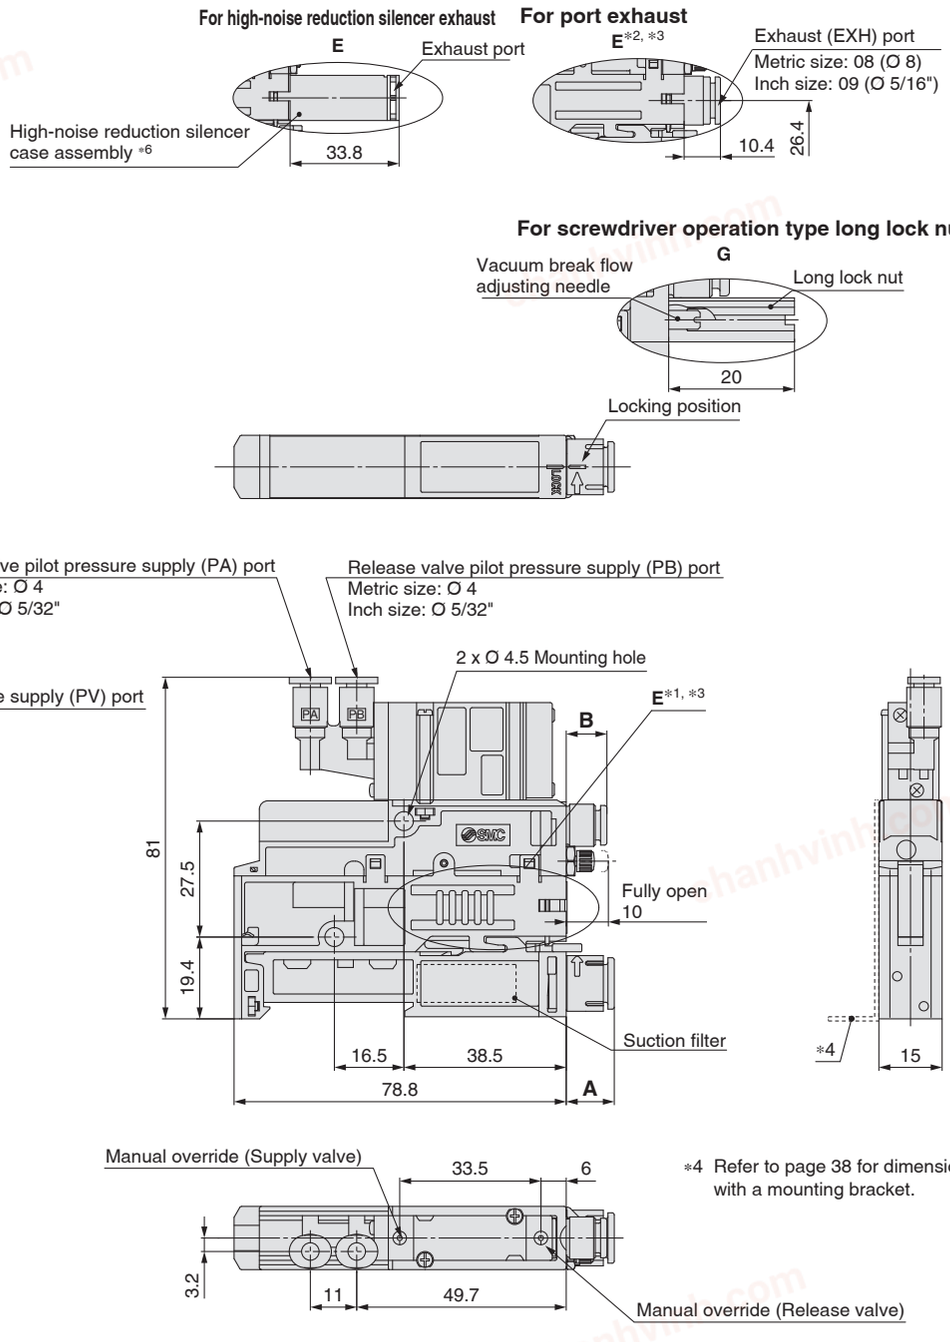

*4 Refer to page 38 for dimensions with a mounting bracket.

PV port type			B
Metric size	06	O 6	9.7
Inch size	07	O 1/4"	12.3

V port type			A	C
Metric size	06	O 6	8.3	4
	08	O 8	11.2	6
Inch size	07	O 1/4"	9.7	4.76
	09	O 5/16"	11.2	6


*1 For silencer exhaust type, air is exhausted from the slit on both sides. (Do not cover both sides. Release at least one side.)
*2 For port exhaust type, air is exhausted from the One-touch fitting.
*3 The breathing air is connected to the ejector exhaust unit.
*5 Nozzle size 12 and 15 have exhaust port.
*6 Refer to page 46 for the part number and maintenance of the high-noise reduction silencer case assembly.

chanhvinh.com


Dimensions: Single Unit


ZK2P00Q1NNA-□


For screwdriver operation type long lock nut

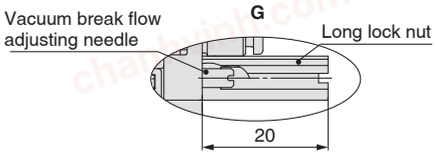

PE port famale thread specification

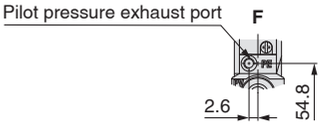



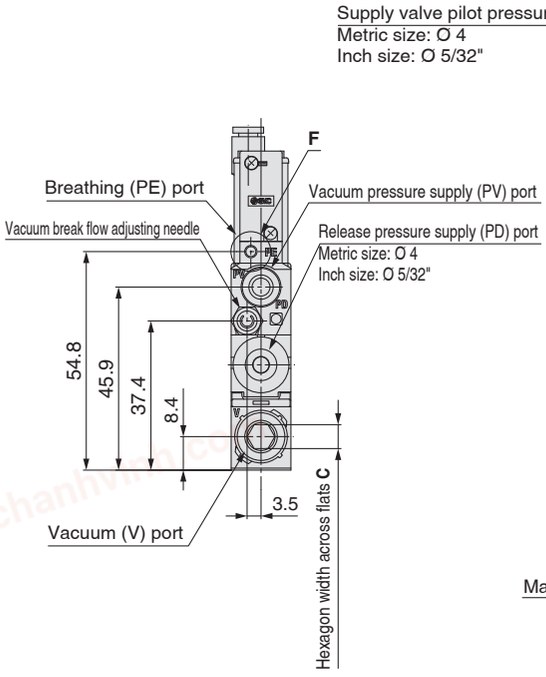

*1 Refer to page 38 for dimensions with a mounting bracket.

PV port type			B
Metric size	06	O 6	9.7
Inch size	07	O 1/4"	12.3

V port type			A	C
Metric size	06	O 6	8.3	4
	08	O 8	11.2	6
Inch size	07	O 1/4"	9.7	4.76
	09	O 5/16"	11.2	6


chanhvinh.com

ZK2□A Series


Dimensions: Manifold


ZZK2□A- $^{A1}_{Q2}$□L


For port exhaust

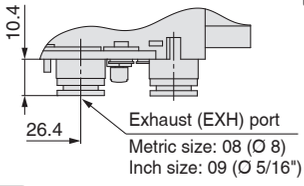


For screwdriver operation type long lock nut

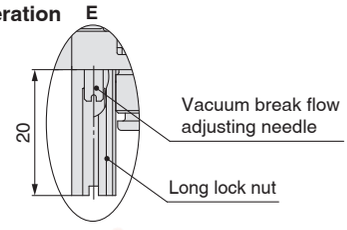




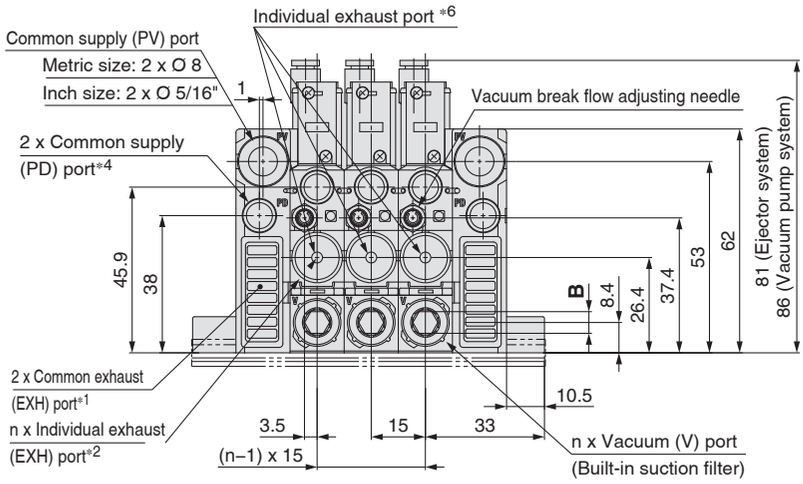


Vacuum pump system PE port female thread specification (M3)

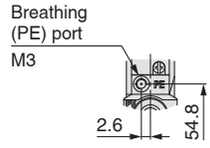


For high-noise reduction silencer exhaust

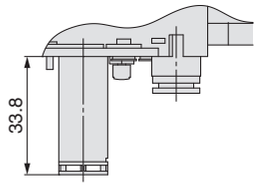

PS and PD port dimensions

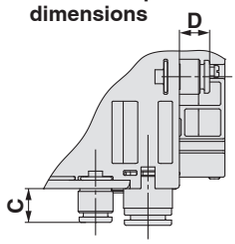

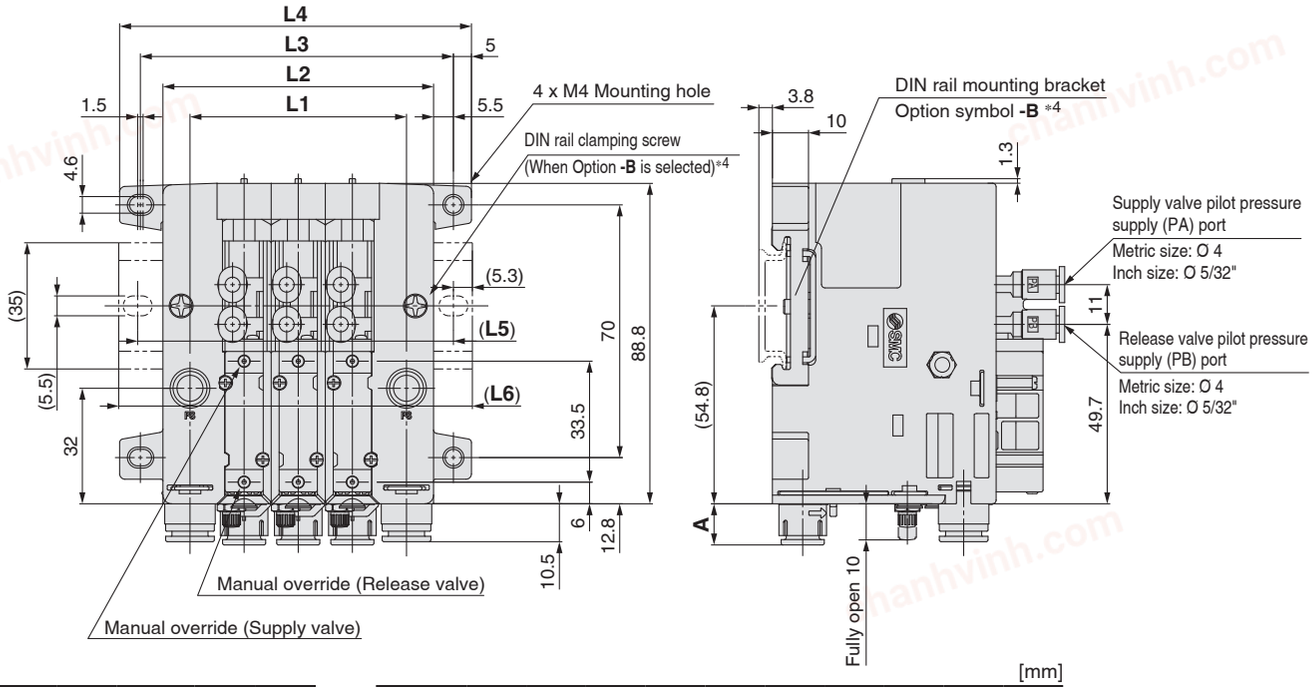

[mm]

Port type		A	Hexagon width across flats B	C	D
Metric size	06	8.3	4	9.7	8.7
	08	11.4	6	—	—
Inch size	07	9.7	4.8	12.3	11.3
	09	11.4	6	—	—

Stations	1	2	3	4	5	6	7	8	9	10
L1	30	45	60	75	90	105	120	135	150	165
L2	45	60	75	90	105	120	135	150	165	180
L3	56.8	71.8	86.8	101.8	116.8	131.8	146.8	161.8	176.8	191.8
L4	67.5	82.5	97.5	112.5	127.5	142.5	157.5	172.5	187.5	202.5
L5	62.5	75	87.5	112.5	125	137.5	150	162.5	187.5	200
L6	73	85.5	98	123	135.5	148	160.5	173	198	210.5

*1 Vacuum pump system with individual exhaust port type does not have exhaust port.
*2 When individual exhaust port type is selected (Body type: F)
*3 Common pilot pressure supply (PD) port is available for vacuum pump system or option D (With manifold common release pressure supply (PD) port). (mm: O 6 inch: O 1/4")
*4 To fix the manifold to DIN rail, select an option for the manifold model number.
*5 For complex exhaust type, air is also exhausted from the individual exhaust port of each station in addition to the common exhaust. (Ejector system)

chanhvinh.com

ZK2□A Series
Specific Product Precautions 1


Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Supply Valve / Release Valve

⚠Warning

1. Manual override operation

- Manual override is non-locking push type. Push the manual override with a screwdriver of a diameter smaller than indicated in the diagram until it reaches the end.

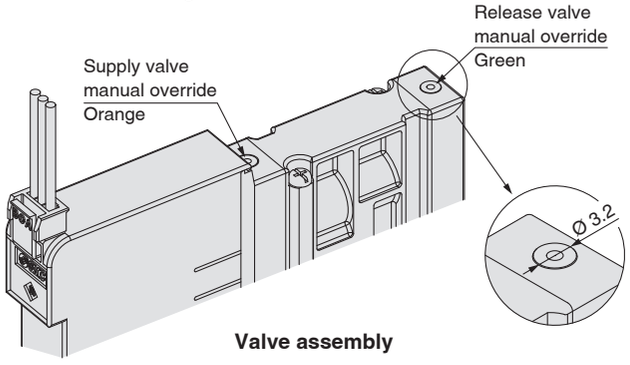

Valve assembly


- Confirm that the product operates safely before the manual override is operated.

* When the valve type R is selected, the supply valve can hold the position and will not switch off even if the supply valve manual override operation is finished unless the release valve manual override is pressed.

2. Self-holding function of supply valve (Valve type R)

When the supply valve is energised (2 0 ms or more), the supply valve keep ON position even after energisation is stopped. When release valve is energised, the supply valve is turned off in conjunction with the operation of the release valve.

* Main valve in the valve assembly is made of elastic seal. Self-holding is performed by friction resistance of the seal. Do not apply impact resistance in the direction of the main valve shaft during the installation to moving parts. When impact is applied, use valve type K. (For vibration and impact, refer to the General Specifications on page 18.)
* In a vacuum pump system, the workpiece may not be released when the vacuum break flow adjusting needle is closed during the use. In addition, the OFF operation of the supply valve may become unstable. Open the vacuum break flow adjusting needle during use.
  If the vacuum break flow adjusting needle is expected to close during use due to a light workpiece, please select PD port type (single unit: manifold option [D] (for manifold: option [P])). Release the PD port to the atmosphere and open the vacuum break flow adjusting needle.
* Valve type R cannot use a pressure switch for vacuum with energy saving function. Use valve type K.

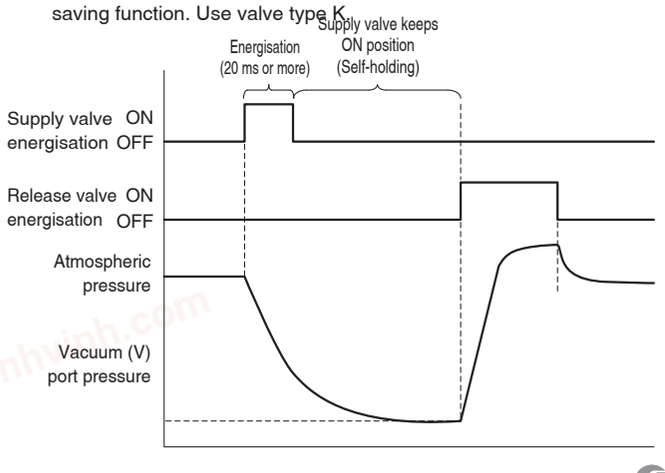


3. Default setting

When the valve assembly is delivered, the supply valve is on the OFF position, but it may be on the ON position due to the vibration or impact during transportation or device installation. Turn to the OFF position manually or by energising before use.


4. LED indication

Red LED turns on when supply valve is energised. Green LED turns on when release valve is energised.

Common wiring

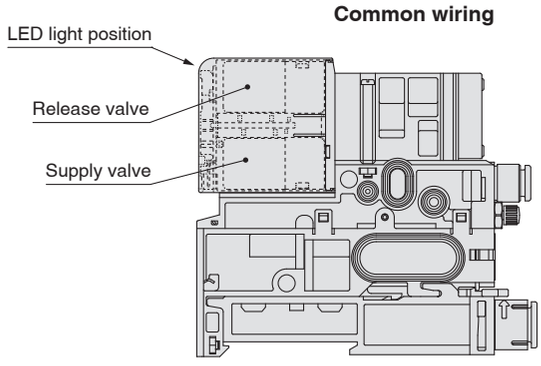

Individual wiring

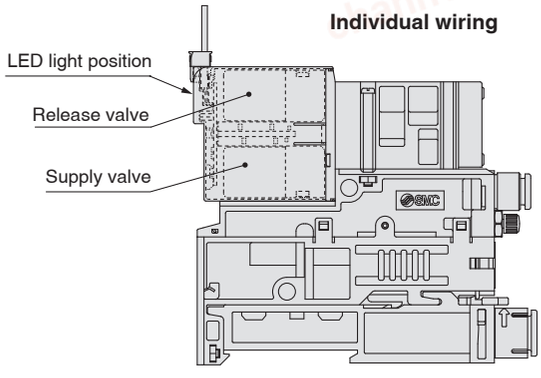

5. Continuous duty

If a supply valve is energised continuously for a long time, the rise in temperature due to heat-up of the coil may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. When the energising time per day is longer than non-energising time, use the self-holding function of valve type R. (Energised time should be 20 ms or longer, and be as short as possible.)

6. Air leakage

Zero air leakage is not guaranteed for the supply valve or release valve.

Be aware that because there is a chance of air and vacuum leakage, the pressure may change if the V port side is tightly sealed.

chanhvinh.com

ZK2□A Series
Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Surge Voltage Intrusion

⚠Caution


The surge voltage created when the power supply is cut off could apply to the de-energised load equipment through the output circuit. In cases where the energised load equipment has a larger capacity (power consumption) and is connected to the same power supply as the product, the surge voltage could malfunction and/or damage the internal circuit element of the product and the internal device of the output equipment. To avoid this situation, place a diode which can suppress the surge voltage between the COM lines of the load equipment and output equipment.

Wiring

⚠Caution

1. Individual wiring

- To install the connector, hold the cover and insert the connector straight pushing the connector lever with your finger. Ensure that the connector lever clip is properly inserted onto mating part.
- To remove the connector, hold the cover and pull out the connector straight pushing the connector lever clip.

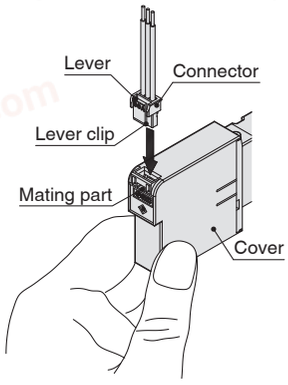


* Do not pull the lead wire with a force of 25 N or more, as this may damage the connector or cover.

2. Common wiring

- Align the socket connector of the cable and the plug connector of the manifold.
  Insert the socket connector of the cable into the plug connector of the manifold vertically. If the connector is pushed forcibly, the pin will bend and the connector cannot be joined.

Example) D-sub connector

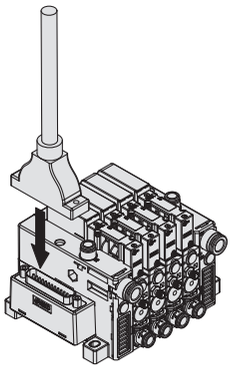


Replacement Procedure


⚠Caution

1. Replacement Procedure for Filter Element

1) To pull out the vacuum port adapter, rotate the adapter by about 90 degrees in direction A and pull in direction B. The adapter can be removed with the suction filter from the filter case.
2) Remove the suction filter from the vacuum port adapter and replace it with a new suction filter.

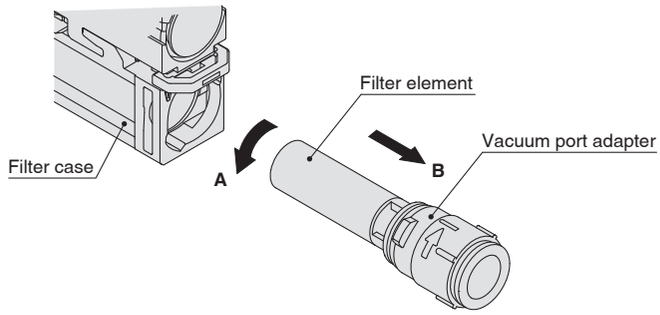


3) When installing the filter, insert the filter to the end so that there is no gap*1 or bending*2 between the filter and the vacuum port adapter. The gap or bending will cause the element to deform inside the case.




4) Put the filter back into the filter case following this procedure in reverse.

- To mount the vacuum port adapter into the filter case, turn the adapter so that the mating mark of the adapter and the case are aligned. (Rotation stops there.)

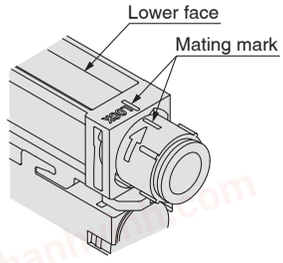

- If it is difficult to remove the vacuum port adapter, you can remove the adapter with a hexagon wrench using the hexagonal hole in V port. The table shows the port size and the width across flats.

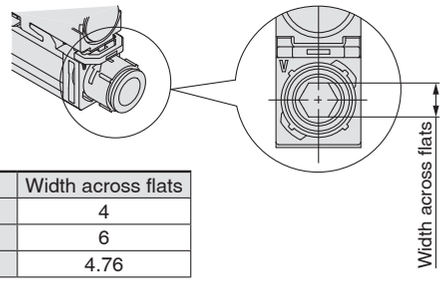

V port size	Width across flats
Ø 6	4
Ø 8, Ø 5/16"	6
Ø 1/4"	4.76

chanhvinh.com

ZK2□A Series
Specific Product Precautions 3


Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Replacement Procedure


⚠Caution

2. Replacement Procedure for Sound Absorbing Material (for Silencer Exhaust)


1) Remove the filter case following ⑤ the procedure of filter case maintenance (page 47).
2) Flip the ejector, push the release lever again with a finger or precision screwdriver until the release lever stops.

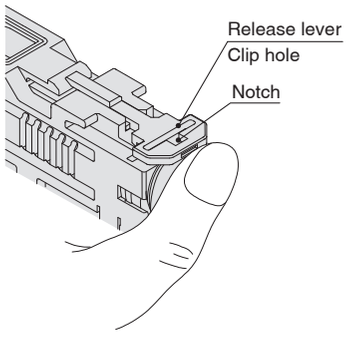

3) To remove the clip that holds the port plug, insert a precision screwdriver from the release lever notch. Move the screwdriver in direction (①) to pull out the clip in direction (②).

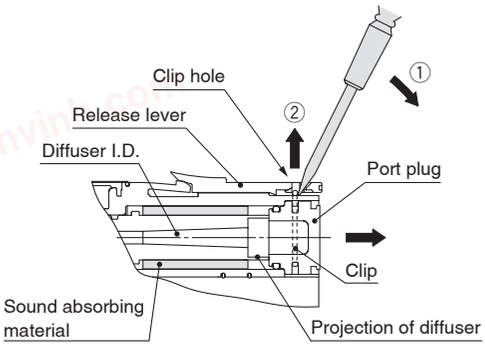


4) Remove the port plug.
5) Remove the sound absorbing material from the slit (hole) at the side of the body by using a precision screwdriver.
6) Insert the new sound absorbing material. Be careful not to scratch the material with the projection of the diffuser assembly.

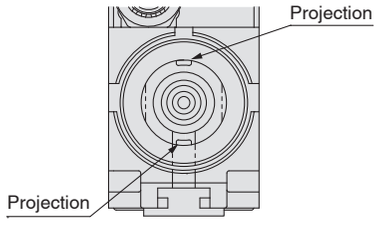

(Procedure to put parts back together)

7) Insert the port plug and insert the clip into the groove using the lever hole. (Push completely to the end.)
   * Do not pull or bend the two projections at the end surface of the diffuser. These are spacers to prevent the displacement of the diffuser and they may break if force is applied.

8) Return the release lever in direction of ③ until it stops.

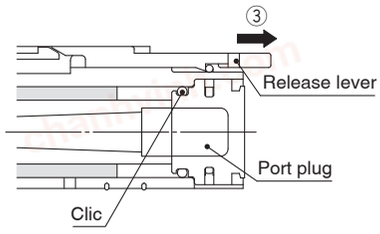


3. Replacement Procedure for High-noise Reduction Silencer Case Assembly

Refer to the replacement procedure of the sound absorbing material (silencer exhaust) to replace the assembly.

* When a high-noise reduction silencer case assembly is attached to body type "A" (silencer exhaust), the silencing effect cannot be acquired.

When only replacing the sound absorbing material (for high-noise reduction silencer exhaust)

1) Use the notch to remove the cap.
2) Use a precision screwdriver to remove the sound absorbing material.
3) Insert the new sound absorbing material, and return the cap.

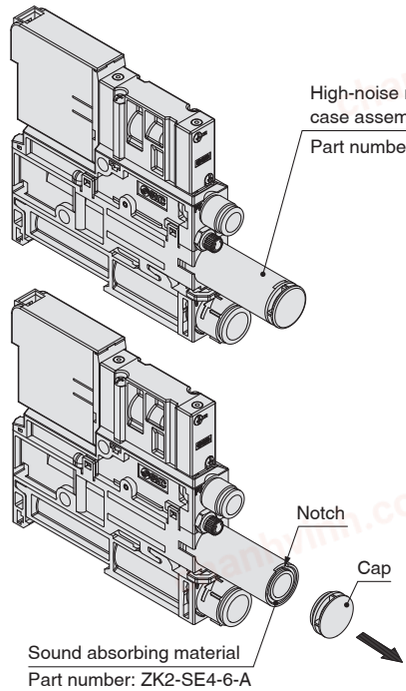

4. Replacement Procedure for Manifold Sound Absorbing Material

Replacement Procedure

1) Insert a precision screwdriver to notch **A** of the end plate and remove a clip L ①.
2) Insert a precision screwdriver to notch **B** and remove the silencer cover ②.
3) Pull out the sound absorbing material from the silencer cover ③.
4) Mounting of a new sound absorbing material should be performed by following the removal procedure in reverse.


chanhvinh.com

ZK2□A Series
Specific Product Precautions 4

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Replacement Procedure


⚠Caution

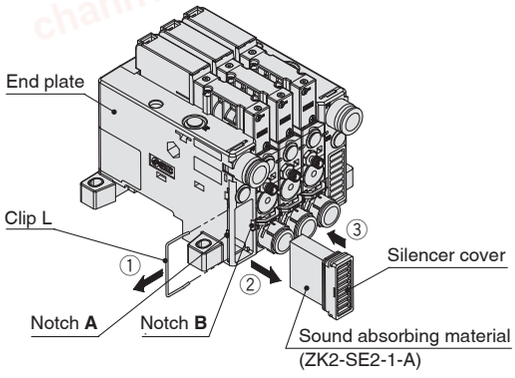


- Ejector system manifold common exhaust type has a sound absorbing material in the end plate. If the sound absorbing material is clogged, ejector performance is deteriorated, leading to suction failure or response delay. Regular replacement of the sound absorbing material is recommended.

5. Filter case maintenance

1) When the filter case is dirty, it can be removed and cleaned. To remove the filter case, insert a precision screwdriver into the groove of the release lever and push in direction (ⓐ), and slide the filter case in direction (ⓑ).

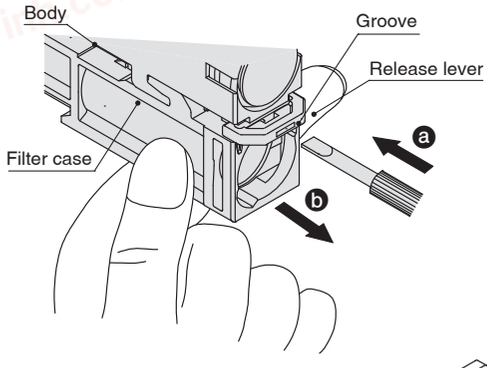

* Surface A of the filter case is the sealing surface when vacuum is generated. Handle with care so that the surface is not scratched or damaged.

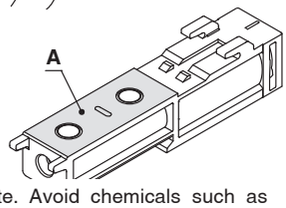


* Filter case is made of polycarbonate. Avoid chemicals such as thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water base cutting fluid (alkaline).
* Do not expose the filter case to direct sunlight for a long period of time.


(Procedure to put parts back together)

2) Make sure that the body gasket that matches the product specifications is installed correctly onto the ejector. If they are out of the place, vacuum leakage may occur.


Replacement Procedure

⚠Caution

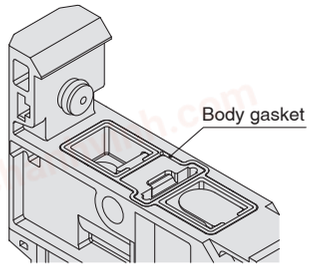

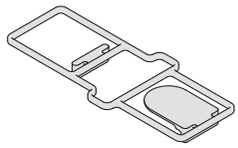


One check valve type
(All specifications other than switch with energy saving function and exhaust interference prevention valve)

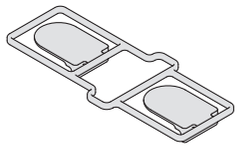

Two check valve type
(Switch with energy saving function and exhaust interference prevention valve)

3) Push the filter case in direction (ⓒ). Be careful the filter case hook (**A**) and hook (**B**) do not touch the body of the ejector.
4) Slide the filter case in direction (ⓓ) while pushing the filter case gently in contact with the ejector. Make sure that the clip (**C**) is locked and there is no gap in part (**D**).

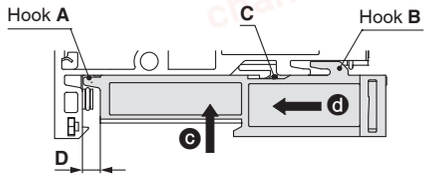


* If excess force is applied to the filter case, hook A and B may break. Handle with care.

Ejector Exhaust / Exhaust Noise

⚠Caution

■ Ejector Exhaust

- The exhaust resistance should be as small as possible to obtain the full ejector performance. There should be no shield around the exhaust slit for silencer exhaust type. When the product is installed, one of the exhaust slits should be open to atmosphere.

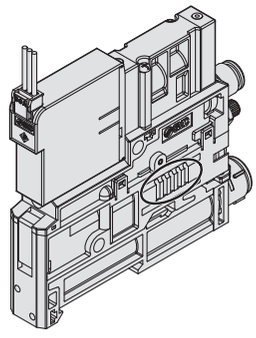

chanhvinh.com

ZK2□A Series
Specific Product Precautions 5

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Ejector Exhaust / Exhaust Noise


⚠Caution

For the port exhaust specification, back pressure may increase depending on the size and length of the piping connected to the exhaust (EXH) port. Ensure that the back pressure does not exceed 0.005 MPa (5 kPa). Do not operate the ejector or apply pressure to the exhaust port with the exhaust port closed. This increases the pressure in the product and can damage the vacuum ejector.

- If the sound absorbing material is clogged, it will cause a reduction in the ejector performance.
  Sometimes, if the operating environment contains a lot of particles or mist, the replacement of the filter element only is not enough to recover vacuum performance - as the sound absorbing material may be clogged. Replace the sound absorbing material. (Regular replacement of the filter element and the sound absorbing material is recommended.)

■Exhaust Noise

- When vacuum ejector generates vacuum, noise can be heard from the exhaust port when the standard supply pressure is close to the pressure that generates peak vacuum pressure making vacuum pressure unstable. If the vacuum pressure range is adequate for adsorption, there should not be a problem. If the noise causes a problem or affects the setting of the pressure switch, change the supply pressure slightly to avoid the pressure range of the noise.

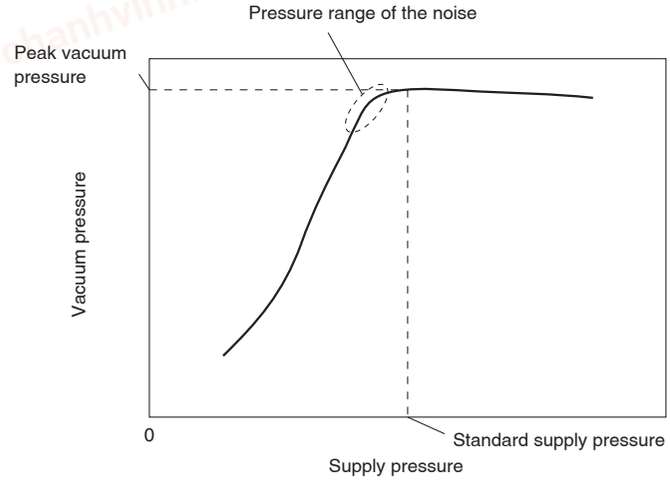

Operating Supply Pressure

⚠Caution

- Use the product within the specified supply pressure range. Operation over the max. operating pressure can cause damage to the product.
  The parts around the vacuum port of this product are designed to be used with vacuum pressure. With the vacuum pump system, since air is not released to the atmosphere from a silencer, the applied air for vacuum release increases the internal pressure of the vacuum port. Select the vacuum pad which shape allows smooth exhaust of release air to the atmosphere and avoid clogging. (When the internal pressure rises, try to keep the pressure at 0.1 MPa or less.)

Port Size

⚠Caution

■Single Unit

- The sizes of the each port are as follows. (Refer to the Application and Operating Pressure Range of Each Port on page 30.)

Port	Size			
	Ejector system		Vacuum pump system	
	Metric	Inch	Metric	Inch
PV	Ø 6	Ø 1/4"	Ø 6	Ø 1/4"
V	Ø 6, Ø 8	Ø 1/4", Ø 5/16"	Ø 6, Ø 8	Ø 1/4", Ø 5/16"
EXH (Port exhaust)	Ø 8	Ø 5/16"	—	—
PE	EXH Common		Port open to atmosphere *1	
PS	—	—	Ø 4	Ø 5/32"
PD *2	M3	—	M3	—

—: Not applicable

*1 Air is also exhausted from the pilot valve when the valve type is R. Piping for PE port is available as an option (M3). (Refer to pages 15 and 16.)

*2 A model with PD port is available as an option. (Refer to pages 9, 10, and 15.)

■Manifold

- Manifold ports are common at the end plate. Port description and application are the same as the single unit. (Refer to the Application and Operating Pressure Range of Each Port on page 30.)
- Refer to page 18 for the number of stations that can operate simultaneously for each ejector size.
- If one side is not used for air supply, plug the unused port or change to the dedicated port plug assembly as shown below.

	Standard	Port plug assembly
Common PV port	Ø 8 One-touch fitting	VVQZ2000-CP
Common PS port	Ø 6 One-touch fitting	ZK2-MP1C6-A
Common PD port		

* There are 4 types of port combination due to the manifold port specification.

	Common EXH port	Common PS/PD ports	Application
ZZK2□A-A□1□	Yes	PS = PD	Ejector common exhaust PV = PS = PD
ZZK2□A-A□1□-D	Yes	PS ≠ PD	Ejector common exhaust PV = PS ≠ PD
ZZK2□A-A□2□ ZZK2□A-P2□	None	PS = PD	Ejector individual exhaust PV = PS = PD
			Vacuum pump system PV ≠ PS = PD
ZZK2□A-A□2□-D ZZK2□A-P2□-D	None	PS ≠ PD	Ejector individual exhaust PV = PS ≠ PD
			Vacuum pump system PV ≠ PS ≠ PD

- When PS = PD, the common PS/PD ports on the end plate are used, PS port is equipped with One-touch fitting and PD port is plugged at the time of shipment from the factory. Since the PS and PD are connected inside the end plate, common supply location can be changed by exchanging the One-touch fitting and the plug.
- When PS ≠ PD, PS and PD are not connected inside the end plate. (It is necessary to supply each port individually.)

chanhvinh.com

ZK2□A Series
Specific Product Precautions 6


Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

How to Mount a Single Unit


⚠Caution

1. Single unit can be mounted to DIN rail or wall using the holes in the body (2 x Ø 4.5).


- When mounting the ejector to DIN rail, unlock the filter case assembly beforehand. (Refer to the maintenance procedure on page 47.)
- Hook the ejector onto the DIN rail from direction (①).
- Mount the ejector onto the DIN rail by pushing it down in direction (②).
- Push the filter case assembly in direction (③) until it is locked.

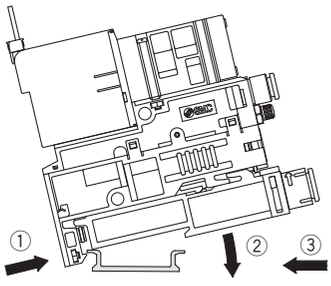

- To hold the ejector onto the DIN rail, hold it from both sides using the stopper brackets.

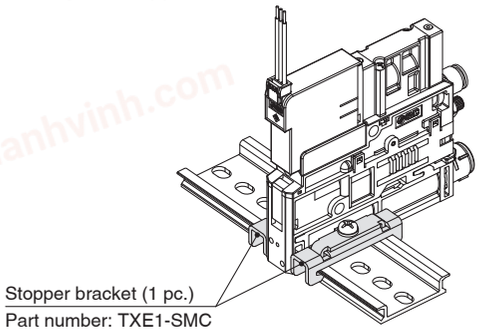

2. To mount a single unit onto the floor, use the optional bracket.

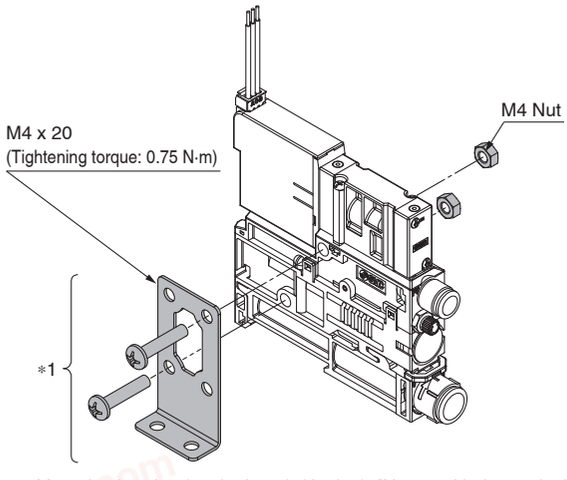


*1 Mounting bracket for single unit (Option), [Nuts and bolts are included.]
Part number: ZK2-BK1-A

How to Mount a Manifold

⚠Caution

- Manifolds can be mounted onto the floor using M4 holes on the end plate.
- It is possible to mount the manifold onto the DIN rail by manifold option.

· Hook the mounting bracket of the end plate to DIN rail from direction (①).
· Mount the ejector onto the DIN rail by pushing it down in direction (②).
· Use a 5 0 mm or longer Phillips screwdriver to tighten the mounting bracket (③). (Tightening torque: 0.9 ±0.1 N·m)
· Removal should be performed by following the mounting procedure in reverse.

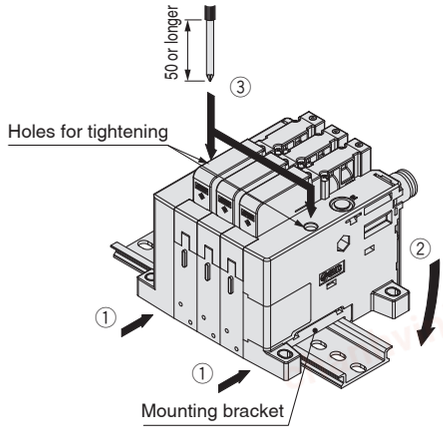

Vacuum Break Flow Adjusting Needle

⚠Caution

1. The flow rate characteristics show the representative values of the product itself.

They may change depending on piping, circuit and pressure conditions, etc. The flow rate characteristics and the number of needle rotations vary due to the range of the specifications of the product.

2. The needle has a retaining mechanism, so it will not turn further when it reaches the rotation stop position.

Turning the needle too far may cause damage.

3. Do not tighten the handle with tools such as nippers.

This can result in breakage due to idle turning.

4. Do not over tighten the lock nut.

It is possible to tighten the standard lock nut (hexagon) manually. When tightening further with tools, tighten by approximately 15° to 30°. Over tightening may cause breakage.

5. When vacuum break flow adjusting needle screwdriver operation type (-K) is selected as option, make sure the lock nut is not loose to prevent the nut from coming off due to vibration.

chanhvinh.com

ZK2□A Series
Specific Product Precautions 7

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu


Interchangeability with Existing Product

⚠Caution

When existing product is used, please be careful with the interchangeability between existing product in the table below and ZK2□A.


○Single Unit

- New valve assembly of ZK2□A cannot be assembled with the existing products. (Pilot valve dimension and valve body dimension are different.)

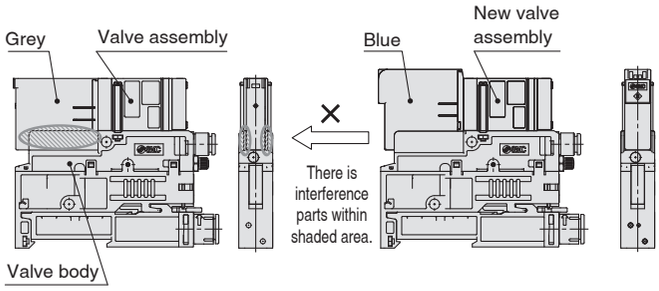


○Manifold of 3 stations or more

- Single unit of ZK2□A for manifold cannot be assembled with the existing manifold. (Pilot valve dimension and end plate dimension are different.)
  By replacing the manifold end plate assembly with the manifold end plate for ZK2□A, a single unit of ZK2□A for manifold can be assembled. Manifold end plate assembly number (Refer to page 33.)

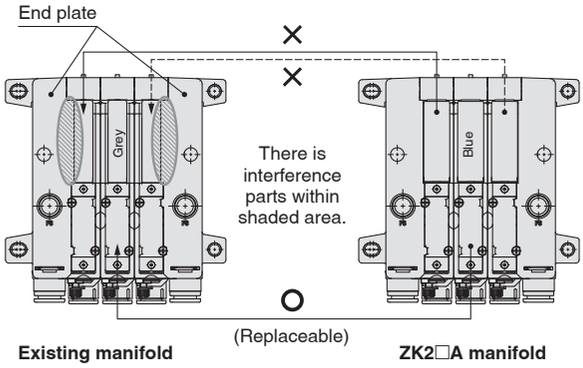

○Manifold of 1 or 2 stations

- A single unit ZK2□A for manifold cannot be assembled with the existing manifold.
  (Pilot valve dimension and end plate dimension are different.)

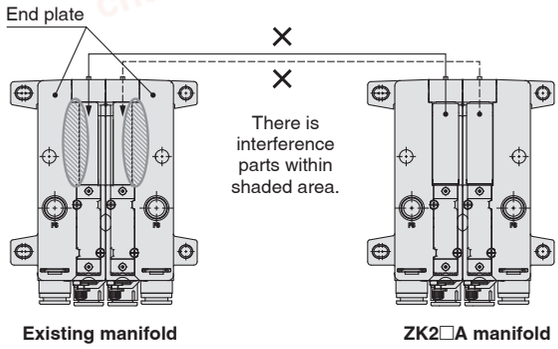

○Replacement of the check valve

- The check valve and the gasket are separate parts for the conventional product, but ZK2□A is not interchangeable because it is integrated.



chanhvinh.com

Air Operated Specification

ZK2□A Series
Specific Product Precautions 1


Be sure to read this before handling the products. Refer to the back cover for safety instructions. For vacuum equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Piping

⚠Caution

1. Install a 3 -port valve, etc., on the inlet side of pilot pressure supply ports "PA" and "PB," and be sure that the product's inlet side residual pressure can be released when the valves are turned OFF. If residual pressure remains, there will be problems switching between the supply valve and the release valve.


2 . When piping a tube to pilot pressure supply ports "PA" and "PB," hold the A portion of the product with your hands to prevent damage to the product.

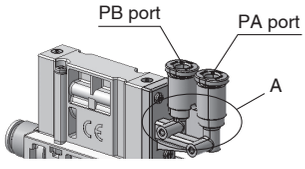

Mounting

⚠Caution


As the release buttons of pilot pressure supply ports "PA" and "PB" are oval shaped, when wall mounting on the B surface side, be sure to adjust the release button directions before mounting.

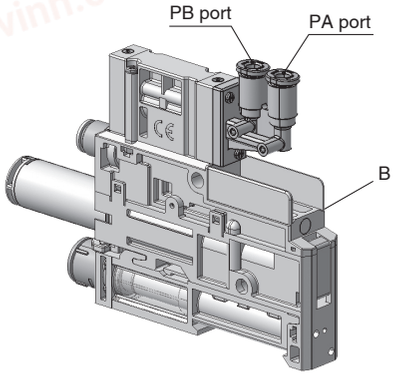

Other

⚠Caution

If a release valve is not to be used, plug the release valve pilot pressure supply port "PB."

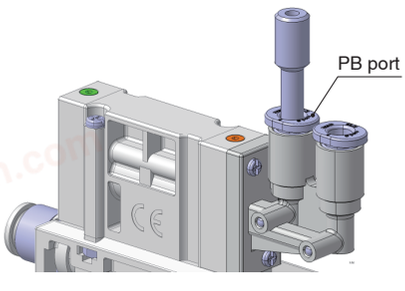


chanhvinh.com

ZK2□A Series
Quality of Supply Air

Quality of Supply Air

Supply air containing foreign matter, water, oil, condensate, etc., can cause malfunction of the supply valve and release valve. So, install air preparation equipment on the upstream side of the product (refer to the piping example below) and perform maintenance periodically to control the supply air properly.

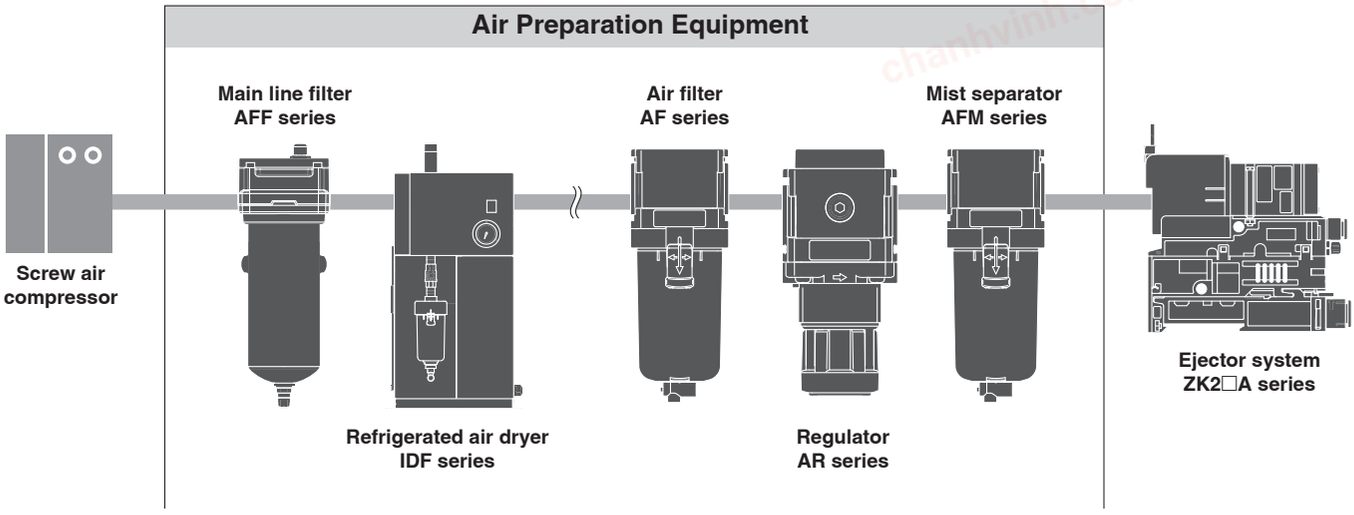

chanhvinh.com

⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of **"Caution," "Warning"** or **"Danger."** They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) [1], and other safety regulations.

⚠ Caution: **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

⚠ Warning: **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots - Safety.
etc.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.
Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.
The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.
The product herein described is basically provided for peaceful use in manufacturing industries.
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. [2] Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

2) Vacuum pads are excluded from this 1 year warranty.
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

⚠ Caution

SMC products are not intended for use as instruments for legal metrology.
Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.
Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

chanhvinh.com

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office@smc.at
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	office@smc.bg
Croatia	+385 (0)13707288	www.smc.hr	office@smc.hr
Czech Republic	+420 541424611	www.smc.cz	office@smc.cz
Denmark	+45 70252900	www.smcdk.com	smc@smcdk.com
Estonia	+372 651 0370	www.smcee.ee	info@smcee.ee
Finland	+358 207513513	www.smc.fi	smcfi@smc.fi
France	+33 (0)164761000	www.smc-france.fr	supportclient@smc-france.fr
Germany	+49 (0)61034020	www.smc.de	info@smc.de
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office@smc.hu
Ireland	+353 (0)14039000	www.smcautomation.ie	sales@smcautomation.ie
Italy	+39 03990691	www.smcitalia.it	mailbox@smcitalia.it
Latvia	+371 67817700	www.smc.lv	info@smc.lv
Lithuania	+370 5 2308118	www.smclt.lt	info@smclt.lt
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Poland	+48 222119600	www.smc.pl	office@smc.pl
Portugal	+351 214724500	www.smc.eu	apoioclientept@smc.smces.es
Romania	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Russia	+7 (812)3036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	office@smc.sk
Slovenia	+386 (0)73885412	www.smc.si	office@smc.si
Spain	+34 945184100	www.smc.eu	post@smc.smces.es
Sweden	+46 (0)86031240	www.smc.nu	smc@smc.nu
Switzerland	+41 (0)523963131	www.smc.ch	info@smc.ch
Turkey	+90 212 489 0 440	www.smcturkey.com.tr	nfo@smcturkey.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales@smc.uk
South Africa	+27 10 900 1233	www.smcza.co.za	zasales@smcza.co.za

Printing BT 00 Printed in Spain

Specifications are subject to change without prior notice and any obligation on the part of the manufacturer