chanhvinh.com

# Mini-Com Surface Mount Boxes


Part Numbers: All CBX Series Boxes

© Panduit Corp. 2018


**INSTALLATION INSTRUCTIONS**

**PN56J**


| PART NO. | RACEWAY | BREAK OUT |
|---|---|---|
| CBX1**-A | LDP3/LD3 | A |
| CBX2**-AY<br>CBX4**-AY<br>CBXF6**-AY | LDP3/LD3 | A |
| | LDP5/LD5 | B |
| CBXF12**-AY | LDP5/LD5 | A |
| | LDP10/LD10 | B |




## HOW TO MOUNT THE Mini-Com MODULES

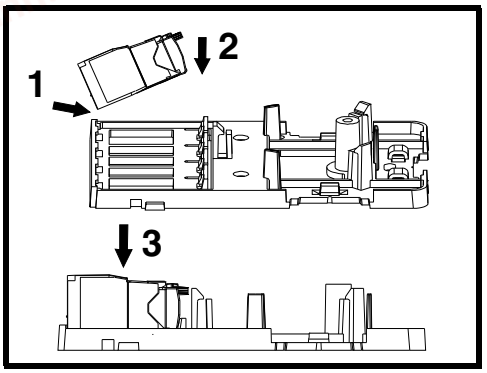



IF RUNNING CABLE THROUGH WALL, REMOVE BREAKOUT BEFORE MOUNTING TO WALL

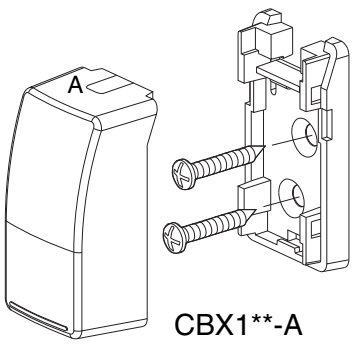



CBX1**-A

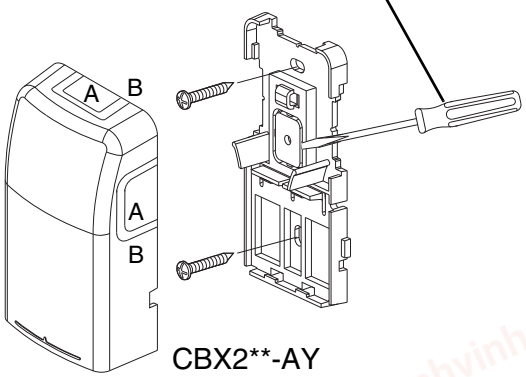



CBX2**-AY

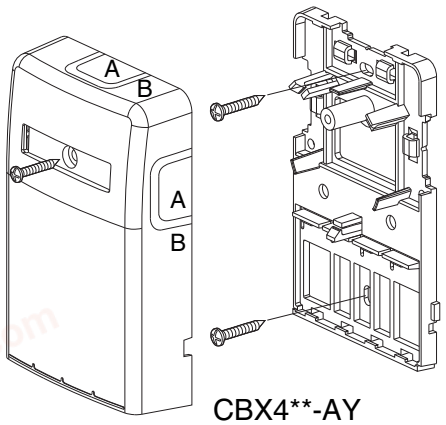


CBX4**-AY

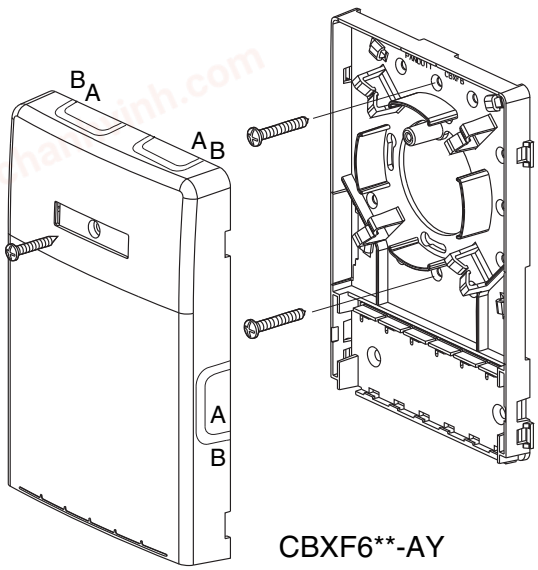


CBXF6**-AY

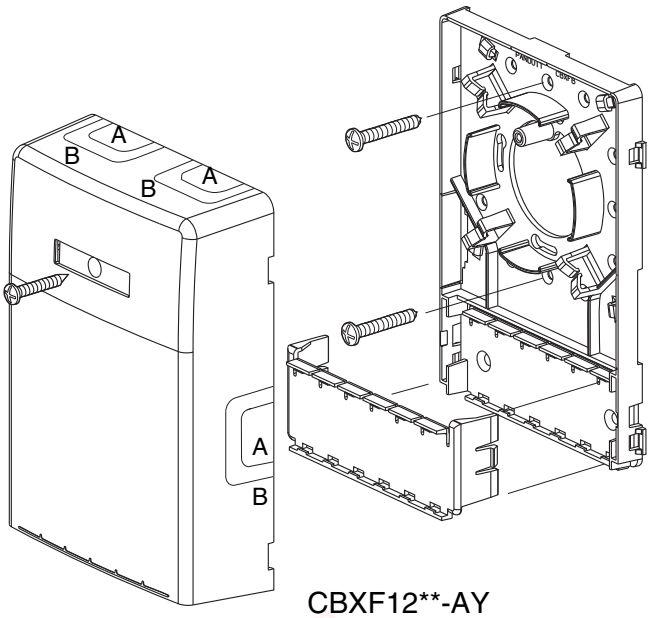


CBXF12**-AY

**Fiber Installation Tips:**

Maintain 30mm minimum bend radius.

Spool 1 meter minimum buffered fiber.

** Denotes color.

**For Instructions in Local Languages and Technical Support:**

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

**E-mail:**
techsupport@panduit.com

**Phone:**
866-405-6654