
chanhvinh.com

Contact expansion modules

up to PL c of EN ISO 13849-1
PNOZ s8

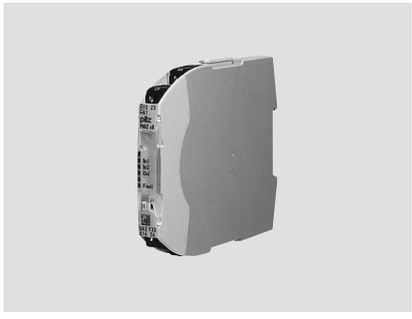

Contact expansion module for increasing the number of available contacts

Approvals

	PNOZ s8
cULus LISTED	◆
TÜV SÜDDEUTSCHLAND	◆
CCC	◆

Unit features

- Relay outputs:
  - 2 safety contacts (N/O), instantaneous
- 1 semiconductor output
- LED indicator for:
  - Input status, channel 1
  - Input status, channel 2
  - Switch status of the safety contacts
  - Error
- Plug-in connection terminals (either spring-loaded terminal or screw terminal)

Unit description


The unit meets the requirements of EN 60947-5-1, EN 60204-1 and VDE 0113-1. The contact expansion module is used to increase the number of instantaneous safety contacts available on a base unit. Base units are all safety relays with feedback loop monitoring.
The category that can be achieved in accordance with EN 954-1 and EN ISO 13849-1 depends on the category of the base unit. The contact expansion module may not exceed this.

Safety features

The unit meets the following safety requirements:

- The unit monitors its own output contacts.
- The safety function remains effective in the case of a component failure.
- Earth fault in the feedback loop: Detected, depending on the base unit that is used.
- Earth fault in the input circuit: The output relays de-energise and the safety contacts open.

Block diagram

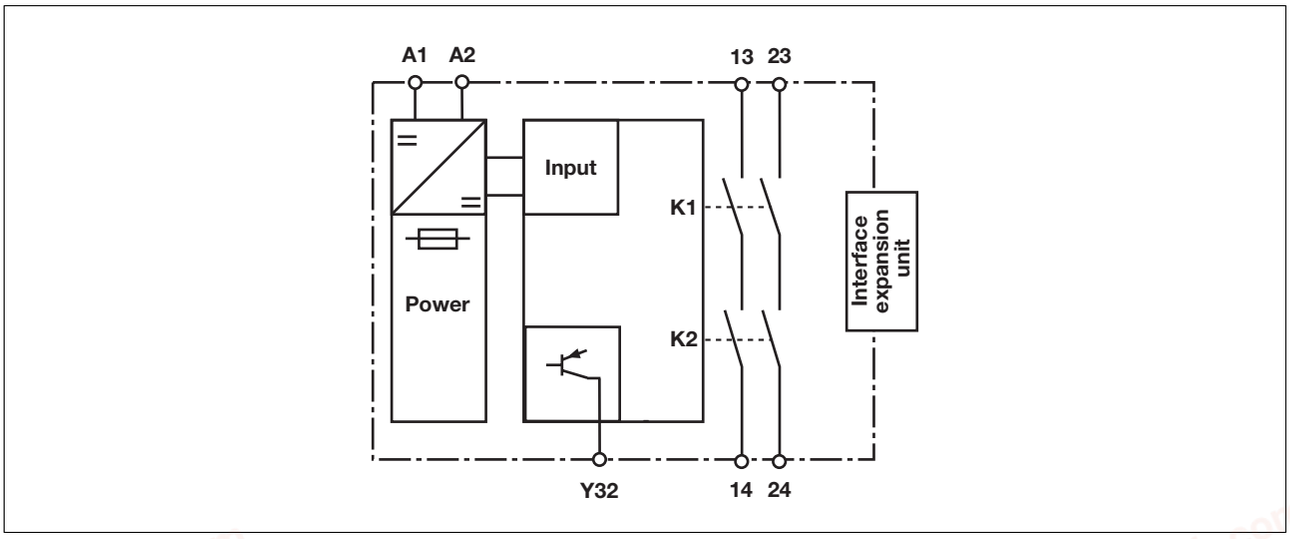

Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: pilz.gmbh@pilz.de

chanhvinh.com

Contact expansion modules


up to PL c of EN ISO 13849-1
PNOZ s8

Function description

with PNOZsigma base unit:
- Dual-channel operation via PNOZsigma connector

without PNOZsigma base unit:
- Single-channel operation: one input circuit affects the output relays

Timing diagram

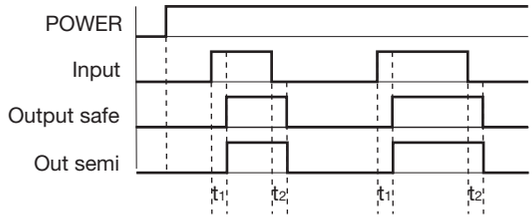

Key
- Power: Supply voltage
- Input: Input circuits A1
- Output safe: Safety contacts 13-14, 23-24
- Out semi: Semiconductor output Y32
- t_1: Switch-on delay
- t_2: Delay-on de-energisation

Wiring

Please note:
- Information given in the “Technical details” must be followed.
- Outputs 13-14, 23-24 are safety contacts.
- To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- Calculation of the max. cable runs l_{max} in the input circuit:

$$l_{max} = \frac{R_{lmax}}{R_l / km}$$

R_{lmax} = max. overall cable resistance (see technical details)
R_l /km = cable resistance/km
- Use copper wire that can withstand 60/75 °C.
- Sufficient fuse protection must be provided on all output contacts with capacitive and inductive loads.


Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: pilz.gmbh@pilz.de

chanhvinh.com




up to PL c of EN ISO 13849-1
PNOZ s8

Preparing for operation

▸ Supply voltage

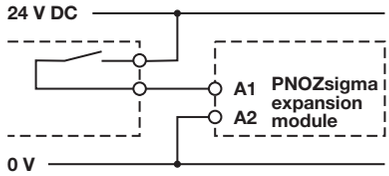Supply voltage	AC	DC
		

▸ Input circuit

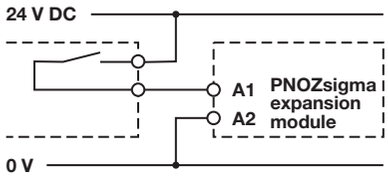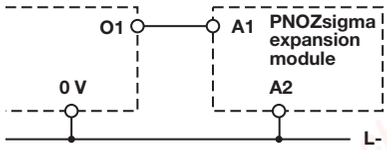
Input circuit	Single-channel	Dual-channel
Base unit: PNOZ X safety relay		
Base unit: PNOZelog safety relay Driven via semiconductor outputs (24 VDC)		

▸ Feedback loop

with PNOZsigma base unit:
The feedback loop is connected and evaluated via the connector.

without PNOZsigma base unit:
Feedback loop does not need to be monitored because the contact expansion block monitors its own output contacts.

▸ Semiconductor output

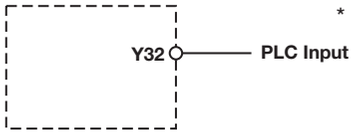

*Connect together the 0V connections on all the external power supplies

INFORMATION
If a base unit and a contact expander module from the PNOZsigma range are connected via the connector, no additional wiring is necessary.
Do not connect A1 to the contact expander module!


Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: pilz.gmbh@pilz.de

chanhvinh.com

Contact expansion modules

up to PL c of EN ISO 13849-1
PNOZ s8

Terminal configuration

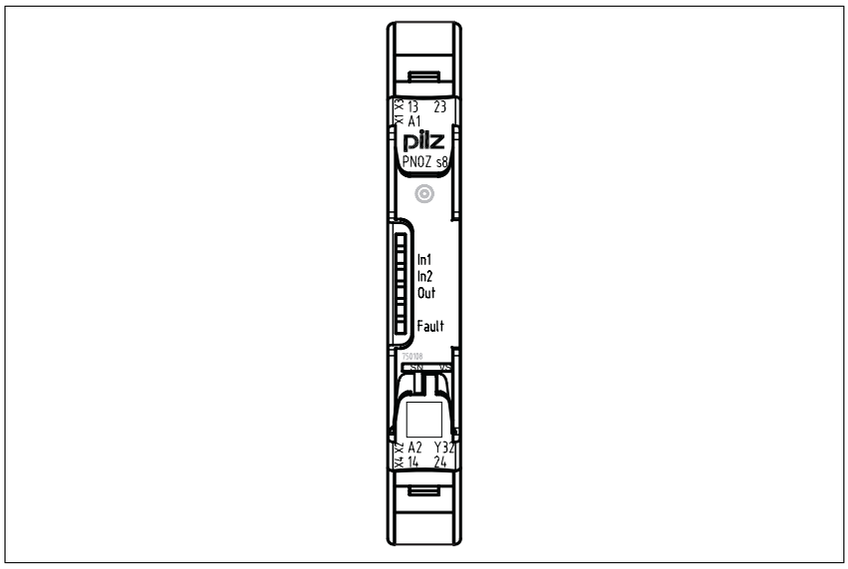

Installation


Install contact expander module without base unit:
- Ensure that the plug terminator is inserted at the side of the unit.

Connect base unit and PNOZsigma contact expander module:
- Remove the plug terminator at the side of the base unit and at the contact expander module
- Connect the base unit and the contact expander module to the supplied connector before mounting the units to the DIN rail.

Installation in control cabinet
- The safety relay should be installed in a control cabinet with a protection type of at least IP54.
- Use the notch on the rear of the unit to attach it to a DIN rail (35 mm).
- When installed vertically: Secure the unit by using a fixing element (e.g. retaining brakket or end angle).
- Push the unit upwards or downwards before lifting it from the DIN rail.

Dimensions

*with spring-loaded terminals

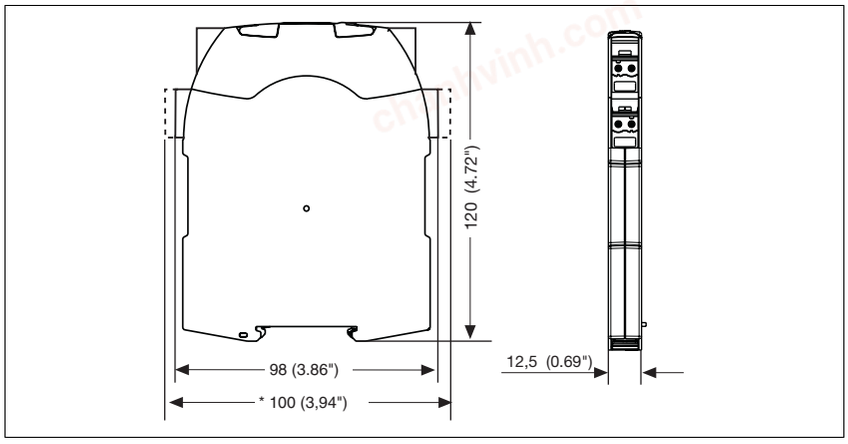

Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: pilz.gmbh@pilz.de

chanhvinh.com

Contact expansion modules

up to PL c of EN ISO 13849-1
PNOZ s8

NOTICE

This data sheet is only intended for use during configuration. For installation and operation, please refer to the operating instructions supplied with the unit.

Technical details	
Electrical data	
Supply voltage	
Supply voltage U_B DC	**24 V**
Voltage tolerance	**-20 %/+20 %**
Power consumption at U_B DC	**2.0 W**
Residual ripple DC	**20 %**
Voltage and current at	
Input circuit DC: **24.0 V**	**65.0 mA**
Number of output contacts	
Safety contacts (S) instantaneous:	**2**
Utilisation category in accordance with **EN 60947-4-1**	
Safety contacts: AC1 at **240 V**	I_{min}: **0.02 A** , I_{max}: **3.0 A** P_{max}: **720 VA**
Safety contacts: DC1 at **24 V**	I_{min}: **0.02 A** , I_{max}: **3.0 A** P_{max}: **72 W**
Utilisation category in accordance with **EN 60947-5-1**	
Safety contacts: AC15 at **230 V**	I_{max}: **1.5 A**
Safety contacts: DC13 at **24 V** (6 cycles/min)	I_{max}: **1.5 A**
Contact material	**AgSnO2**
External contact fuse protection (I_K = 1 kA) to **EN 60947-5-1**	
Blow-out fuse, quick	
Safety contacts:	**4 A**
Blow-out fuse, slow	
Safety contacts:	**2 A**
Circuit breaker 24 VAC/DC, characteristic B/C	
Safety contacts:	**2 A**
Semiconductor outputs (short circuit proof)	**24.0 V** DC, **20 mA**
Max. overall cable resistance R_{lmax} input circuits, reset circuits	
single-channel at U_B DC	**30 Ohm**
Safety-related characteristic data	
PL in accordance with **EN ISO 13849-1**	**PL c (Cat. 3)**
Category in accordance with **EN 954-1**	**Cat. 3**
SIL CL in accordance with **EN IEC 62061**	**SIL CL 2**
PFH in accordance with **EN IEC 62061**	**2.00E-07**
SIL in accordance with **IEC 61511**	**SIL 2**
PFD in accordance with **IEC 61511**	**6.35E-03**
t_M in years	**20**
Times	
Switch-on delay	
with automatic reset after power on typ.	**100 ms**
with automatic reset after power on max.	**150 ms**
Delay-on de-energisation	
with E-STOP typ.	**30 ms**
with E-STOP max.	**40 ms**
with power failure typ.	**30 ms**
with power failure max.	**40 ms**

Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: pilz.gmbh@pilz.de

chanhvinh.com

Contact expansion modules

up to PL c of EN ISO 13849-1
PNOZ s8

Environmental data	
EMC	**EN 60947-5-1**, **EN 61000-6-2**, **EN 61000-6-4**
Vibration to **EN 60068-2-6**	
Frequency	**10 - 55 Hz**
Amplitude	**0.35 mm**
Climatic suitability	**EN 60068-2-78**
Airgap creepage in accordance with **EN 60947-1**	
Pollution degree	**2**
Overvoltage category	**III**
Rated insulation voltage	**250 V**
Rated impulse withstand voltage	**4.00 kV**
Ambient temperature	**-10 - 55 °C**
Storage temperature	**-40 - 85 °C**
Protection type	
Mounting (e.g. cabinet)	**IP54**
Housing	**IP40**
Terminals	**IP20**
Mechanical data	
Housing material	
Housing	**PC**
Front	**PC**
Cross section of external conductors with screw terminals	
1 core flexible	**0.25 - 2.50 mm² , 24 - 12 AWG** No. 750108
2 core, same cross section, flexible:	
with crimp connectors, without insulating sleeve	**0.25 - 1.00 mm² , 24 - 16 AWG** No. 750108
without crimp connectors or with TWIN crimp connectors	**0.20 - 1.50 mm² , 24 - 16 AWG** No. 750108
Torque setting with screw terminals	**0.50 Nm** No. 750108
Cross section of external conductors with spring-loaded terminals: Flexible with/without crimp connectors	**0.20 - 2.50 mm² , 24 - 12 AWG** No. 751108
Spring-loaded terminals: Terminal points per connection	**2** No. 751108
Stripping length	**9 mm** No. 751108
Dimensions	
Height	**102.0 mm** No. 751108 **98.0 mm** No. 750108
Width	**12.5 mm**
Depth	**120.0 mm**
Weight	**105 g**

No. stands for order number.

All the units used within a safety function must be considered when calculating the safety characteristic data.

The standards current on **2006-04** apply.

Conventional thermal current	
I_{th} (A) at U_B DC	
1 contact	**3.00 A**
2 contacts	**3.00 A**

Order reference

Type	Features		Terminals	Order no.
PNOZ s8		24 VDC	With screw terminal	750 108
PNOZ s8 C		24 VDC	With spring-loaded terminal	751 108

Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: pilz.gmbh@pilz.de